



A12 pin on the 2764 EPROM is used to select which 4KB bank is active.
 By default (J1 switch is open) A12 is pulled high and upper 4KB bank is active.
 If J1 switch is closed then A12 is pulled low and lower 4KB bank is active.

www.youtube.com/@Brfff

Brett Hallen

Sheet: /

File: Osborne_2732_to_2764.kicad_sch

Title: 2764 to 2732 Adapator

Size: A5

Date: 21-Apr-2025

Rev: B

KiCad E.D.A. 9.0.0

Id: 1/1