

Interrupt line is not currently used
in NMEA2000 lib, so you do not need this.

If Arduino is standalone
and not connected to PC
with USB, connect this
to external 12 V PSU
or connect to NMEA2000 bus
power.

