

## Software Serial Buffer Expansion

The change for software serial ports require a simple modification of the file:

<base Arduino folder>\hardware\arduino\avr\libraries\SoftwareSerial\SoftwareSerial.h

### Change:

```
__define _SS_MAX_RX_BUFF 64 // RX buffer size
```

### To:

```
__define _SS_MAX_RX_BUFF 256 // RX buffer size
```

## Hardware Serial Buffer Expansion

The change for hardware serial ports require a simple modification of the file:

<base Arduino folder>\hardware\arduino\avr\cores\arduino\HardwareSerial.h

### Change:

```
__define SERIAL_TX_BUFFER_SIZE 64  
__define SERIAL_RX_BUFFER_SIZE 64
```

### To:

```
__define SERIAL_TX_BUFFER_SIZE 256  
__define SERIAL_RX_BUFFER_SIZE 256
```