

Polara

iN/iNS/iDS 2-Wire Polara FS Android Application Manual

350-076 Rev. E

12/20/2022

Contents

1.	Using the Polara Field Service App for Android to Change iCCU-X Settings.....	4
1.1	Wi-Fi Connection	4
1.2	Changing the Password.....	6
1.3	Advanced Communications Settings.....	7
1.4	Channel and Phase Setup.....	8
1.4.1	Ped Interval Source Selection.....	8
1.4.2	View Interval Status	10
1.4.3	Advanced iCCU Settings – Channel Assignment	11
1.4.4	Advanced iCCU Settings – Ped Call Connection Setup	12
1.5	Assigning iN2 PBSs to Phases	13
1.6	Setting the iCCU Time/Date, SNTP & DST Settings.....	14
1.7	Setting Ethernet Configuration.....	15
1.8	General Purpose Input and Preemption (iCCU-S Only)	16
1.9	Ped Isolator	17
2.	Using the Polara Field Service App for iOS to Change iN2 PBS Settings.....	18
2.1	Bluetooth Connection	18
2.1.1	Connection Example: Samsung S7 running Android 7.0	18
2.1.2	Connection Example: Google Pixel running Android 9.0	19
2.1.3	Connection Example: Nvidia Shield K1 Tablet running Android 7.0	20
2.2	PBS Configuration Options	21
2.3	Button Counters	24
2.4	Quiet Time	25
2.5	iDetect Settings (iDS units only)	26
2.5.1	Detection Profile	26
2.5.2	Range.....	26
2.5.3	Extended Push.....	26
2.5.4	Minimum Wave Time	27
2.5.5	Rain Lockout.....	27
2.6	Wireless Sync	28
2.7	PedApp Settings	29
2.8	Preparing Audio Files	30
2.8.1	Opening .ogg files as an e-mail attachment.....	31
2.8.2	Opening .ogg files via Android File System	32
2.8.3	Browsing for .ogg files via Polara FS App	33
2.8.4	Audio Library	34
2.9	Updating Audio Files.....	35
2.10	Extract Audio Files	37
3.	Using the Polara Field Service App to Access the Health Log.....	38
3.1	Accessing the Health Log.....	38
4.	Getting Button Info and Diagnostics	39



5. Using the Polara Field Service App for Firmware Updates 40

5.1 Checking for the Latest Firmware40

5.2 Performing a Firmware Update41

1. Using the Polara Field Service App for Android to Change iCCU-X Settings

All of the available setup and maintenance procedures may be performed using a compatible Android device. The device must have Android version 5.0 (Lollipop) or higher.

We have tested the Polara FS app on a number of Android devices, but we cannot guarantee that it will function properly on all devices. We have tested the app on a number of Samsung phones including the Galaxy S5, Galaxy S7 and Galaxy S8, Galaxy Note 4, Google Pixel (1), LG K20+, LG V20. A small number of devices we have tested have unsupported Bluetooth capability and are unable to connect via BLE: Motorola Moto E4, Kyocera Duraforce XD.

We have also tested the app on a few Tablet devices such as the NVidia Shield K1 and Asus ZenPad S.


The app is not compatible with any Amazon Fire devices.

The Polara Field Service application is available free in the Google Play Store. Search for Polara and locate the app, then tap the install button.


The App supports Bluetooth connection to any PBS, and Wi-Fi connection to the iCCU-X. All PBS and iCCU-X configuration options are accessible using either connection. File uploads containing firmware or audio must be performed by connecting directly to the target unit. Skip to section 2 for instructions on connecting via Bluetooth.

1.1 Wi-Fi Connection

While a Bluetooth connection will allow complete system configuration access, a Wi-Fi connection is also available. Before connection is possible, Wi-Fi must be enabled on the iCCU-X. This is done by pressing the SELECT button on the iCCU-X front panel while the main start-up screen is visible. The display should confirm that Wi-Fi is enabled.

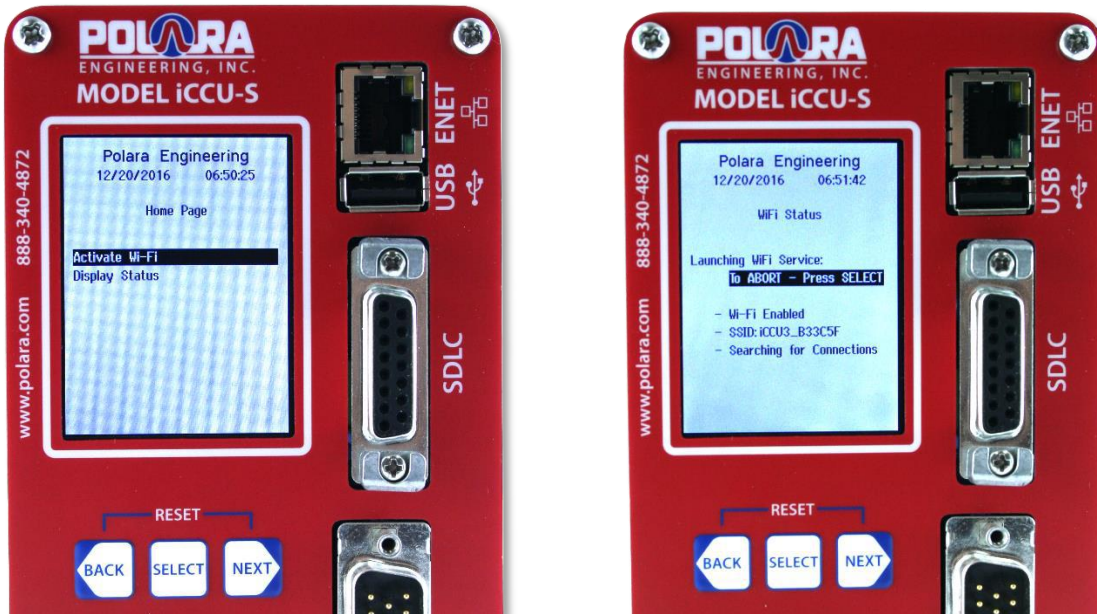


Go to Settings on your Android device and tap Wi-Fi. Locate the Polara iCCU-X in the list of available devices. Tap the name to select (SSID indicated on LCD of iCCU-X), then enter the Wi-Fi password as requested. The Wi-Fi password is "DEFAULT1" (all caps, no quotes). After the connection is made, you may exit Settings and start the Polara Field Service (FS) App. The start page will display a list of available devices. Tap iCCU at the top of the list and enter the password (factory default is 1234), then tap "Connect". You will then be presented with the Main Menu.

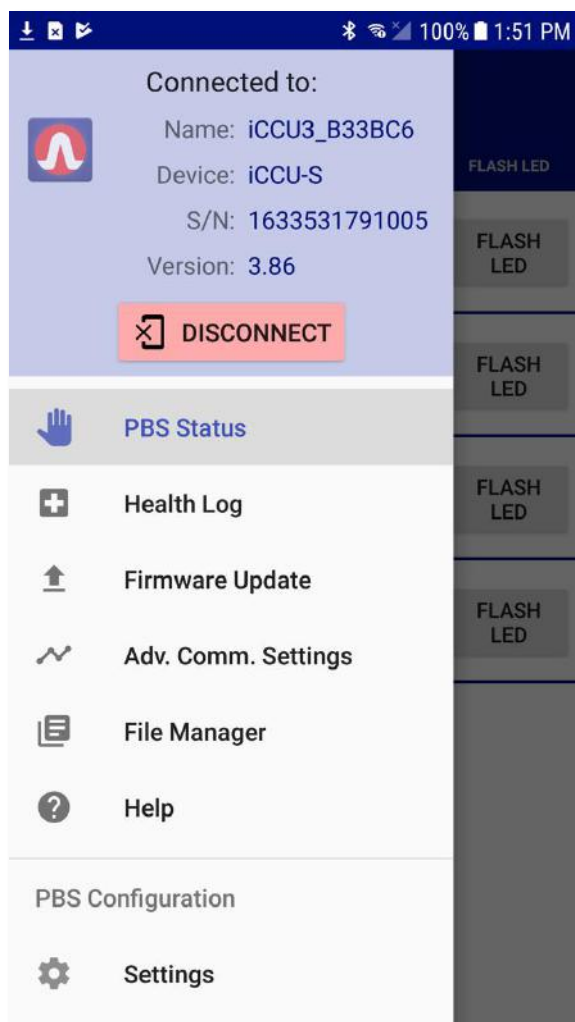

1.2 Changing the Password

To change the password, scroll down on the menu under the iCCU Configuration category and choose Password. Enter in the appropriate fields: the current password, new password, and retype new password. Then tap the Save button in the upper right corner of the screen. This will update the password in the iCCU. Once the password has been updated, the screen will clear. Open the main menu (via the three lines in the upper left corner or swipe your finger in from the left of the screen), then choose another task to exit the password screen.

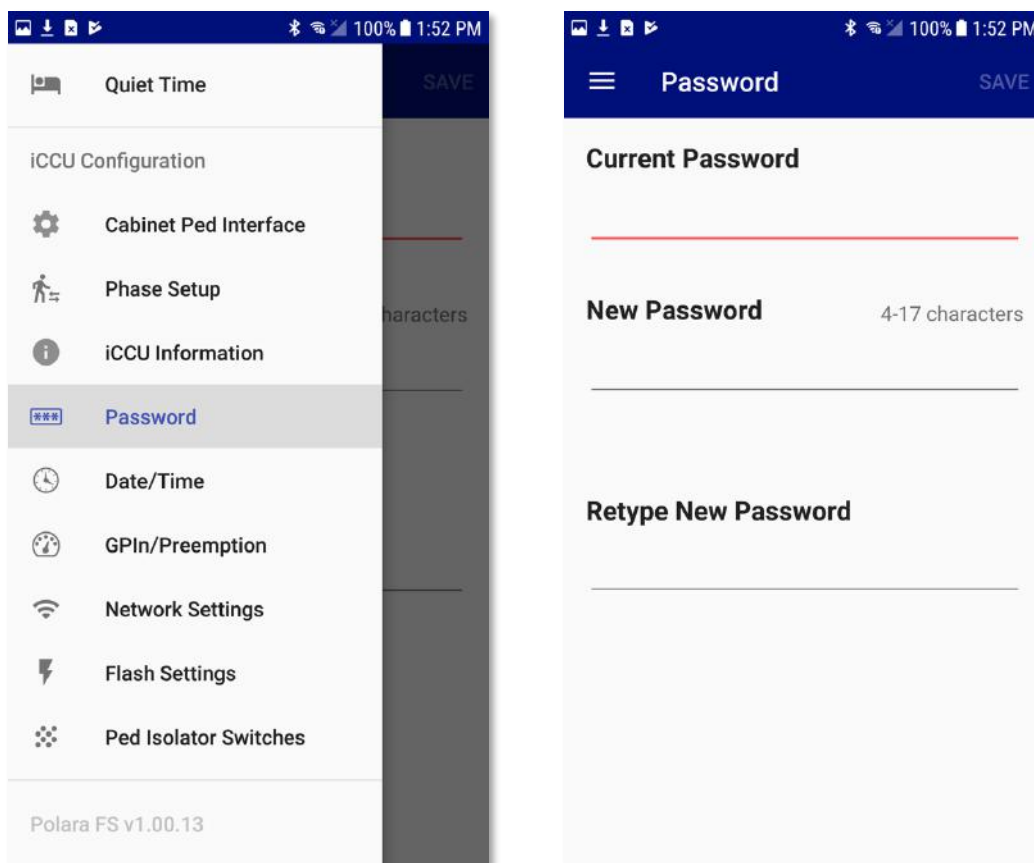

1.3 Advanced Communications Settings

All iN2 PBSs connected to the interconnect board communicate with the iCCU via the field wires, using one of three communication channels A, B, or C.


During initial startup, the iCCU will operate in Channel B by default. The first time an iN2 PBS powers up, it will auto-calibrate by finding the communication channel the iCCU is operating on, and then adjust its signal until it establishes communication with the iCCU. This process typically takes 1-3 minutes. Once calibrated, each iN2 will save its communications settings in non-volatile memory and use them during any subsequent restart. Once a PBS' communications settings are calibrated and it makes a successful connection to the iCCU, it will flash its pilot light in a four-flash pattern. This four-flash pattern will continue until the PBS is assigned to a phase that is receiving pedestrian Walk, Don't Walk or Clearance intervals.

If a calibrated PBS loses connection to the iCCU for an extended period of time or if it cannot connect to the iCCU at start up, the PBS will restart itself in come up in an un-calibrated mode. It will search for the iCCU on each of the communication channels and calibrate itself once it locates the iCCU's operating channel. If no iCCU is available, the PBS will continue to search until it finds the iCCU. If one or more PBSs cannot connect to the iCCU during the calibration process (two flash pattern continues), the communication channel on the iCCU should be changed.

To change the Communications Channel of the iCCU, connect to the iCCU and use the Advanced Communications Settings menu to select the desired channel and press "Save". Before changing the Communications Channel, the iCCU will signal all connected buttons to disconnect, restart, and recalibrate so the automatic recalibration function will happen automatically.

Note: Channel C requires iCCU v3.91 and all iN2s must have v4.11 or later and all iNS/iDS units must have v4.0.11 or later. If any connected PBS has older firmware when the iCCU is on Channel C, the units will remain in 2-flash mode and will not establish communication with the iCCU until their firmware is updated or the channel is changed.

If after changing Communication Channels, any of the following issues are present: iN2 PBSs (one or more) still cannot connect to the iCCU; an iN2 PBS is connected but there are communication problems when attempting to read remote health logs (or trying to set parameters to all PBSs), please contact Polara technical support for further assistance.

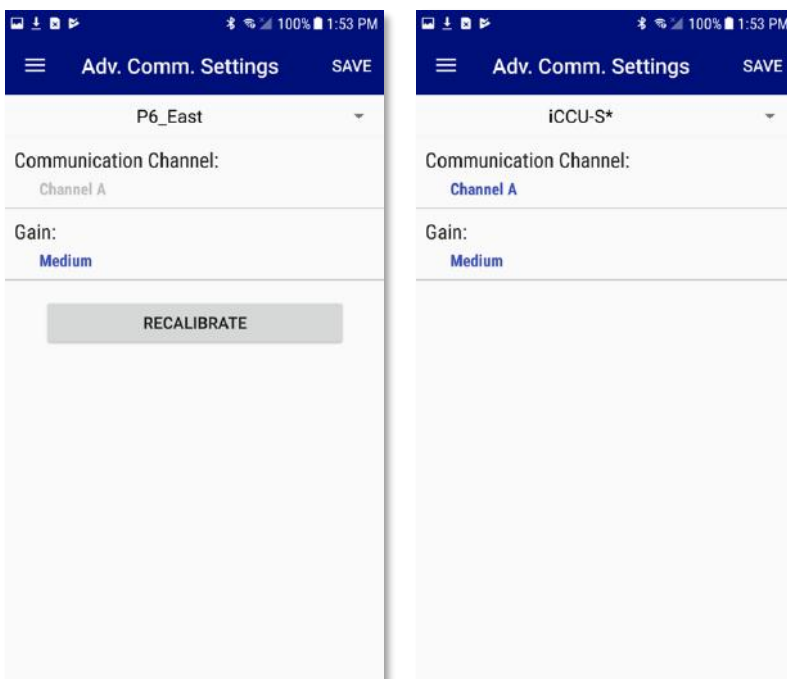

Because of the various types and states of field wiring, communication may not work in all field wiring conditions, so Polara cannot guarantee an iN2 system will work on all intersections. If the above steps fail in establishing reliable communication between a PBS and iCCU, a 3-Wire system is the only option.

Polara recommends the use of a 12/2 IMSA 50-2 cable.

To change an iN2 PBS to operate as an iN3 PBS (Ped-Head Based System), please see the iN3 Quick Start Guide.

1.4 Channel and Phase Setup


The iCCU-S can obtain Ped interval information by monitoring the outputs of the load switches (via the 50-pin harness' Cable #4) or by monitoring the SDLC bus. The iCCU-C obtains Ped interval information via the C4 cable adapter and has automatic source selection. Follow the appropriate setup steps below, depending on which iCCU-X model you have installed, and how it is wired in the cabinet. The iCCU-S supports four phases. The system identifies four channels, named A, B, C, and D. Each pedestrian phase will be associated with a channel.

1.4.1 Ped Interval Source Selection

Begin by going to the iCCU Configuration section in the Main Menu and selecting the Cabinet Ped Interface menu item.

If Using Cable #4 of the 50-pin harness for Load Switch Monitoring:

Select the 4 Channel option. Then tap Save in the upper-right of the screen.

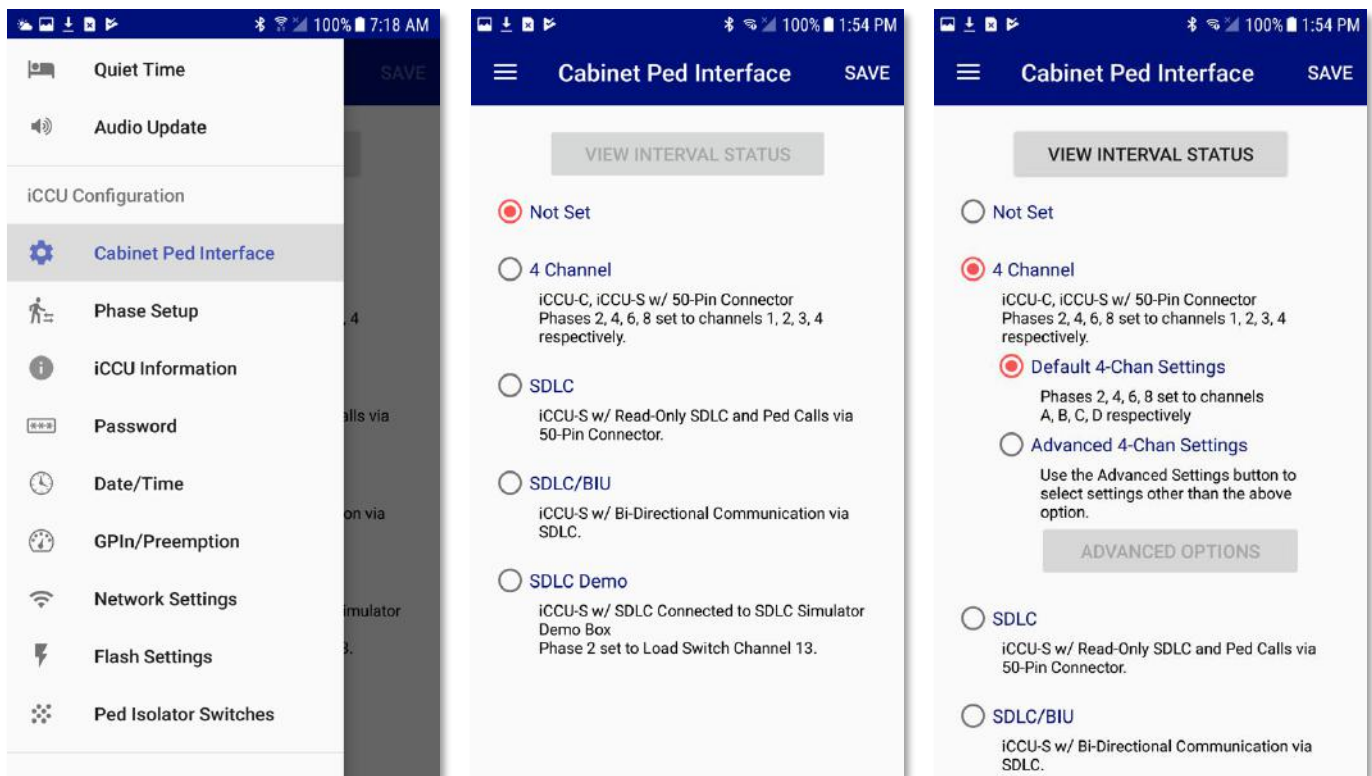

If using the iCCU-C and the cabinet input file is wired differently than the Cal-Trans standard such that the ped call wiring in the backplane is different than the C4 connection, select the Advanced 4-Chan Settings option and tap the Advanced Options button to change the configuration of the input file phase mapping.

Proceed to Assigning iN2 PBSs to Phases in section 1.5.

If using an SDLC cable to monitor Ped Intervals only:

Typically, there are two options for load switch configurations in cabinets using channels 9 through 12 or channels 13 through 16 for PED load switches. Select the appropriate SDLC option based on the load switch setup in your cabinet. Tap the save button in the upper right corner to store the setting, then tap the back button to return to the previous screen and proceed to Assigning iN2 PBSs to Phases in section 1.5.

If your setup differs from one of these options, select either of the SDLC options, tap the Save button in the upper right corner of the screen, and then tap the Advanced Settings button at the bottom of the screen to modify the setup for your specific needs.

If using an SDLC cable in BIU Mode (no 50-pin harness):



The NEMA TS 2 2003 specification defines SDLC command and response frames for 4 detector BIUs. The iCCU-S can be configured to operate as any one of these four BIUs for the purpose of placing pedestrian calls to the traffic controller. Typically, there are 4 pedestrian phases (2, 4, 6 and 8), however the iCCU-S can be configured for up to 8 pedestrian phases. By default, detector BIUs are used to place vehicle calls in the traffic controller. In order to use the iCCU-S configured as a detector BIU, the traffic controller needs to be programmed to map the vehicle call inputs to pedestrian call inputs. The process to do this varies by traffic controller. Consult your traffic controller manual or manufacturer for instructions on how to do this.

Each detector BIU communicates call status for up to 16 detector inputs. When configured as a detector BIU, the iCCU-S uses the first 8 detectors. See the table below for detector input numbers and how they need to map to pedestrian inputs.

BIU#1	BIU#2	BIU#3	BIU#4	Pedestrian Mapping
Det Input 1	Det Input 17	Det Input 33	Det Input 49	Ped Input 2
Det Input 2	Det Input 18	Det Input 34	Det Input 50	Ped Input 4
Det Input 3	Det Input 19	Det Input 35	Det Input 51	Ped Input 6
Det Input 4	Det Input 20	Det Input 36	Det Input 52	Ped Input 8
Det Input 5	Det Input 21	Det Input 37	Det Input 53	Ped Input 1
Det Input 6	Det Input 22	Det Input 38	Det Input 54	Ped Input 3
Det Input 7	Det Input 23	Det Input 39	Det Input 55	Ped Input 5
Det Input 8	Det Input 24	Det Input 40	Det Input 56	Ped Input 7

Note: A NEMA TS 2 traffic controller can only communicate with a single BIU at each SDLC address. If the iCCU-S is configured to a BIU number that already has a BIU device with the same number (address), then the other BIU device with the matching number needs to be disconnected.

To configure the iCCU-S as a BIU, tap the SDLC/BIU option, then select an available detector BIU number and the proper pedestrian load switch configuration for the cabinet. If the pedestrian load switch configuration is not listed, or more than 4 pedestrian phases

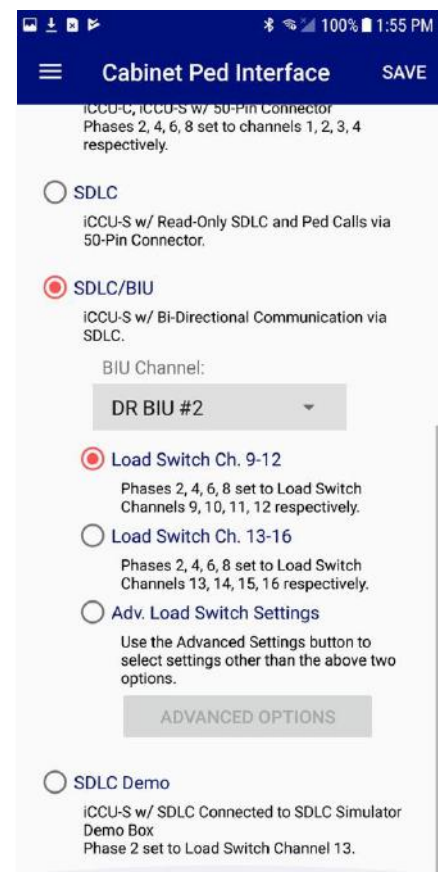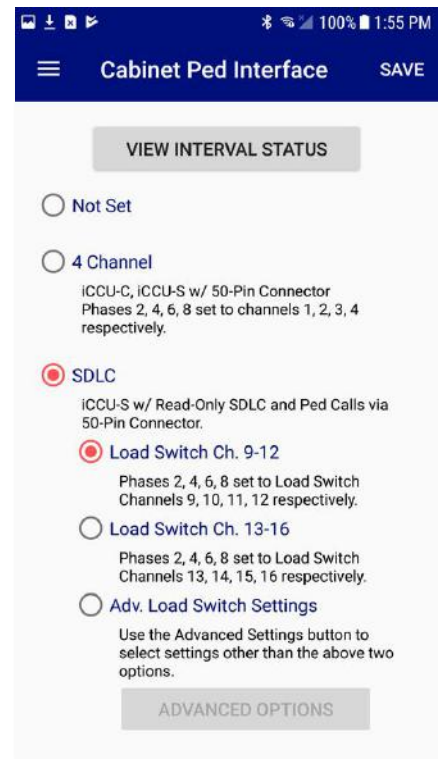

are needed, select the “Adv. Load Switch Settings option, then tap the Advanced Options button and assign the appropriate phases to load switch channels.



Configure the traffic controller to enable the detector BIU number selected. Program the traffic controller to remap the detector inputs to Ped inputs according to the table above. Consult your traffic controller manual or manufacturer for instruction on how to do this.

1.4.2 View Interval Status

While selecting the Cabinet Ped Interface type, you can view the status of the interval information coming into the iCCU unit by tapping on the View Interval Status button. In 4-Channel mode, the interval information will be displayed for the 4 Channels wired to the load switches (or C4 connector for iCCU-C). When in SDLC mode, all 16 SDLC channels will be displayed showing the interval information. This can be useful to determine which Load Switch setting is desired (9-12 or 13-16) or if the advanced options are necessary.

Note: In 4-Channel mode on iCCU-S, the status displays the information received directly from the load switch. If the Walk signal is on, the status will be displayed as Walk, and in Don't Walk the status will show as Don't Walk. In the flashing Don't Walk interval, the status will toggle between Don't Walk and Off matching the Ped Head state.


If no SDLC information is being received by the iCCU-S, the notice will be displayed with that information. Check the SDLC cable to ensure a good connection.

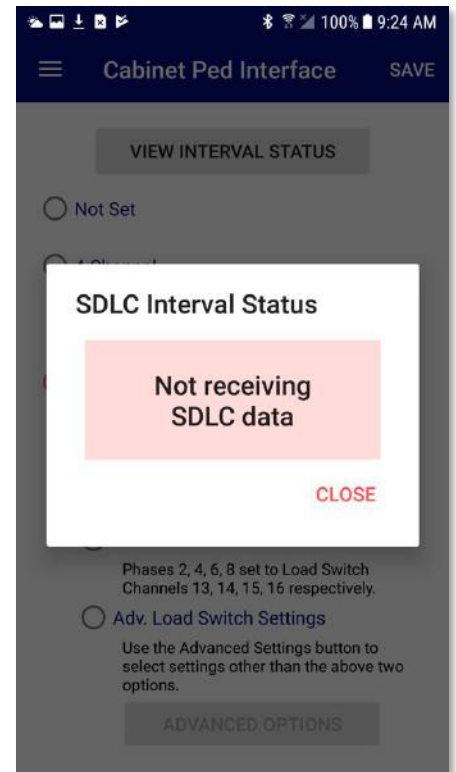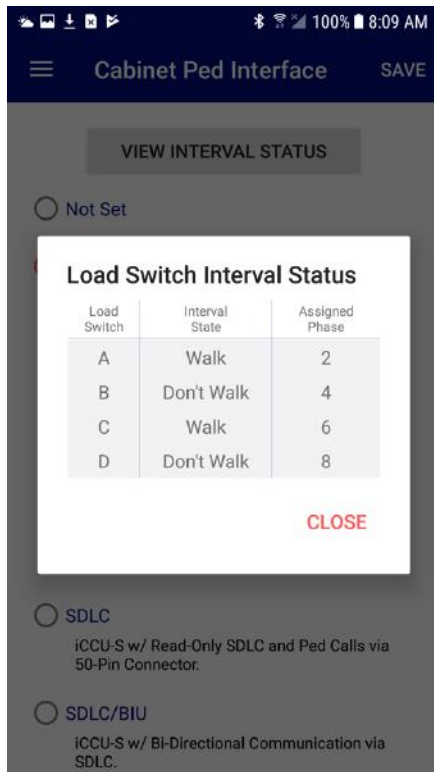


1.4.3 Advanced iCCU Settings – Channel Assignment

Associate phases with the SDLC PED channels that should be monitored. Refer to the traffic controller's user manual and configuration to determine which SDLC channels correspond to which Ped phases.

To associate an SDLC PED channel with a phase, tap the channel and choose a phase from the popup dialog and tap OK. Continue to assign the appropriate phases to all channels in use. When finished, select Save in the upper-right area of the screen.

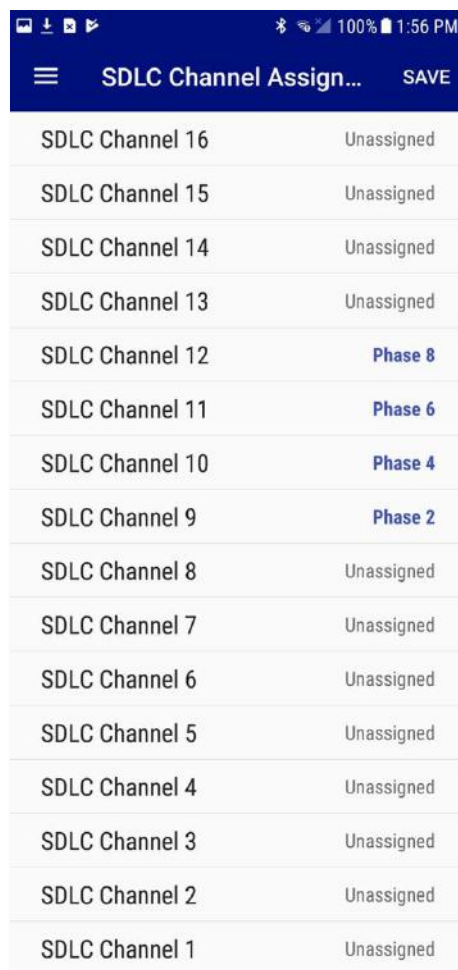

SDLC Channel Assign...		SAVE
SDLC Channel 16	Unassigned	
SDLC Channel 15	Unassigned	
SDLC Channel 14	Unassigned	
SDLC Channel 13	Unassigned	
SDLC Channel 12	Phase 8	
SDLC Channel 11	Phase 6	
SDLC Channel 10	Phase 4	
SDLC Channel 9	Phase 2	
SDLC Channel 8	Unassigned	
SDLC Channel 7	Unassigned	
SDLC Channel 6	Unassigned	
SDLC Channel 5	Unassigned	
SDLC Channel 4	Unassigned	
SDLC Channel 3	Unassigned	
SDLC Channel 2	Unassigned	
SDLC Channel 1	Unassigned	

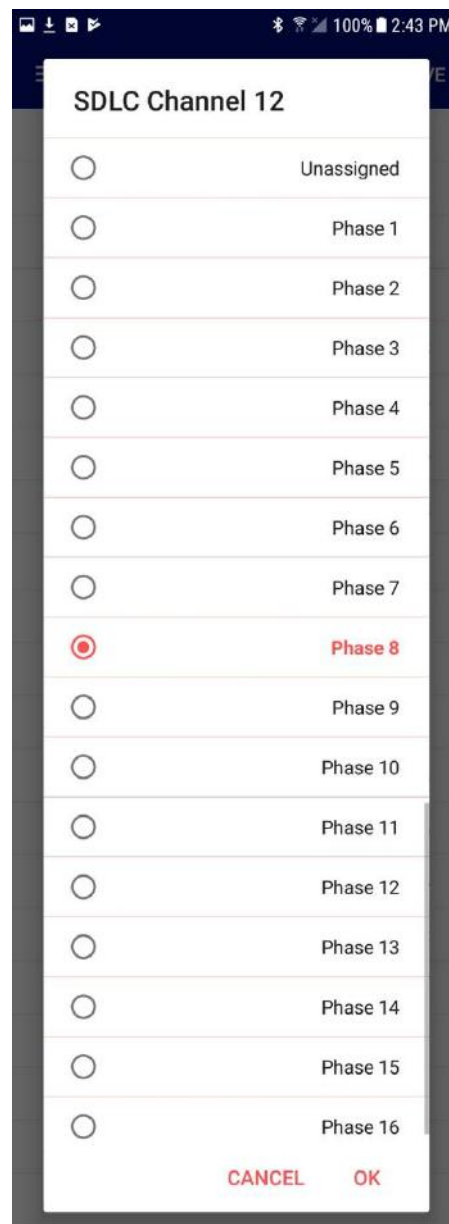

SDLC Channel 12


<input type="radio"/>	Unassigned
<input type="radio"/>	Phase 1
<input type="radio"/>	Phase 2
<input type="radio"/>	Phase 3
<input type="radio"/>	Phase 4
<input type="radio"/>	Phase 5
<input type="radio"/>	Phase 6
<input type="radio"/>	Phase 7
<input checked="" type="radio"/>	Phase 8
<input type="radio"/>	Phase 9
<input type="radio"/>	Phase 10
<input type="radio"/>	Phase 11
<input type="radio"/>	Phase 12
<input type="radio"/>	Phase 13
<input type="radio"/>	Phase 14
<input type="radio"/>	Phase 15
<input type="radio"/>	Phase 16

CANCEL OK

Proceed to Ped Call Connection Setup on the next page.

1.4.4 Advanced iCCU Settings – Ped Call Connection Setup

On Cable #2, the wire for channel A (Brown/White), needs to be wired to place a call for the same phase, in this case phase 2. Note, that test calls can be placed from this screen by pressing the Test button to the right of each input.


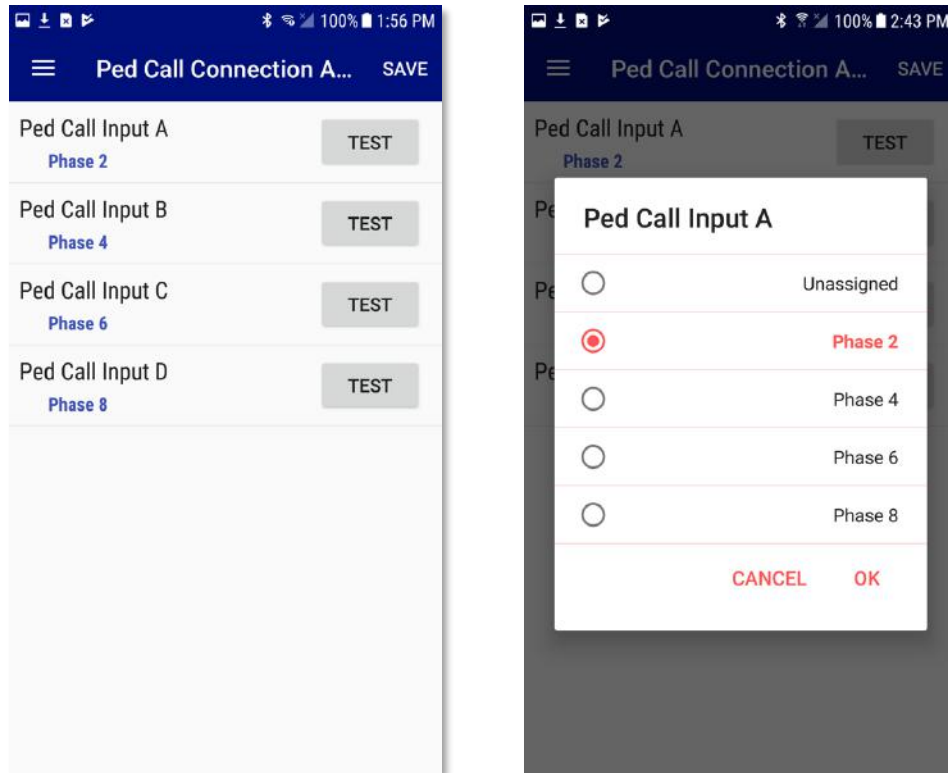


To associate a Ped Call Input with a phase, tap the item on the screen and choose a phase from the popup dialog. Then tap OK. Continue to assign the appropriate phases to all channels in use. When finished, tap Save in the upper-right area of the screen and you will be returned to the Cabinet Ped Interface selection screen.

With the Channel/Phase assignments configured, iN2 PBSs can now be assigned to phases.

1.5 Assigning iN2 PBSs to Phases

Following the Cabinet Ped Interface Setup process, each connected iN2 PBS must be named and be assigned a phase. At this point, all buttons need to have been installed and powered. From the iCCU Configuration section of the Main Menu, select "Phase Setup". It is suggested to name the PBS with something that identifies the installed location and the phase (must be 4 to 15 characters). If unsure of the location of a PBS, press Flash LED button to the right of the name to cause the PBS' red LED to flash briefly. Assign the appropriate Phase by tapping the white box below the Flash LED button and selecting the phase in which to assign the PBS. When finished naming all buttons and assigning phases, select Save on the upper-right of the screen.

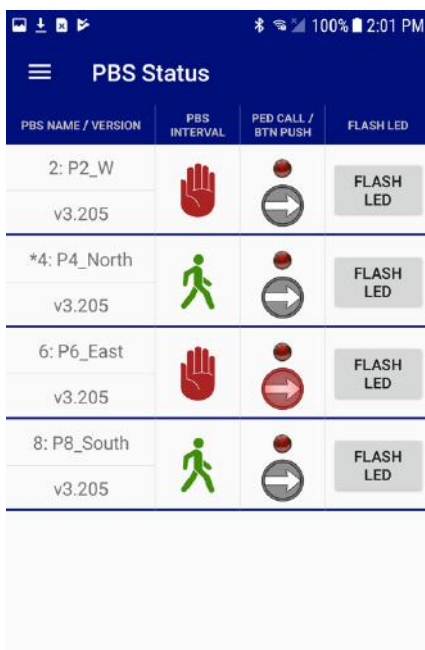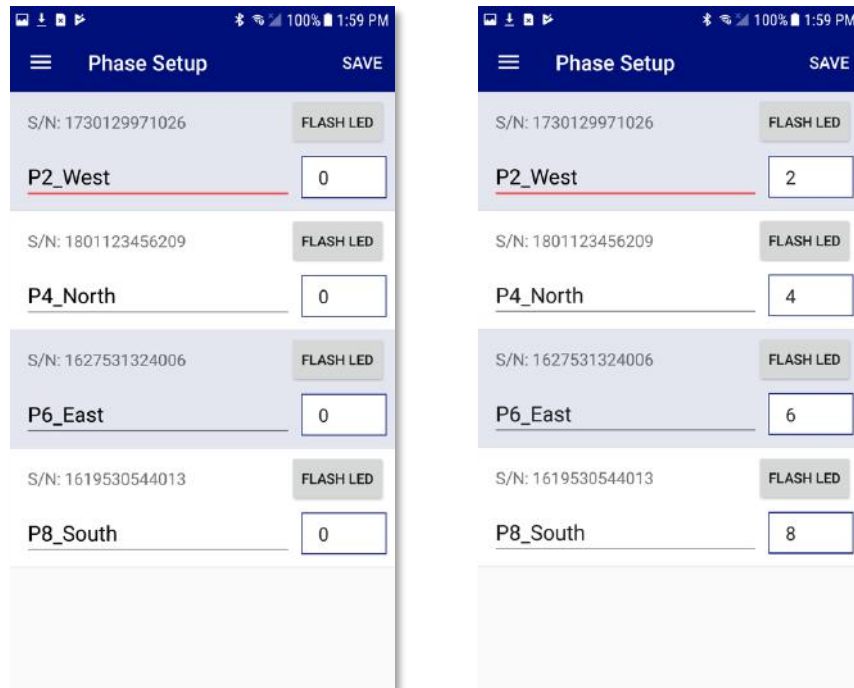

After these steps, the system should be fully operational. The steps leading up to this point must have been completed without error to ensure that the PBS walk indications are matched to the correct crosswalks. Walk the intersection and verify that each PBS is linked to the correct phase.

From the main menu, tap the PBS Status button to see a screen with all iN2 units and their status.

On this PBS Status screen, the information is shown live from what is occurring in the intersection. There is a 2-5 second delay on the information.

Tapping on the Flash LED button will flash the pilot LED on the selected PBS for a few seconds.

1.6 Setting the iCCU Time/Date, SNTP & DST Settings

In the iCCU Configuration section of the Main Menu, select the Date/Time menu option. When the radio button is set to Synchronize with Android device, the time on the iCCU will be set to the time currently detected on your Android device. Tap the three dots on the upper right corner of the screen and select Set Time.


If you wish to specify a specific date/time that is different from your device's time, select the Manually Set Time option and set the desired time. Tap the three dots on the upper right corner of the screen, then select Set Time to apply the changes.



Note that setting the time on the iCCU also sends the updated time to any iN2 PBSS currently connected to the network. Also, when new iN2 units establish a connection with the iCCU, the time is synchronized with the iN2 units automatically.

The iCCU has the ability to connect to a network time server to periodically obtain the current time. The time server cannot be a device on the open internet but must be a local server connected to the same network as the iCCU. Check with your IT Administrator for the appropriate IP Addresses to use. The iCCU uses the industry standard port 123 (UDP) for SNTP. The Refresh Interval setting adjusts how often (in hours) the iCCU will ask the server for the updated time. Select the appropriate time zone for the area. If daylight savings time is used in the selected time zone, then the daylight savings time switch will automatically be set to the appropriate state.

Click the Test button next to the SNTP server to test and the server will be queried for the current time. If successful, a dialog will appear with the current time in GMT and the time converted using the selected Time Zone and DST settings.

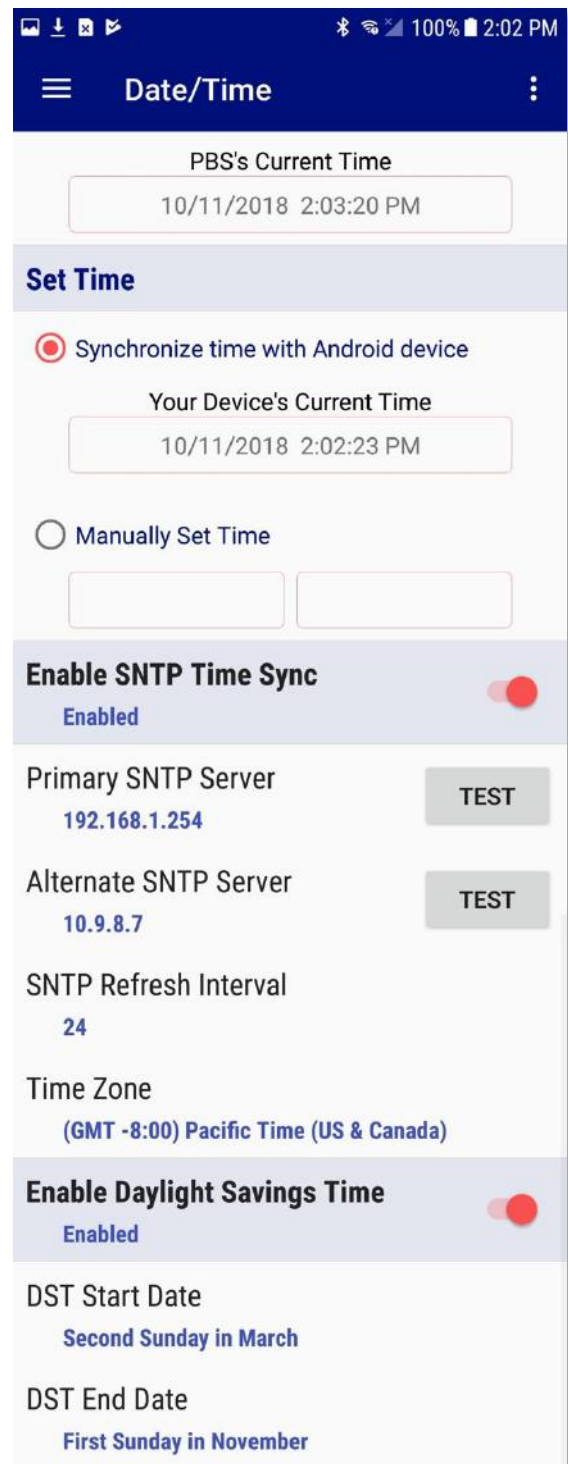

You can manually enable and disable the daylight savings time adjustment and can also modify the date that DST starts and ends.

Tap the three dots on the upper right corner of the screen, then tap Save Settings to save the changes made to SNTP and DST settings.

1.7 Setting Ethernet Configuration

From the iCCU Configuration screen, select the Network icon at the bottom of the screen. Enter the desired IP, Subnet Mask, Gateway, and Port. Choose Save from the upper-right of the screen.

In order to apply the settings to the iCCU, the unit must be restarted before the IP Address changes will take effect.

The iCCU has the ability to respond to SNMP queries for basic information and send out SNMP Trap notifications when critical actions occur within the unit.

Set appropriate information in the Name/Location/Contact fields for display in your SNTP manager to identify the unit. Enter IP Address of up to three SNTP managers to receive the SNTP traps. Tap the Save button to save the settings. After saving the settings, tap the Send Test Trap button to have the iCCU send a test trap to each IP in the list.

In order to receive and manage the reception of trap notifications you will need an SNMP network management system. Most SNMP managers have the ability to monitor for traps and there are many free dedicated trap receiver applications available for download online. Traps are sent to port 162 on your PC and this port will need to be unblocked from your firewall. Once you have your network management system installed, you can configure it to send you automatic email notifications any time a trap is received.

The SNMP MIB for the iCCU is available for download on Polara.com website under the iCCU/iN2 Installation downloads section.

The screenshot shows the 'Network Settings' screen with a blue header bar containing a menu icon, the title 'Network Settings', and a 'SAVE' button. The status bar at the top shows icons for connectivity and battery at 100% with the time 2:04 PM. The settings are organized into two sections: 'Ethernet Settings' and 'SNMP Settings'. Under 'Ethernet Settings', there are four fields: 'Ethernet IP Address (IPv4)' with value '192.168.1.218', 'Ethernet Subnet Mask' with '255.255.255.0', 'Ethernet Gateway' with '192.168.1.1', and 'Port' with '9150'. Under 'SNMP Settings', there are four fields: 'System Name' with 'My Name', 'System Location' with 'My Location', 'System Contact' with 'My Contact', and three 'SNMP Trap IP' fields with values '192.186.1.2', '192.168.9.0', and '10.9.8.7'. A grey button labeled 'SEND SNMP TEST TRAP' is located at the bottom of the screen.

1.8 General Purpose Input and Preemption (iCCU-S Only)

From the iCCU Configuration section of the Main Menu, select the GPIn/Preemption option.


For each General Purpose Input to be used, select the desired function, the effective channels, and the desired volume. Preemption may be configured in the same way.

Each of the three General Purpose Inputs can be configured to a different function which will be activated by the corresponding input wire. The 4 Preemption input wires on the 50-pin cable all correspond to the Preemption Input (on the bottom of the screen).

Tap the Save button to write the configuration changes to the iCCU.

You can view the status of the GPIn/Preemption inputs by tapping on the View Gpin/Preemption Status button. This will provide a live-updating dialog with the status of each input. Asserting an input will change its status to Active.


See the wiring diagram on page **Error! Bookmark not defined.** for connecting the GPIn/Preemption wires.

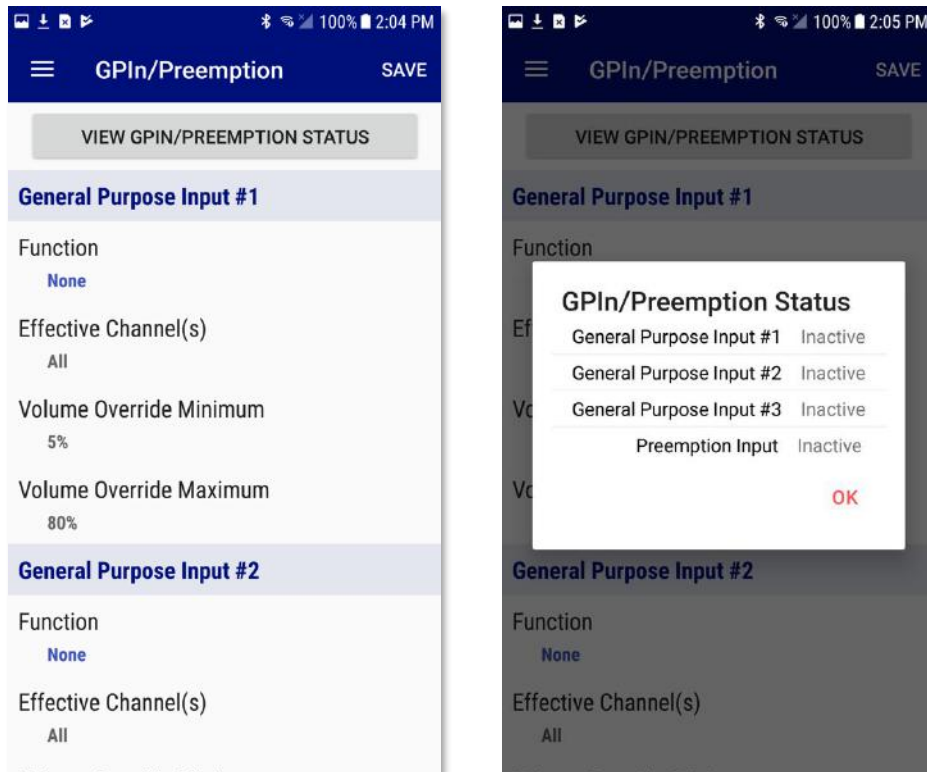

1.9 Ped Isolator

Tap on the Ped Isolator Switches menu item under the iCCU Configuration section. From this screen, single calls can be placed on individual phases by tapping the Call button. Also, calls can be locked in for any phase. As long as the lock call switch is activated, the call will remain locked, even after disconnecting from the Wi-Fi connection. The iCCU will continue to lock calls until the switch is deactivated or the iCCU is power-cycled.

These options are also available on the front LCD panel of the iCCU.

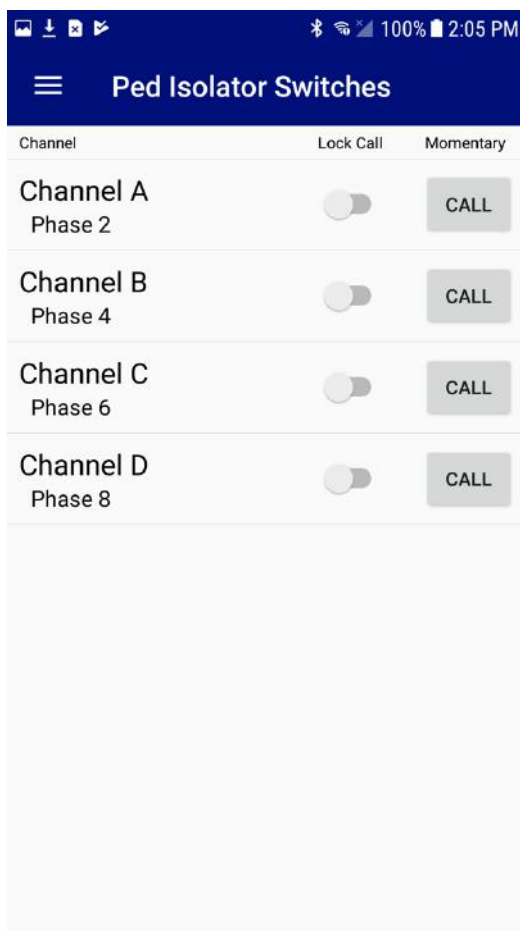

2. Using the Polara Field Service App for iOS to Change iN2 PBS Settings

2.1 Bluetooth Connection

Bluetooth LE is built into each PBS. **All configuration settings may be performed by connection to any PBS currently operating with the iCCU-X. Audio file updates and firmware file updates may only be performed by connection to the target device.**


Before starting the Polara FS App, make sure your Android device has Bluetooth turned on in Settings. Then, start the app. This will display a list of all available devices. Tap a name to select the device to connect to. When the password prompt appears, type in the password (factory default is 1234) and tap connect. Once logged in, the main menu will appear.

The connection procedure differs slightly depending on which Android device is in use. The below has three examples of typical connection behavior.

2.1.1 Connection Example: Samsung S7 running Android 7.0


The most straight forward behavior shown below:

Tap on the BTLE device upon which to connect. After a few seconds, the password prompt will appear.

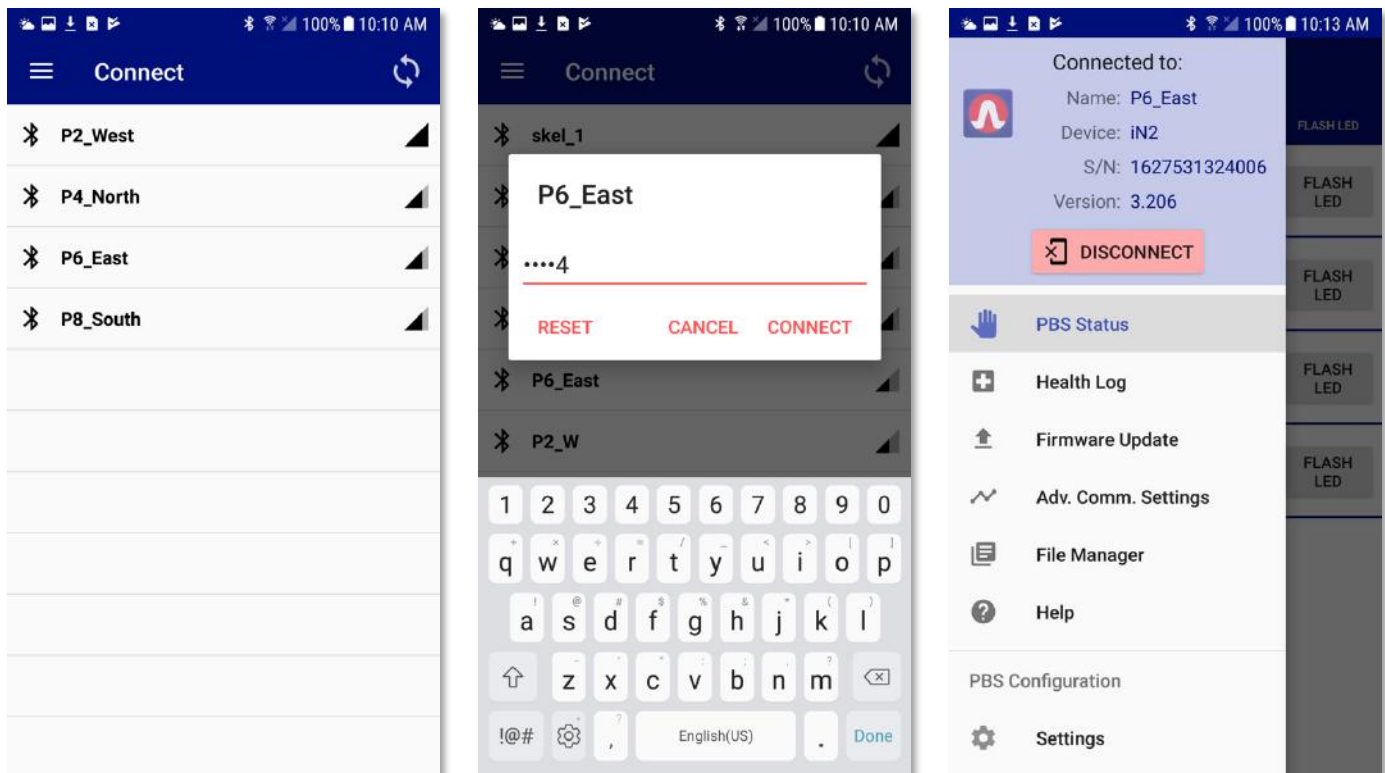


2.1.1.2 Connection Example: Google Pixel running Android 9.0

On some of the newer devices running the latest Android versions, once you tap on the BTLE device for connection, a Pairing request will appear. Tap on Pair & Connect, and then another confirmation box may appear. Tap pair on the confirmation box and then after a few seconds, the password box should appear.

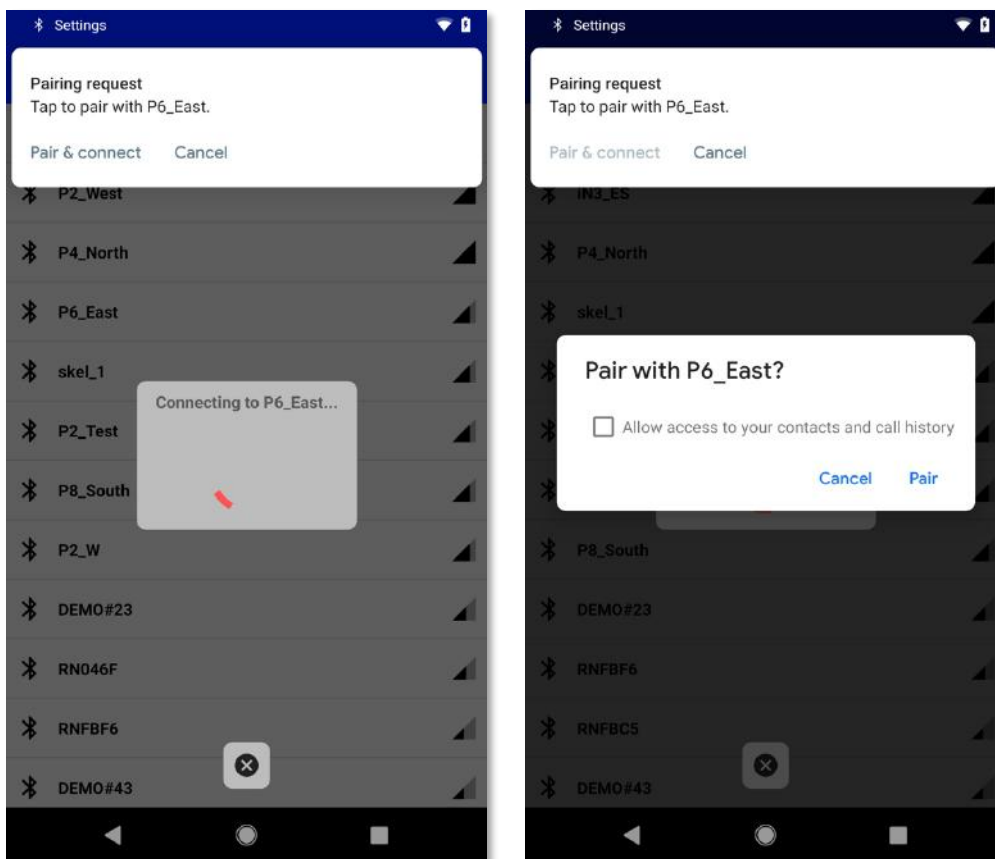


2.1.3 Connection Example: Nvidia Shield K1 Tablet running Android 7.0

On some devices such as tablets, the busy indicator will appear in the center of the screen, but it will not appear to pair. In order to connect, you must swipe down to view the notification center and see if there is an item listed as a Pairing request. Tap the pairing request and then a pairing confirmation dialog should appear. Tap the Pair button and then the password prompt should appear.

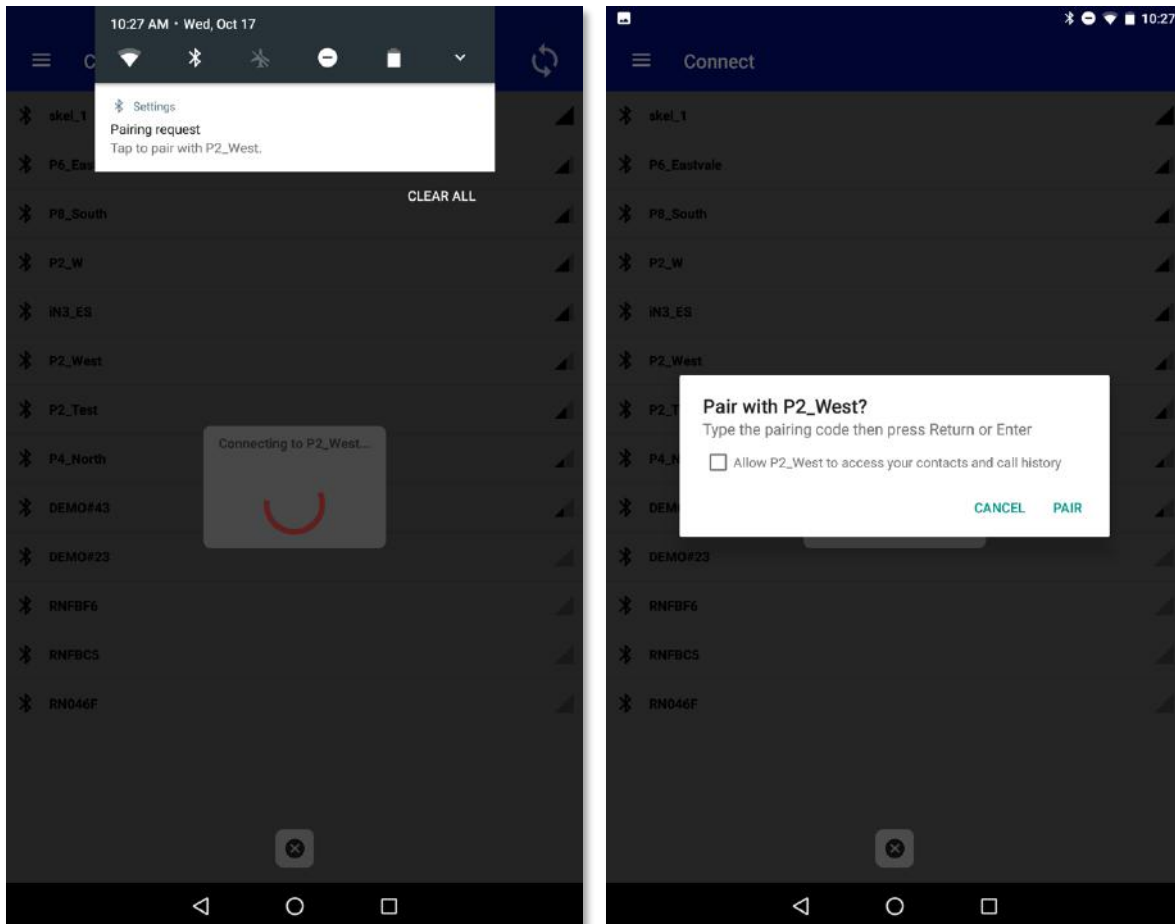


2.2 PBS Configuration Options

From the main menu, tap the Settings item under the PBS Configuration category. This presents an extensive list of operational settings that may be adjusted according to desired operation. You can swipe the list up and down to find the setting to be changed.

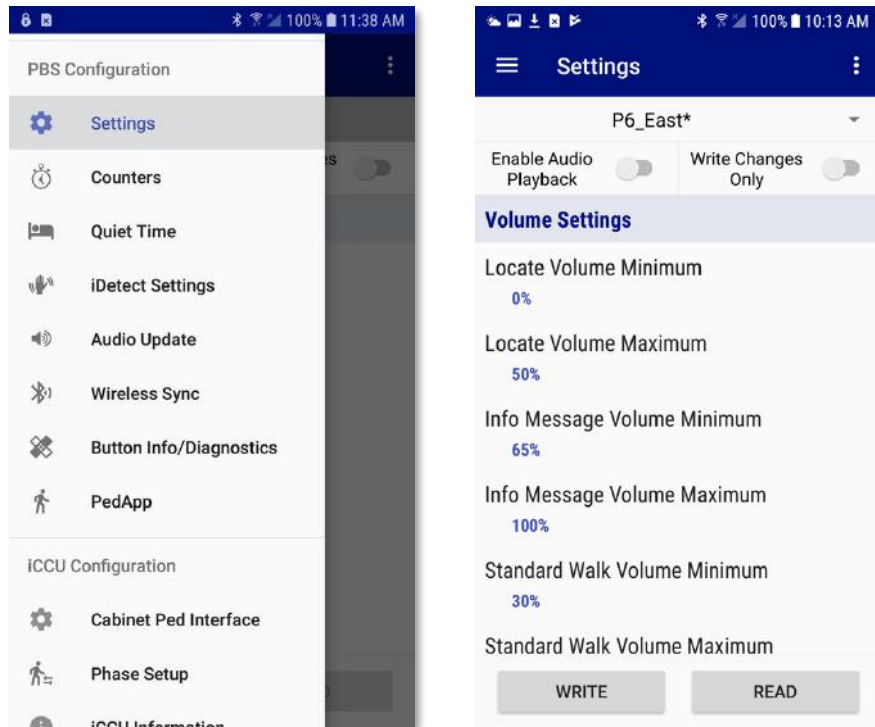


Tap the setting to access the options for that setting. Make your value changes and tap OK to confirm the new value or CANCEL to proceed without any change. Tap the INFO button for more information regarding the setting.

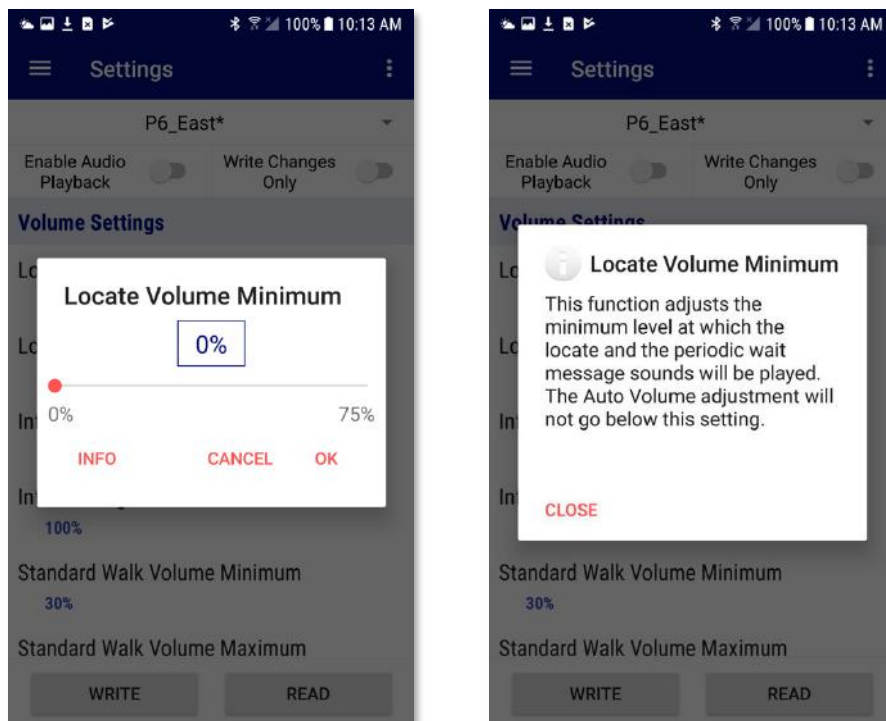

Options for selecting sounds have a button with a speaker symbol. To listen to sounds, use the slider to Enable Audio Playback or press the icon next to the sound you wish to hear. For safety, the unit will need to go into Maintenance Mode and the LED will perform a three-flash pattern. Press Yes to enable Maintenance Mode. In this mode, the unit's main button will not operate or respond to interval changes so a pedestrian cannot use it. This will only be done on the iN2 unit you are directly connected to, so a remote button cannot be made to play a walk sound and confuse a pedestrian.


Tap the speaker symbol to listen to the selected sound. Sounds will play out of the PBS's speaker. Turn off the Enable Audio Playback switch to resume the unit's normal operation.

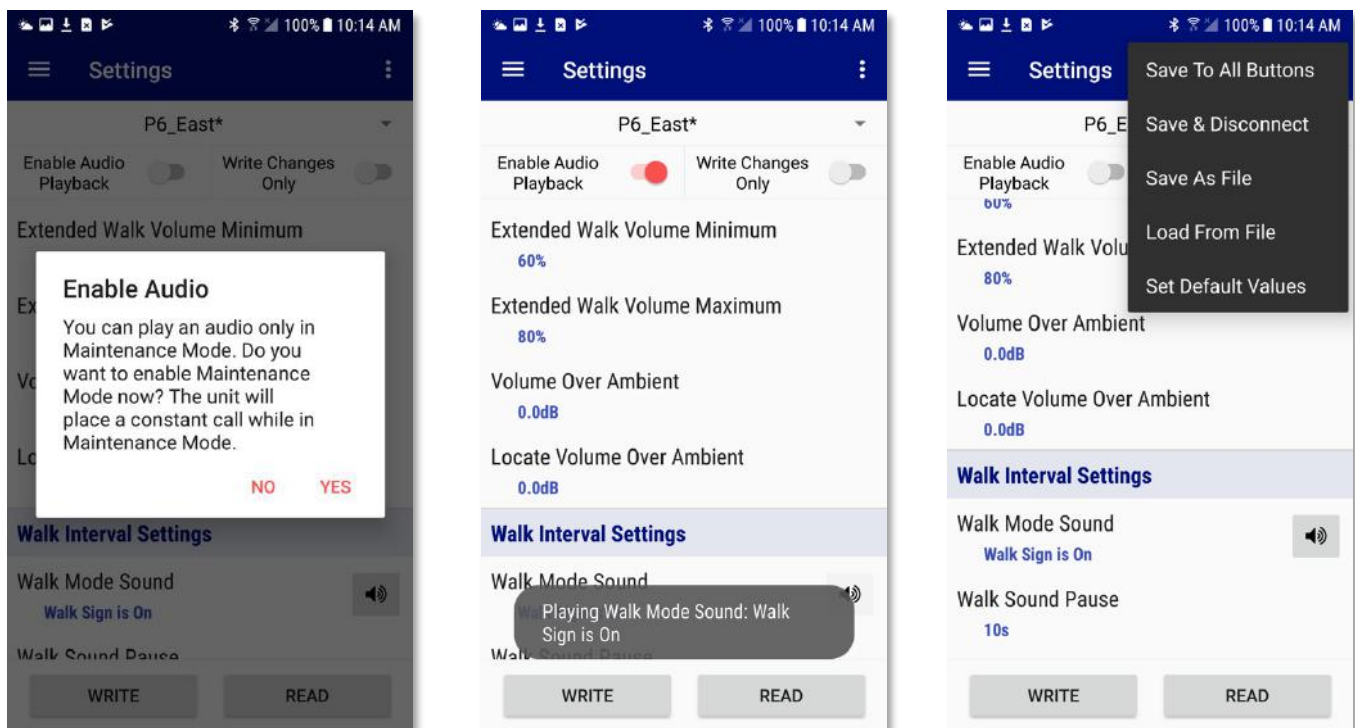

When you are finished selecting desired settings, tap the Write button to write the settings to the connected button. Alternatively, tap the menu symbol at the top right to access additional options including saving to all buttons in the intersection. If you wish to copy the settings to only a select few buttons instead of the entire intersection, tap the Write button to write the settings to the unit you are connected to, then tap the units name in the top bar and choose another button from the list. Then tap Write to write the settings to that unit. In this manner, you can read from any unit and write to any unit in the intersection by only connecting to a single unit.

After saving new settings to buttons, walk the entire intersection to test each PBS for proper operation to verify that the new settings work as intended.

By default, when saving settings, all configuration settings are written to the unit. When saving settings to all units, this may not be the desired behavior. For example, if you have customized audio volume settings separately for each unit, they may not all have the same settings, but if you wish to make an intersection wide change to a single setting, such as Walk Mode Sound, then saving settings to all would overwrite the volume settings. In this instance, you can enable the Write Changes Only option. To use the option, make sure the settings on the page match the settings on the device you are connected to by tapping the read button. Then enable the Write Changes Only switch. Now make the settings changes you wish to send to all units. Those settings will change to a red background informing you that they are the settings that will be written. When your changes are complete, perform a save to all operation and only those settings will be changed on all buttons.

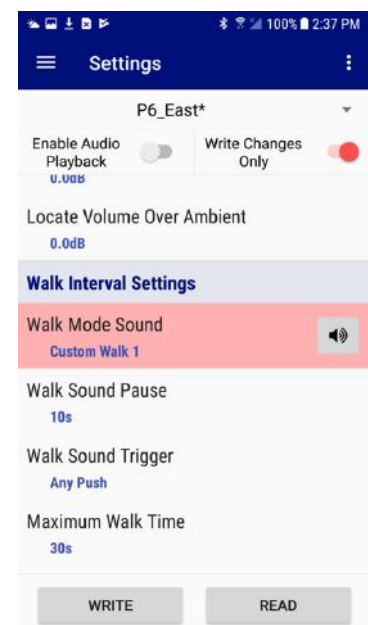


The currently displayed settings may be saved to a file and recalled for later uploading to other PBSs. Tap the three dots in the upper right corner to display the action menu and tap “Save As File” and enter a file name to create a file.


Tap “Load From File” to browse previously saved configuration files. Tap a file name and then tap OK to load the settings into the settings list. Then tap WRITE to save settings to the PBS.

Note: The configuration files only save the PBS Settings listed on this screen and does not apply to additional parameters on other screens such as Quiet Time or Network Settings and also does not save audio files. Audio files must be extracted and uploaded separately.

While in the File Browser, you can delete files, if necessary. To delete files, swipe from the right to the left. You can also export the file for use in other apps by tapping the E-MAIL button. The configuration files are the same between all apps (iOS, Android, & PC) and can be used interchangeably.

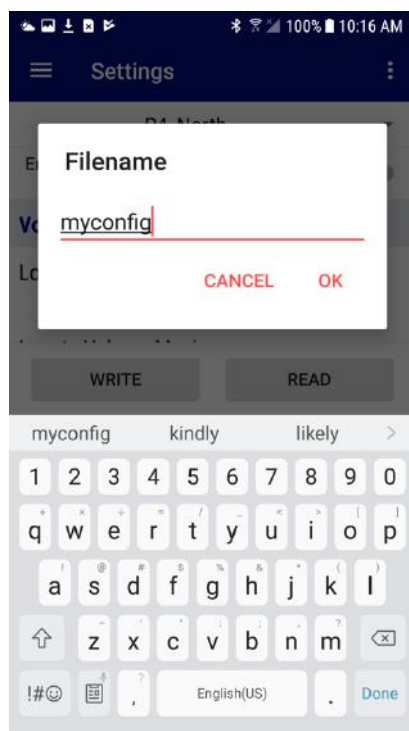

Save Dialog

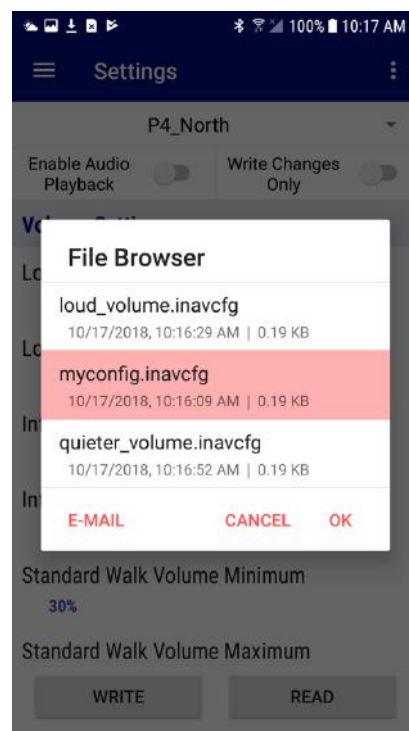

File Options

2.3 Button Counters

From the main menu, tap the Counters item under the PBS Configuration category. Each PBS keeps a count of events that have occurred in the button from the date of manufacture. These numbers act as a kind of odometer for the unit and cannot be reset. The counts are:

- **Total Walk Intervals**
 - The number of walk intervals the unit has received. This includes walk intervals which have been initiated by this PBS as well as walk intervals that occur while the intersection is in recall.
- **Actuated Walk Intervals**
 - The number of walk intervals which occurred following an internal button push. If the walk audio and button vibration occurred during a walk indication, then this counter is incremented.
- **Button Pushes**
 - The total number of button pushes that have been detected by the PBS's arrow button. This does not include any detected button pushes that were caused by other PBSs on the same phase.
- **Extended Pushes**
 - The number of extended pushes the PBS has detected on the arrow button.
- **External Pushes / External Extended Pushes**
 - Presses originating from another unit. Either from another unit on the same phase or from an externally connected button (see section 3.6.1 in the 2-Wire System Manual). Short presses are listed as External Pushes, and long presses are listed as External Extended Pushes.
- **Wireless Sync Pushes / Wireless Sync Extended Pushes**
 - Short and Extended presses originating from a unit connected via the Wireless Sync feature.
- **iDetect Activations / iDetect Extended Activations (iDS units only)**
 - Pedestrian activations detected by the iDetect feature.
- **PedApp Activations / PedApp Assisted Mode Activations (iNS/iDS units only)**
 - Pedestrian activations initiated using the PedApp.

36987_P2_SE*	
Total Walk Intervals	380
Actuated Walk Intervals	83
Button Pushes	4
Extended Pushes	2
External Pushes	5
External Extended Pushes	2
Wireless Sync Pushes	6
Wireless Sync Extended Pushes	0
iDetect Activations	20
iDetect Extended Activations	1
PedApp Activations	4
PedApp Assisted Mode Activations	16
Log Counter Data <input type="checkbox"/>	

In order to relate the above data to relative time, a logging feature is included which will add health log entries including all counters along with a timestamp at specific intervals. For example, if you want to log the data to find out how the counts change in a week, then enable Log Data Every and enter 168 hours. Tap Save in the upper right corner. Then, once a week, log entries will be added which include the counters.

2.4 Quiet Time


The iN2 PBS has a feature to easily allow the button to become quieter at a specified time of day. This is useful, for example, when a residential street experiences a lot of traffic during the day, but very little in the evening. In this scenario, it may be useful to have the iN2 PBS set loud enough to be heard over traffic during the day, but be nearly inaudible in the evening hours, as not to disturb residents living nearby. Quiet Time allows for a reduction in volume between a specified time interval, within a 24-hour day. The details of the feature's operation are such that if the current time of day falls between the selected start and end time of the Quiet Time period, then all Minimum and Maximum volume settings will be reduced by the specified reduction amount.

Note: The "Minimum" volume setting can be reduced down to 0%, but the "Maximum" volume setting will only be reduced down to 25%. This follows what is settable in the configuration parameters or settings screen.

The table below shows what the effective volume settings would be with the Quiet Time set to reduce the volume by 30%. With the values set as shown in the screenshots, between the hours of 9:00am and 7:59pm, the volume will be as set configured in settings (shown in the "set value" column). At 8:00pm to 8:59am the following morning, the volumes will be reduced as shown in the "reduced value" column:

Setting Name	Set Value	Reduced Value
Locate Volume Minimum	0%	0%
Locate Volume Maximum	50%	25%
Information Message Minimum	65%	35%
Information Message Maximum	100%	70%
Std Walk Minimum	30%	0%
Std Walk Maximum	60%	30%
Ext Walk Minimum	60%	30%
Ext Walk Maximum	80%	50%

From the PBS Configuration section of the Main Menu, select Quiet Time. Turn the Quiet Time switch On, then enter the desired settings, select the 3 dots at the top right of the screen, then select the desired Save option.

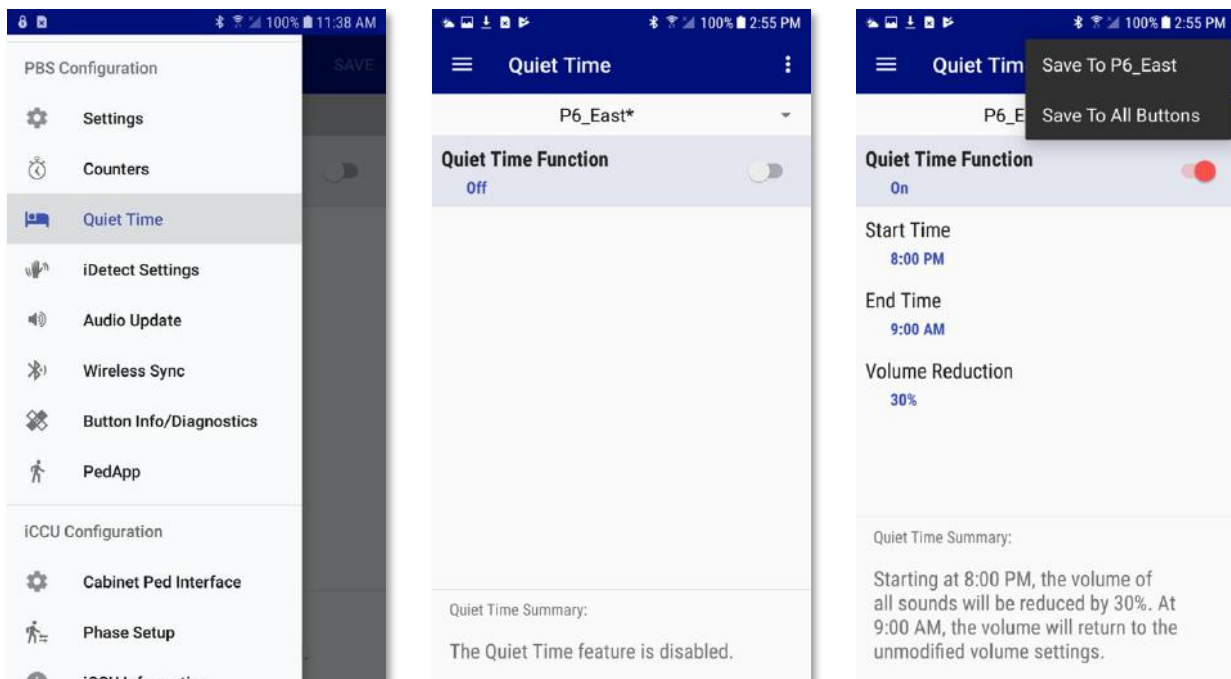

2.5 iDetect Settings (iDS units only)

iDetect brings touchless actuation to APS and is an added feature in all iDS APS buttons. There are many technologies that can facilitate touchless actuation, but each has strengths and weaknesses. Polara has chosen to use radar technology because of its performance, reliability, and resistance to vandalism. The intent of iDetect is to provide touchless actuation within a sensing range of 2" to 6". A basic configuration of iDetect is necessary after installation is complete (e.g., the APS is mounted to the pole properly, the button cover is installed, and the sign is installed).

Settings for the performance of iDetect functionality can be modified in the iDetect Settings screen. This screen can be found from the Main Menu by selecting PBS Configuration and then iDetect Settings.

The iDetect function can be completely disabled by turning off the Enable iDetect switch. This switch must be enabled in order for iDetect to be operational.

Make the desired setting selections based on the information below. When the desired settings have been selected, tap the three dots in the upper right corner and select Save to Button to apply the settings to the connected button, or select Save to All to apply the settings to all iDS2 buttons in the intersection.

2.5.1 Detection Profile

The Detection Profile selects sensitivity and detection schemes.


- Profile 0 (zero) uses a basic wave detection scheme. It is not recommended for use in new installations and only remains for backward compatibility. It is recommended to update the iDS unit to the latest firmware and use Profile 1 for greater sensitivity.
- Profile 1 (one) has increased system sensitivity and includes a Minimum Wave Time setting.

2.5.2 Range

The Range setting adjusts how close or far away the iDetect feature will detect movement. This setting may need to be modified based on which size sign is installed in order to optimize the detection range. A lower setting will limit the user's hand to a very close proximity (~2") to the unit before detection occurs, whereas a higher number will open detection to a slightly further distance (~6") before detection occurs. The settable range goes from a setting of 0 to 24. The factory default value is 9.

2.5.3 Extended Push

The Extended Push setting will change how Extended Pushes are handled by iDetect. The settable options include disabling the detection of Extended Pushes (Off), Override Short Push, and detection times of 1 second to 3 seconds in ½ second increments. The factory default value is 1 second. When this option is set, the user must continuously move their hand near the unit for the set time. When the user's hand first approaches the unit, the "Wait" (or configured Button Push Confirmation sound) will play. Then as they continue to move their hand (e.g., in a circular pattern near the unit), after 1 second the configured Information Message sound will play. If Override Short Push is selected, then instead of the "Wait" sound, the Information Message will be heard and the Extended Push volumes will take effect for the Walk and Clearance intervals.

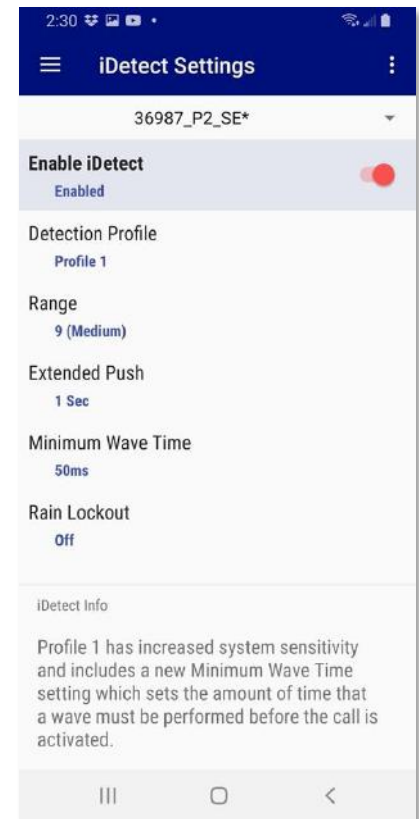

2.5.4 Minimum Wave Time

Minimum Wave Time (Profile 1 only) sets the amount of time that a wave must be performed before the call is activated. The settings are in milliseconds and the available options are 0ms, 50ms, 250ms and 500ms. The factory default is 50ms. This setting can be adjusted if false activations are common. Note: The Minimum Wave Time does not increase the timing of the Extended Push, so if the Minimum Wave Time is set to 500ms (which is $\frac{1}{2}$ second), the user must wave for $\frac{1}{2}$ second to hear the "Wait" sound. Then, if the Extended Push setting is set to 1 sec, the user must continue waving for another $\frac{1}{2}$ second to hear the Extended Push sound. If the Extended push setting is set to 1.5 sec, then the user will wave for $\frac{1}{2}$ second to hear "Wait" and then continue waving for another full second to hear the Extended Push sound.

2.5.5 Rain Lockout

The Rain Lockout feature (Profile 1 only) temporarily disables iDetect for the selected duration of time if the iDetect sensor detects activations during an active walk cycle. The expectation is that pedestrians would not be attempting to activate the PBS while the walk message is playing and the button is vibrating. Therefore, if activations are detected during that time, then it is assumed that they are likely caused by rain so the Rain Lockout feature will disable additional ped calls for the set duration. The feature is disabled when the setting is set to Off. See the table below for the behavior for the remaining settings.

Setting	If activations are detected during the walk cycle, iDetect will be disabled for the following duration:	Lockout automatically turns off if no additional activations occur during the following duration:
Low	15 minutes	1 minute
Medium	30 minutes	2 minutes
High	1 hour	3 minutes

2.6 Wireless Sync

Considering a scenario where a crossing on one side of the intersection does not have button wires, but does have a ped head, a 2-wire unit cannot be placed on that corner, so a 3-wire unit must be used. In this instance, there is no method of communicating a button press or ped call through a wired connection. The PBS has the capability to communicate via BLE from PBS to PBS to convey ped call information.

The wireless sync function provides a link between PBSs on the same PED phase such that a button press on one unit enables the Walk and Clearance sound on the other unit. Both standard and extended push status is transmitted.

Enable the wireless sync feature on the 3-wire unit as well as the 2-wire unit on the same phase on the opposite side of the intersection.


To display the main Wireless Sync settings page, tap Wireless Sync in the PBS Configuration section of the menu.

Enable this function by tapping the 'Wireless Sync Enable' switch at the top of the screen.

The Intersection ID is used to prevent any possible interference between nearby intersections which are also using this feature. Tap the 'Intersection ID' box and enter a number (up to 9 digits) and tap 'Save'. Any number is acceptable as long as it is different from that used on any nearby intersection. In the same manner, enter the PED phase number for this PBS. Note: The Intersection ID is shared between the Wireless Sync feature and the PedApp feature. The ID can be changed in both the Wireless Sync settings page and the PedApp Intersection Info screen, but they refer to the same ID.

When the Remote Ped Call option is enabled, if that unit receives a button push indication from a Wireless Sync transmission, then it will also cause a Ped Call indication to the traffic cabinet. Enable the Remote Ped Call feature on the iN2 unit, but it does not need to be enabled on the iN3 unit if there are no button wires connected to the large terminal block.

Note: In iNavigator (iN2/iN3) units, when the Wireless Sync feature is active, the PBS will not accept Bluetooth connections from the Field Service app. However, 5 seconds after an Extended Push, the PBS will accept connections until the start of the next Clearance cycle. iNS units do not have this limitation.

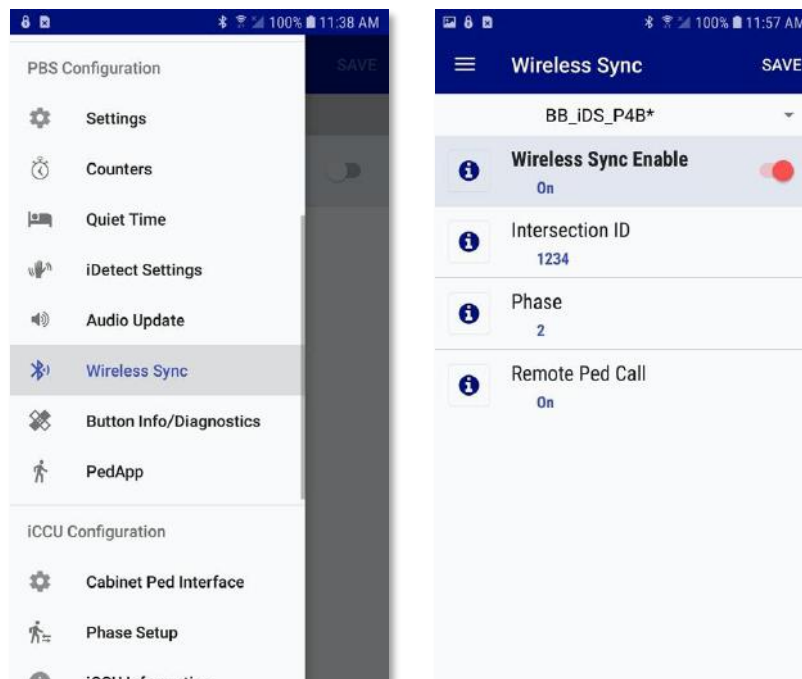

2.7 PedApp Settings


The iNS can be configured to work with the Polara PedApp, which is available for iOS via the App Store and for Android via Google Play. When the buttons at an intersection are configured for use with the PedApp, they allow pedestrians to place calls for the desired crossing, without touching the buttons. Additional features to help the visually impaired include text-to-speech to speak the street names of the intersection and increased locate tones for the target button, to help find the button associated with the desired crossing.

To configure the iNS for use with the PedApp, please refer to the PedApp Configuration Guide available in the Help menu of each Field Service application and also on the Polara website.

2.8 Preparing Audio Files

The audio files which are played in the iNav units are encoded using the open-source Ogg Vorbis codec. Polara provides professionally recorded custom audio files on the website. Go to Polara.com and click on the Audio Library option. You can search for audio files which have already been recorded if the streets on the desired intersection are common. However, you can also request to have messages recorded for you by clicking on the Request Custom Message option and filling out the form on the website.

If you wish to record your own messages or already have messages in another format (such as .wav or .mp3), these messages can be converted to the specific Ogg Vorbis format needed by the iNav devices by downloading the Intelligent Config application (also available on the Polara.com website) and using the Convert Audio option.

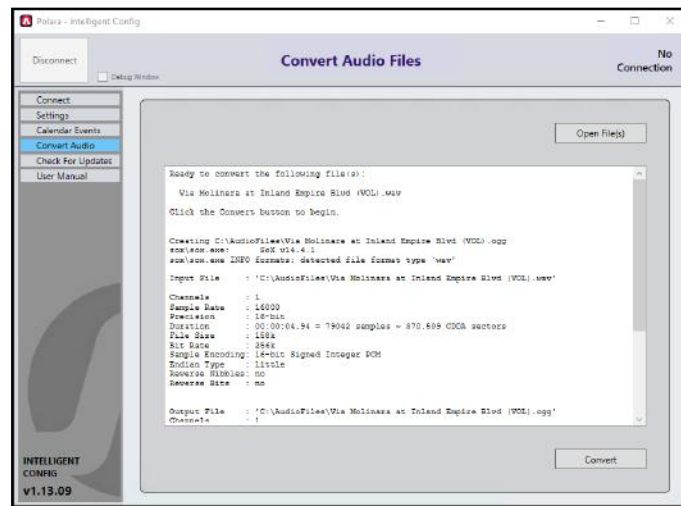

Once you have your .ogg files prepared, they must be transferred onto your Android device. There are multiple ways to accomplish this. The below are a few ways of transferring the files.


- Send the files as an e-mail attachment to an account on your Android device.
- Use the USB cable connected from the Android device to your PC and transfer the files directly to the device's file system.
- Copy the files to the microSD card of the Android device.
- Download the Polara.com files using the web browser on the Android device.

Any of these methods can be used as long as the .ogg files appear in the file browser of the Android device. An easy location would be to copy these to the Downloads directory on the Android device for easy retrieval.

2.8.1 Opening .ogg files as an e-mail attachment


If you have sent the files to an e-mail account that is associated with your Android device, open the e-mail to view the attachments.

Tap on the main part of the attachment (not the download arrow or the Google Drive icon). You should be presented with the Open With popup. Tap on Polara FS to import the file into the Polara Field Service app.

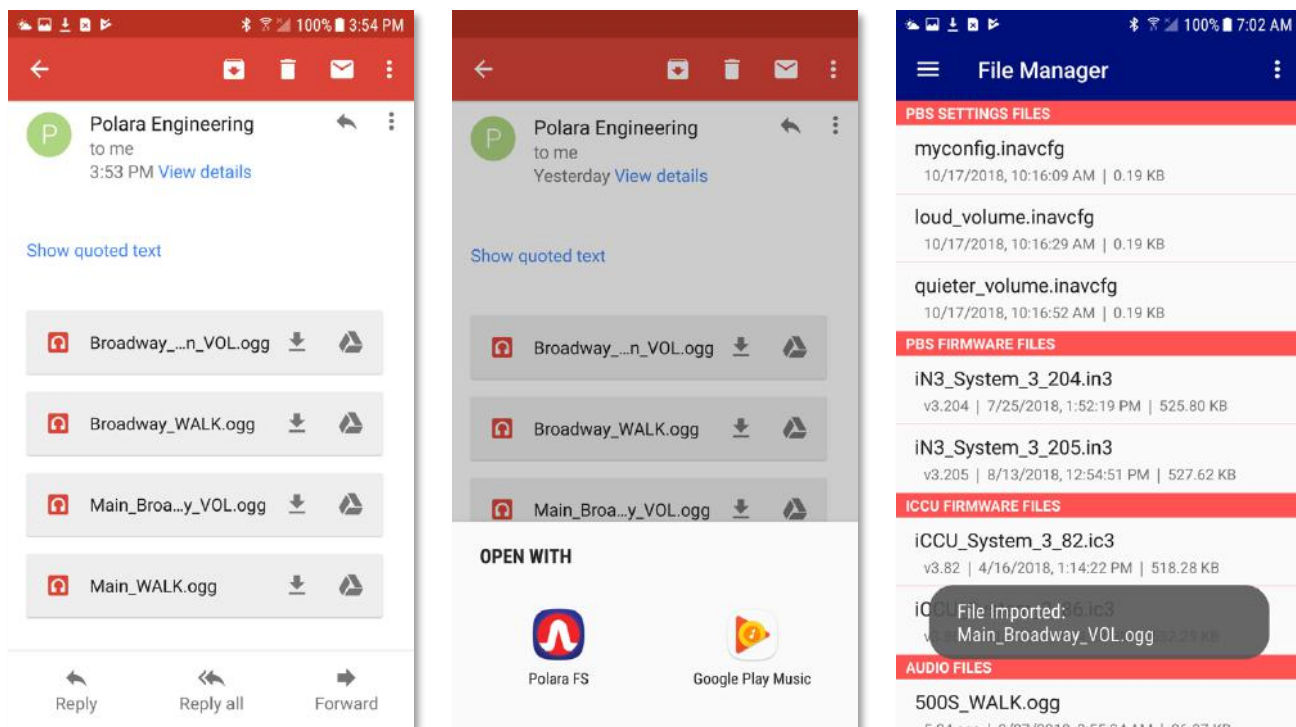


2.8.2 Opening .ogg files via Android File System

If you have downloaded the .ogg file into the Android device's file system, open a file browsing application. The application will vary depending on the device. On Samsung devices, this is the My Files application.

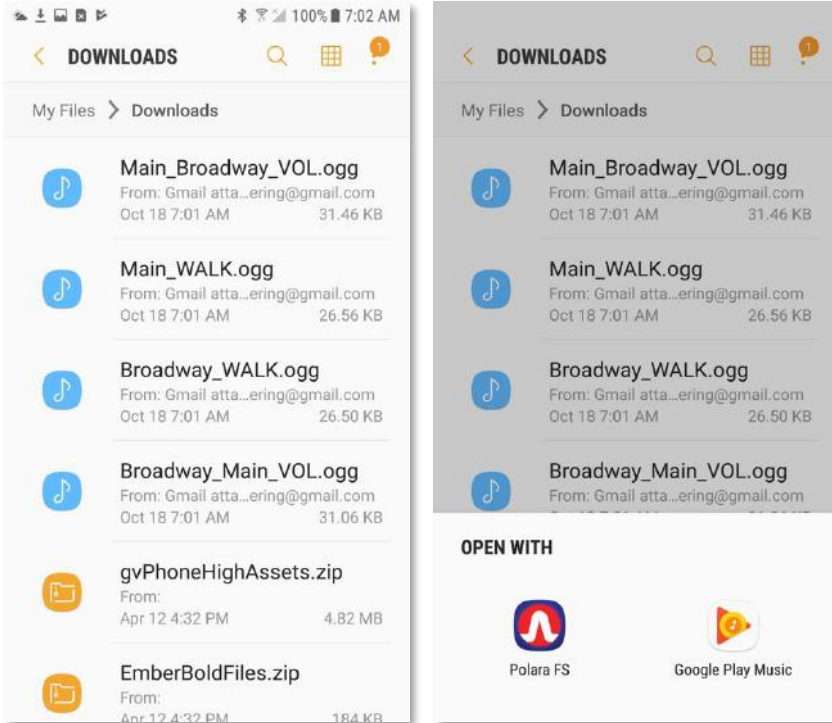

Example: Samsung Galaxy S7

Using the Samsung My Files application to import .ogg files into the Polara FS app.

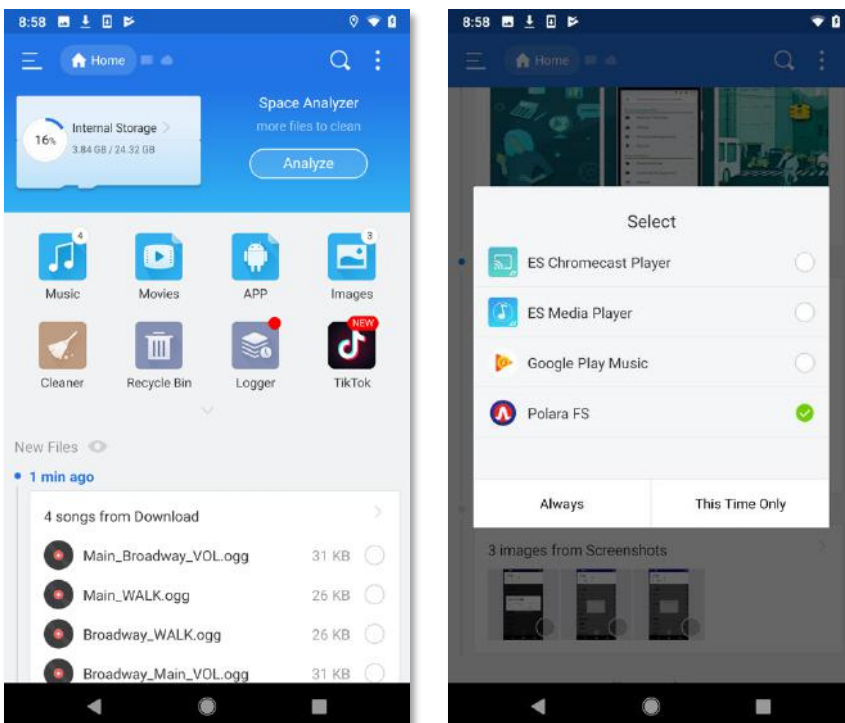

Example: Google Pixel


Using the ES File Explorer application to import .ogg files into the Polara FS app.

2.8.3 Browsing for .ogg files via Polara FS App

If you have .ogg files stored in your Android device's internal or SD card memory, you can import it directly using the Polara FS app file manager. Open the Polara FS app and select the File Manager option from the main menu.

Tap the three dots in the upper right corner of the screen and select Browse to Import Files.


You will be presented with a file browser. Browse to the location with your saved .ogg files, and then tap on one of the files to import it. Repeat the process for each file to import.

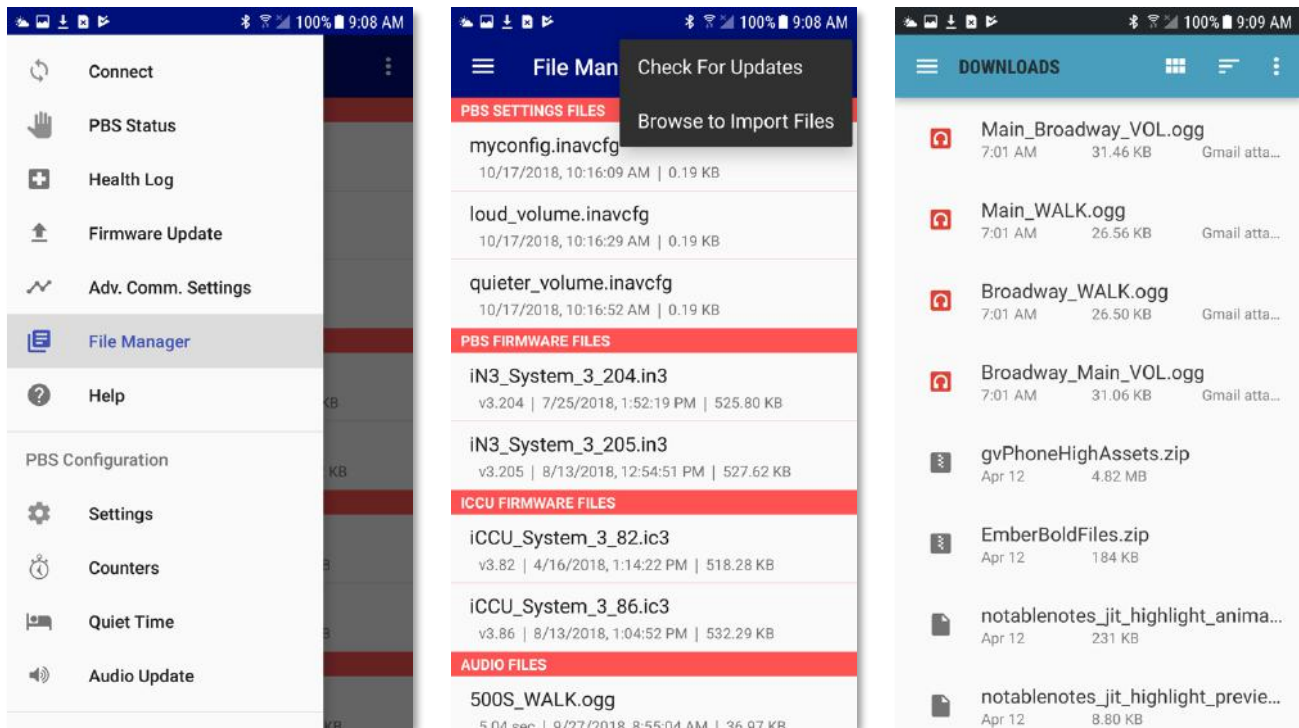

2.8.4 Audio Library

The library of audio files that have been recorded and are available from Polara on the website is accessible directly via the Field Service App through the Audio Library screen.

Access to the Audio Library is available only after creating a user account through the app's profile interface. Tap the User Profile icon in the bottom right corner of the app to open the menu and tap Create Account. Only a name, e-mail address, and password are required to create an account. Once the account is created, a verification e-mail will be sent. Enter the code from the e-mail into the verification code field on-screen to finish account creation. Once you are logged into your account, your name and e-mail are shown in the User Profile menu.

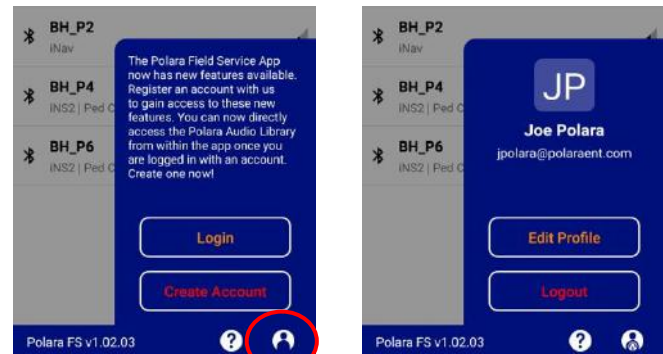


Tap to open User Profile screen.

You can add additional information by editing your profile. This will allow you to associate an address, phone number, and company name to the user profile.

Once you are logged in, then tap on the Audio Library option in the main menu to access the search screen. Enter the name of the street to search for and tap Search. A results screen will appear with all audio files containing the search term(s). Tap on the play icon to hear the audio file. Tap on the download button to import the file into the app. Once the file is imported, the file can be uploaded to an iNav by following the instructions on the following pages.



Tap to download audio message

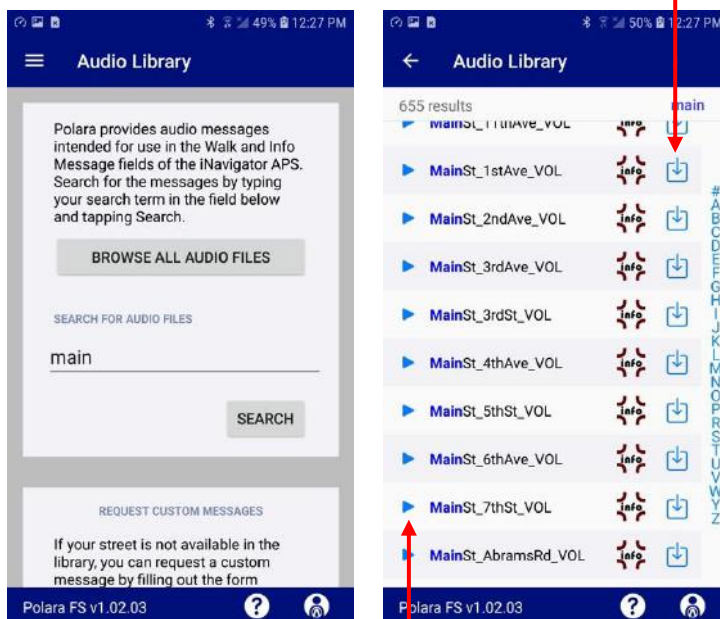


Tap to hear audio message

Note: A connection to the internet is required to create a user account and search for audio messages.

2.9 Updating Audio Files


From the main menu, tap on the Audio Update option.

To add a new Information Message file, tap on "Information Message". This displays a list of available voice files loaded into the Polara App. Tap on the name of the file you wish to load as the Information Message sound in the PBS. Then tap the OK button.

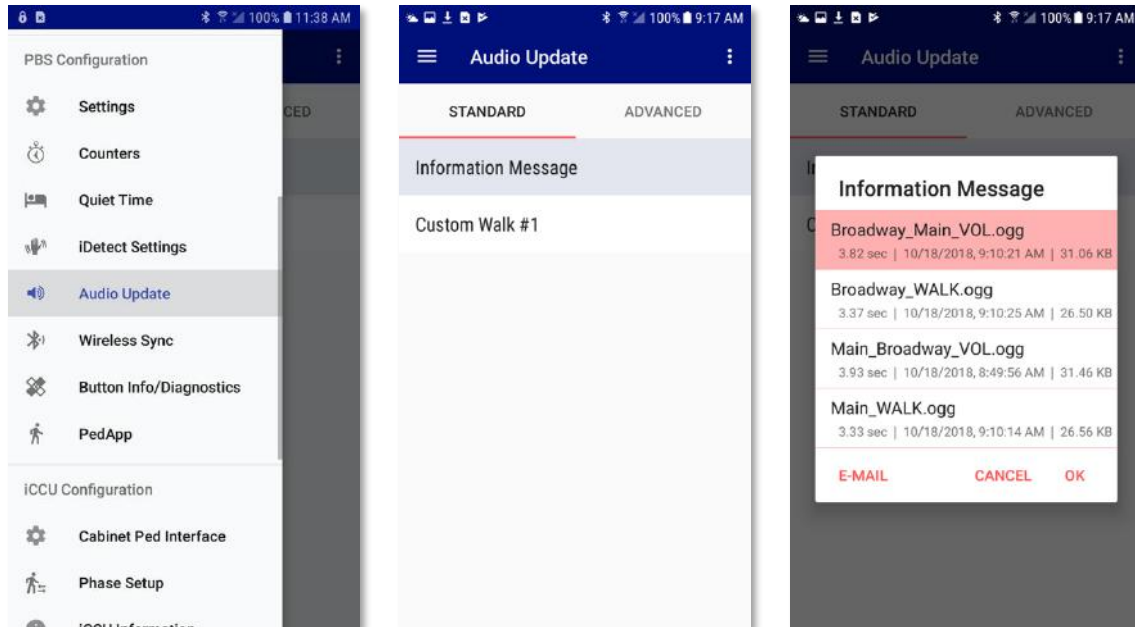

Note: Files ending with the suffix VOL should be loaded as an Information Message and files with the suffix WALK should be loaded as Custom Walk.


Tap OK on the confirmation box and the file will begin uploading. Once the file has completed uploading, you will be returned to the Audio Update screen.

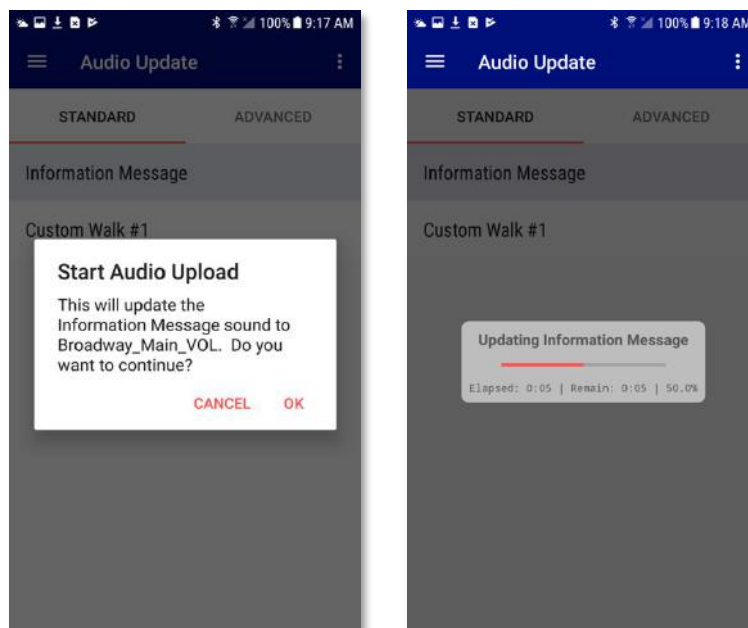

Repeat this process for each file to be uploaded. Typically, a custom set will include two files, one for Information Message and one for Custom Walk #1. To enable these new custom files, go to PBS Configuration Settings and set the Information Message option to “Custom”, and set the Walk Mode Sound option to “Custom Walk #1”.

Finish by walking the intersection to confirm the system is both operating properly and playing correct messages.

Additional sounds can be modified for specific circumstances. The following view shows the additional sounds that can be uploaded using the Android app.

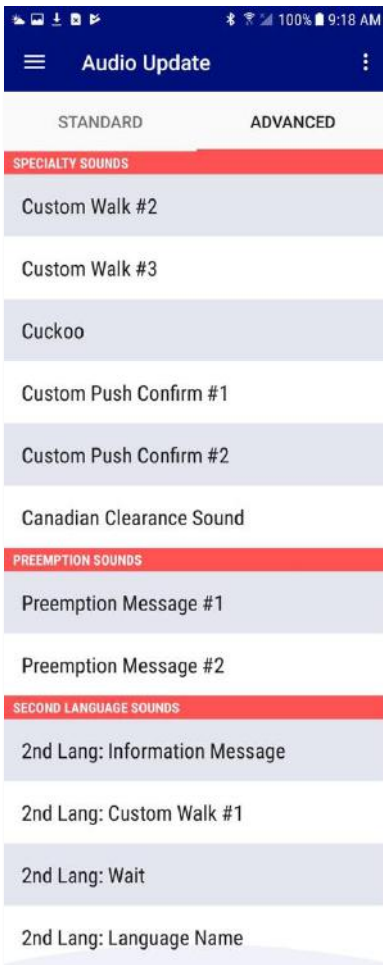

If additional audio sound customization is required beyond what is listed in the Audio Update screen, use the Intelligent Config PC Application for more audio upload options, including adding additional second language audio files or replacing Countdown files. An iN-DGL dongle is required for connection to an iNav unit using the PC. Contact your distributor to obtain an iN-DGL if you do not already have one.

2.10 Extract Audio Files



The same messages that are available to be changed via Audio Update can be extracted from the PBS. This feature requires firmware version v3.199 or greater in the iNx unit.

While in the Audio Update screen, tap the three dots in the upper right corner and select Extract Audio.

All options on screen should change to add the word “Extract” to the front to indicate that you will be extracting the selected message from the unit.

It is recommended that you listen to the message on the unit prior to extracting it so you know how the message should be named. Perform an extended push on the unit to hear the Information Message and then wait to hear the Walk message, or use the sound play feature in the Settings screen.

To extract the Information Message, tap the Extract Information Message option.

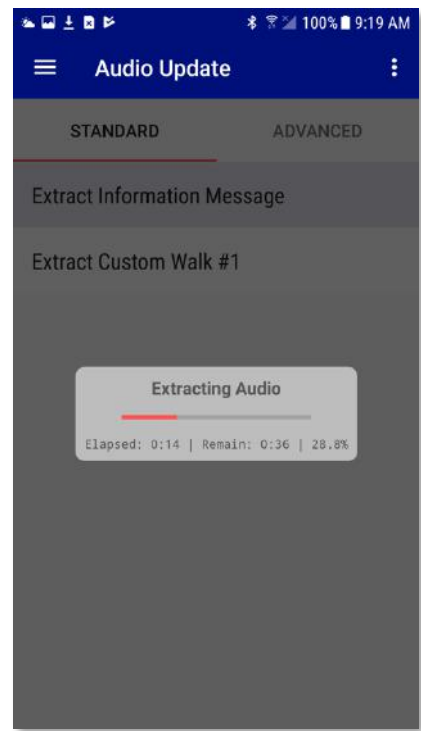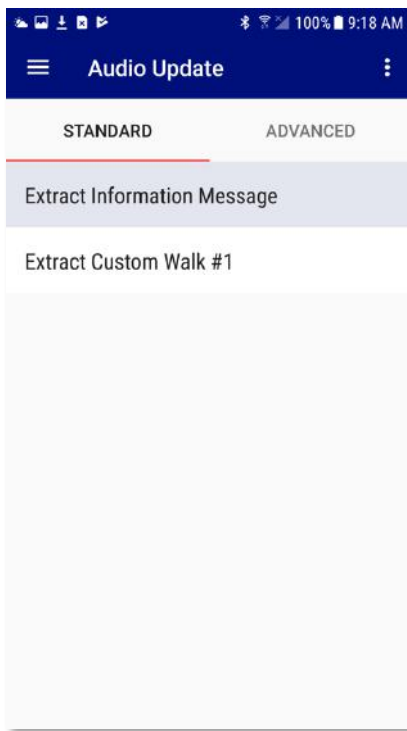


You will be prompted to add a filename for the extracted file. Name the file appropriately for the intersection streets. For example, the intersection of Broadway and Main would have an information message named “Broadway_Main_VOL” and the corresponding walk message would be “Broadway_WALK”.

Tap OK to begin extraction.

Once extraction is complete, you can extract additional messages from the unit or tap the three dots in the upper right corner and select the Upload Audio button to switch back to upload mode.

You can view the extracted messages by selecting the File Manager from the Main Menu. Tap on one of the .ogg files to bring up the action menu. From there you can play the sound and hear it from the Android device’s speaker or e-mail/export the file.

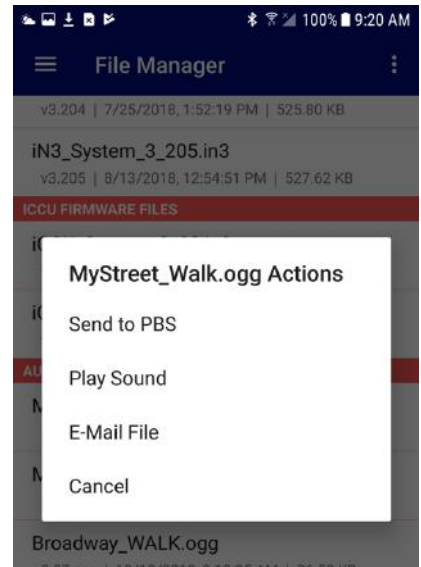


3. Using the Polara Field Service App to Access the Health Log

3.1 Accessing the Health Log

The Health Log contains a list of events, including both normal conditions and error conditions. Each PBS maintains a separate log. These can be very useful for troubleshooting.

Tap the box for “Health Log” at the Polara App main menu. The Name / ID of the currently connected device is visible at the top. To read the Health Log from this device tap “Read”. The current log is downloaded and displayed. Swipe the screen to browse through the log. Tap the menu symbol at the top right to access a list of actions. The menu symbol is shown as three dots. You can choose to clear the log, export the log to an email address, or view the log file as text in another external application. For help with a particular issue, or a message of concern, email the log to


support@polara.com.

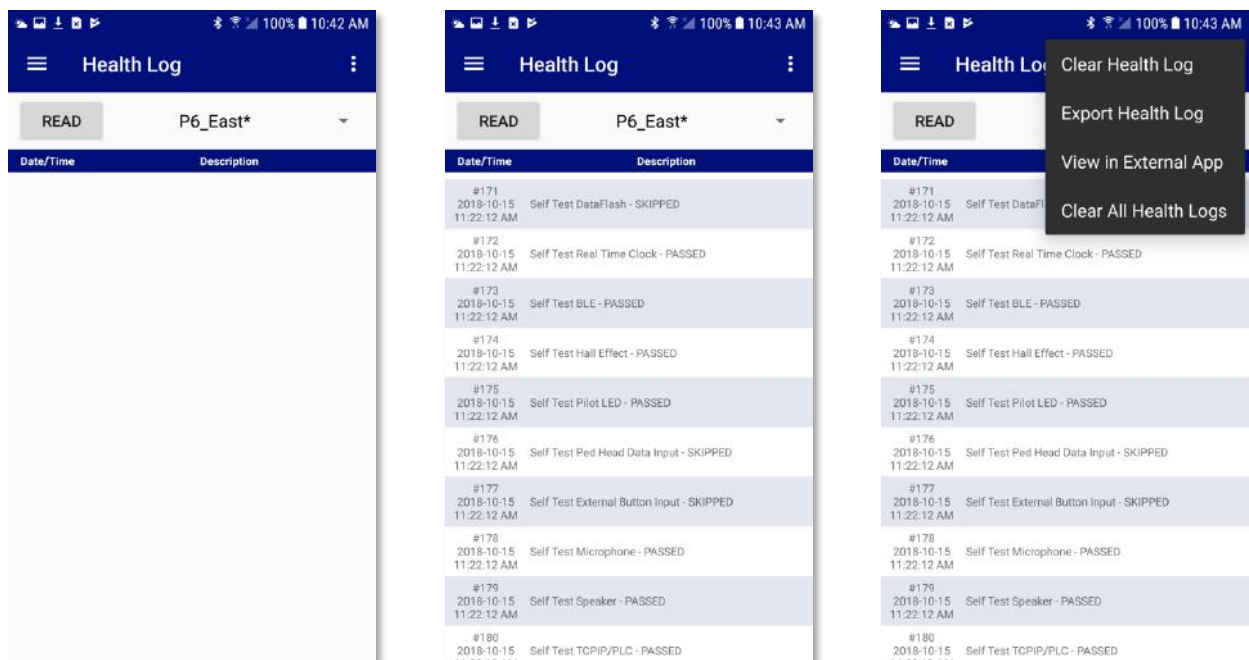

4. Getting Button Info and Diagnostics

The Button Info/Diagnostics page in the PBS Configuration section of the main menu shows additional details about the iNav unit.

- Press the Rename button to change the units name that appears when connecting via Bluetooth.
- To view a list of all information and settings configured for a unit, tap the View All Unit Information button. This will display detailed information about all factory and user-settable settings. Note: This information is also prepended to the health log when exported to file.
- The Reboot PBS button will cause a soft-reset of the unit.
- Pressing the Run Diagnostic button will perform a self-test of each of the listed items and return a Pass/Fail result. This does not absolutely mean that the unit is functioning perfectly, but that the software does not detect any abnormalities in the data or responses from the specified test.

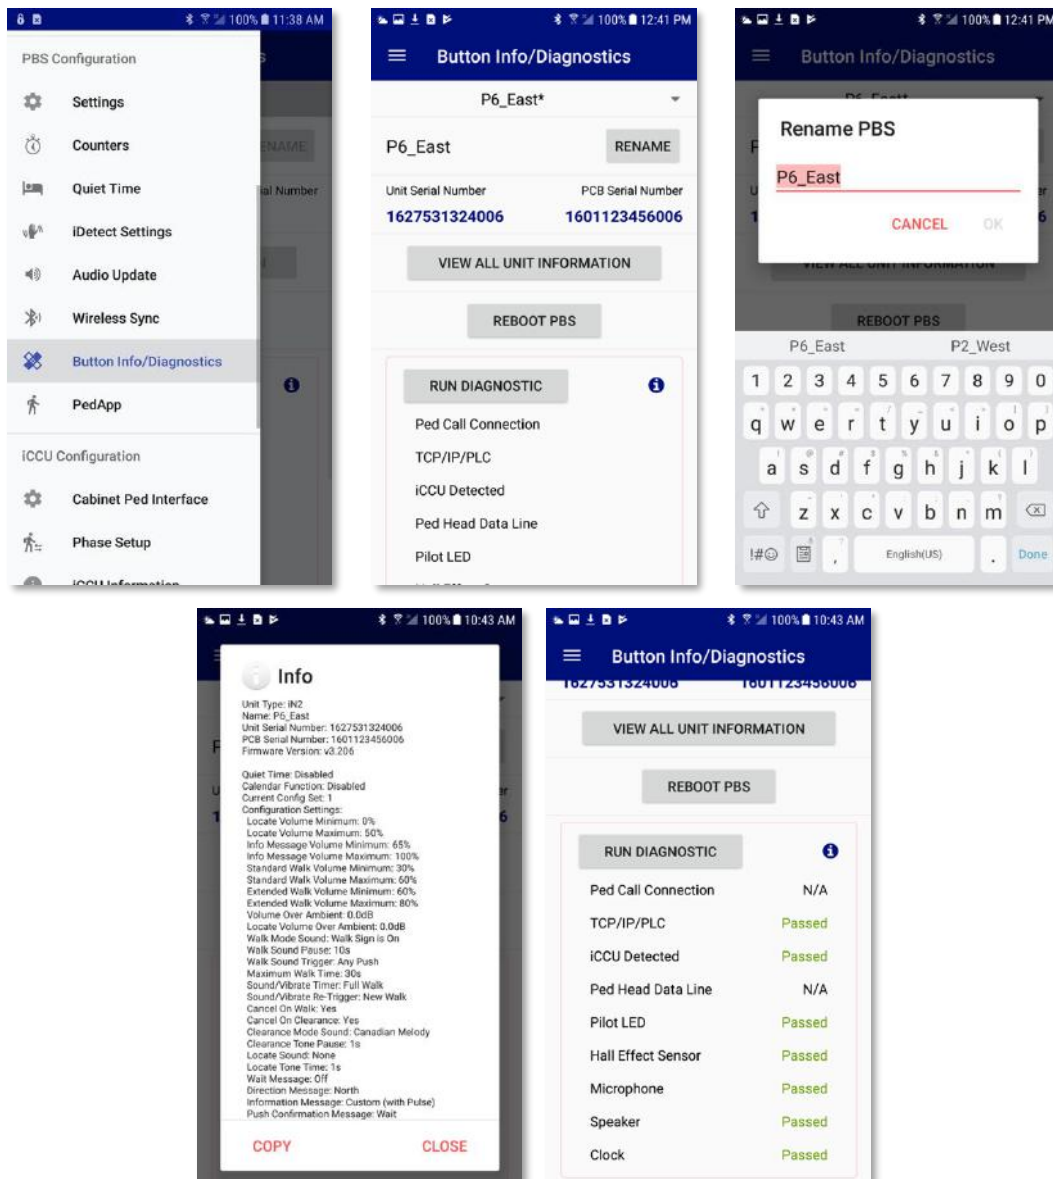


5. Using the Polara Field Service App for Firmware Updates

5.1 Checking for the Latest Firmware

Firmware files are automatically bundled with the Polara Field Service App. The latest firmware at the time of App release is ready and pre-installed for updating.

The Android App also has the ability to connect to polara.com to check for new updates directly from within the App. Your device must be connected to the internet in order to perform the check. This can be done while connected to a unit or while working without a Bluetooth connection. Tap on the File Manager option in the main menu to browse all files on your Android device. Tap the three dots in the upper right corner of the File Manager screen. Tap the Check For Updates button. The device will connect to the internet and check for the latest firmware files from polara.com and provide them for download. You can tap on View Release Notes to see what the changes are from the previous version or tap the Download button to download the file to your device.

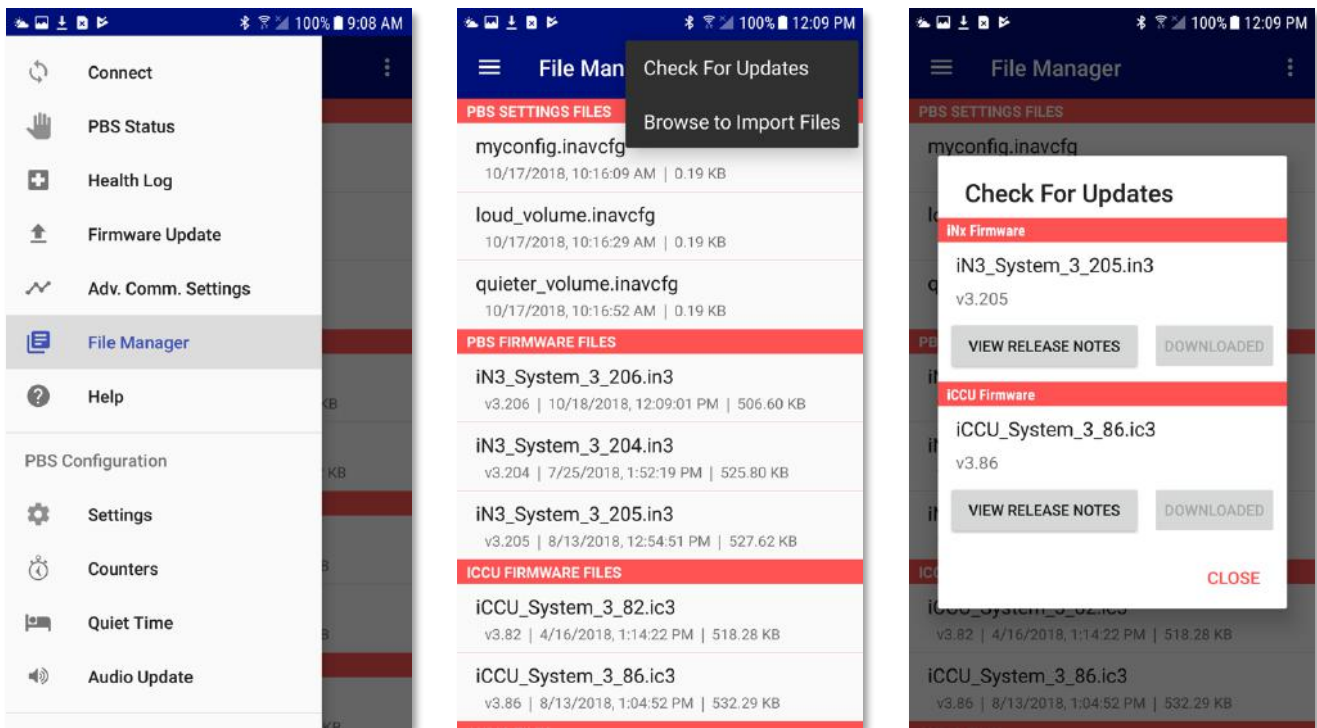

Firmware files to be uploaded can also be received using the same methods used to transfer .ogg files to the Polara FS App. Follow the same instructions as in section **Error! Reference source not found.** to import the files.

5.2 Performing a Firmware Update

To perform a firmware update, tap Firmware Update from the main menu. On the firmware update page, you can view the current firmware device you are connected to. Tap the Update Firmware button. The list of available firmware update files will appear. Tap the file you wish to upload and tap OK to begin the select the file. Tap OK on the confirmation dialog to start the update process. When the process is complete, a message is displayed confirming update success.

