


# JZ-TS24-2 Wiring Diagram & Caution

## Caution


- 1.Use electricity safely! Considering the electric source and relay both related to the high-voltage,Please Make sure insulation and grounding are done well
- 2.Insert or remove the SD card directly without shaking it up and down or overexerting.
- 3.If 5V input voltage is enough to make the screen work normally,then 12V is not necessary.
- 4.Be careful to confirm the different parts have been connected properly

## Part1:Connect to Ramps with AUX-1

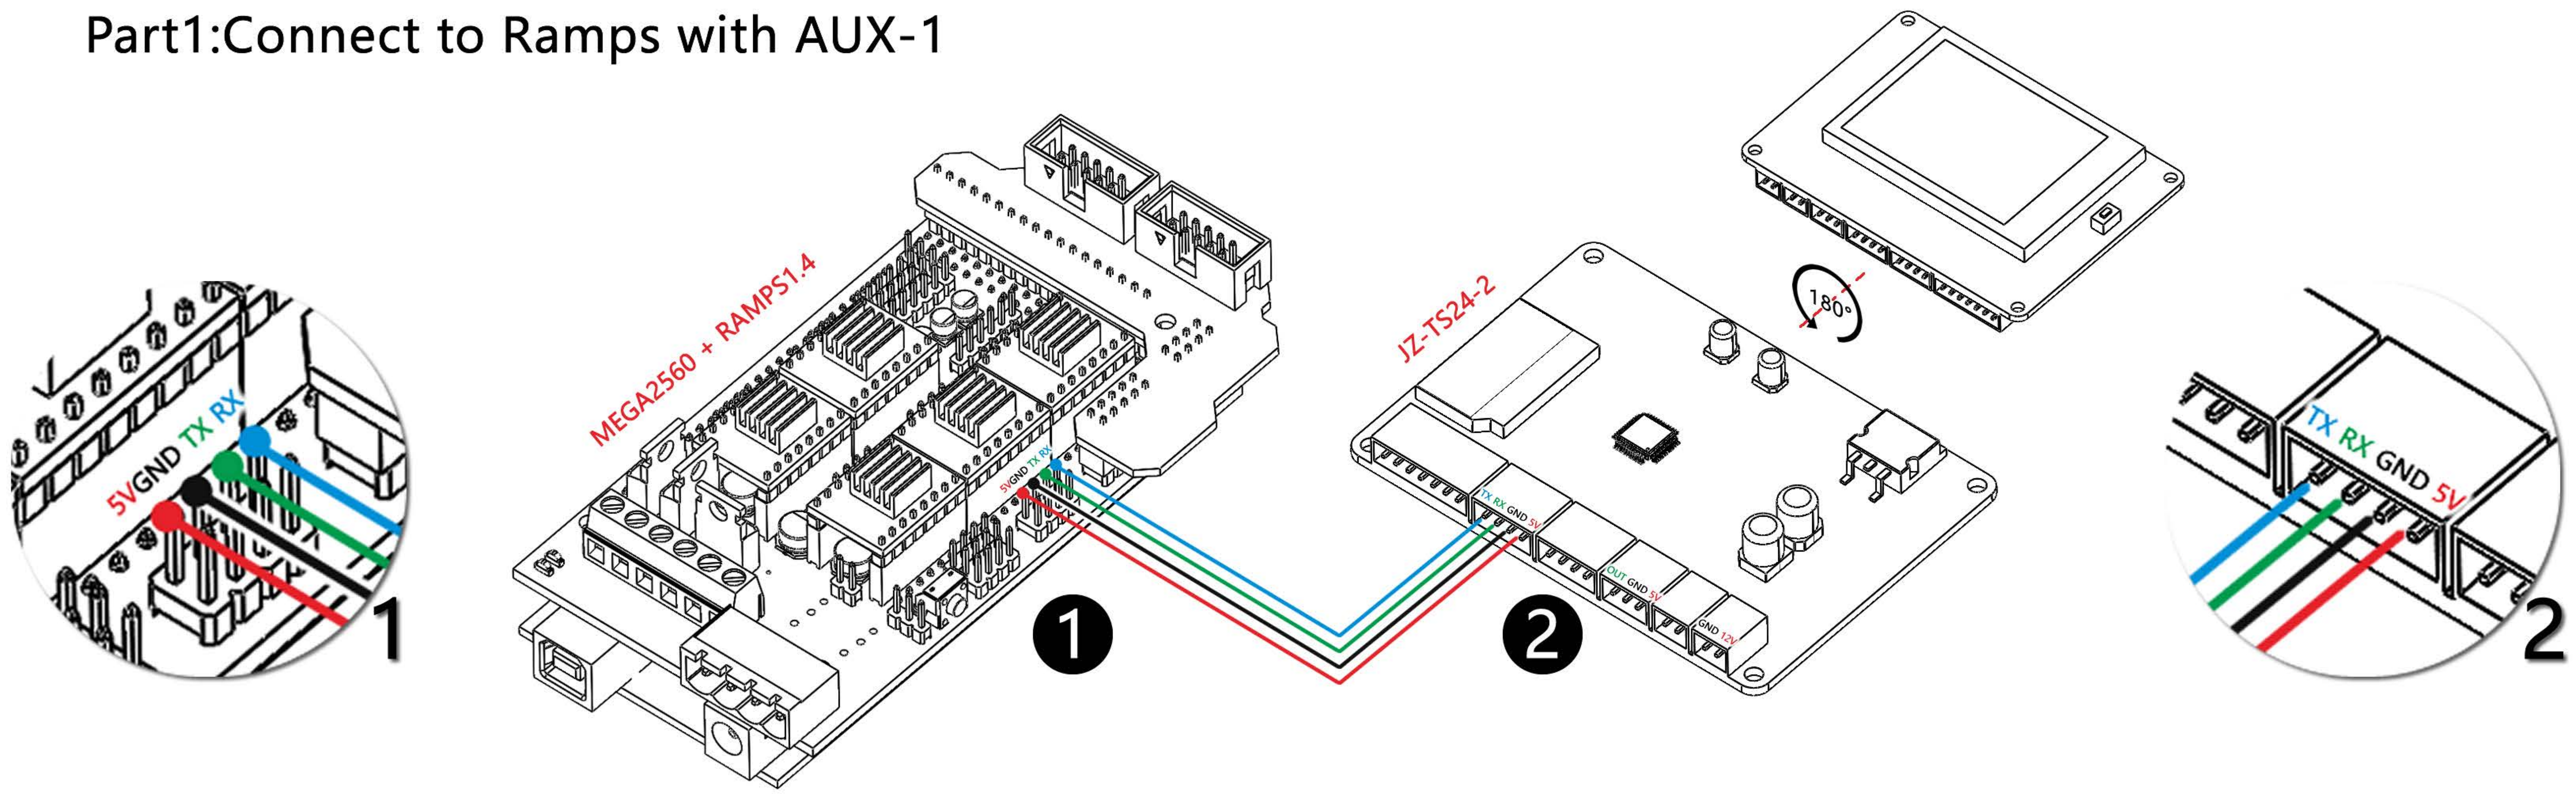


## Part2:Power 12V

If 5V input voltage is enough to make the screen work normally,then 12V is not necessary.

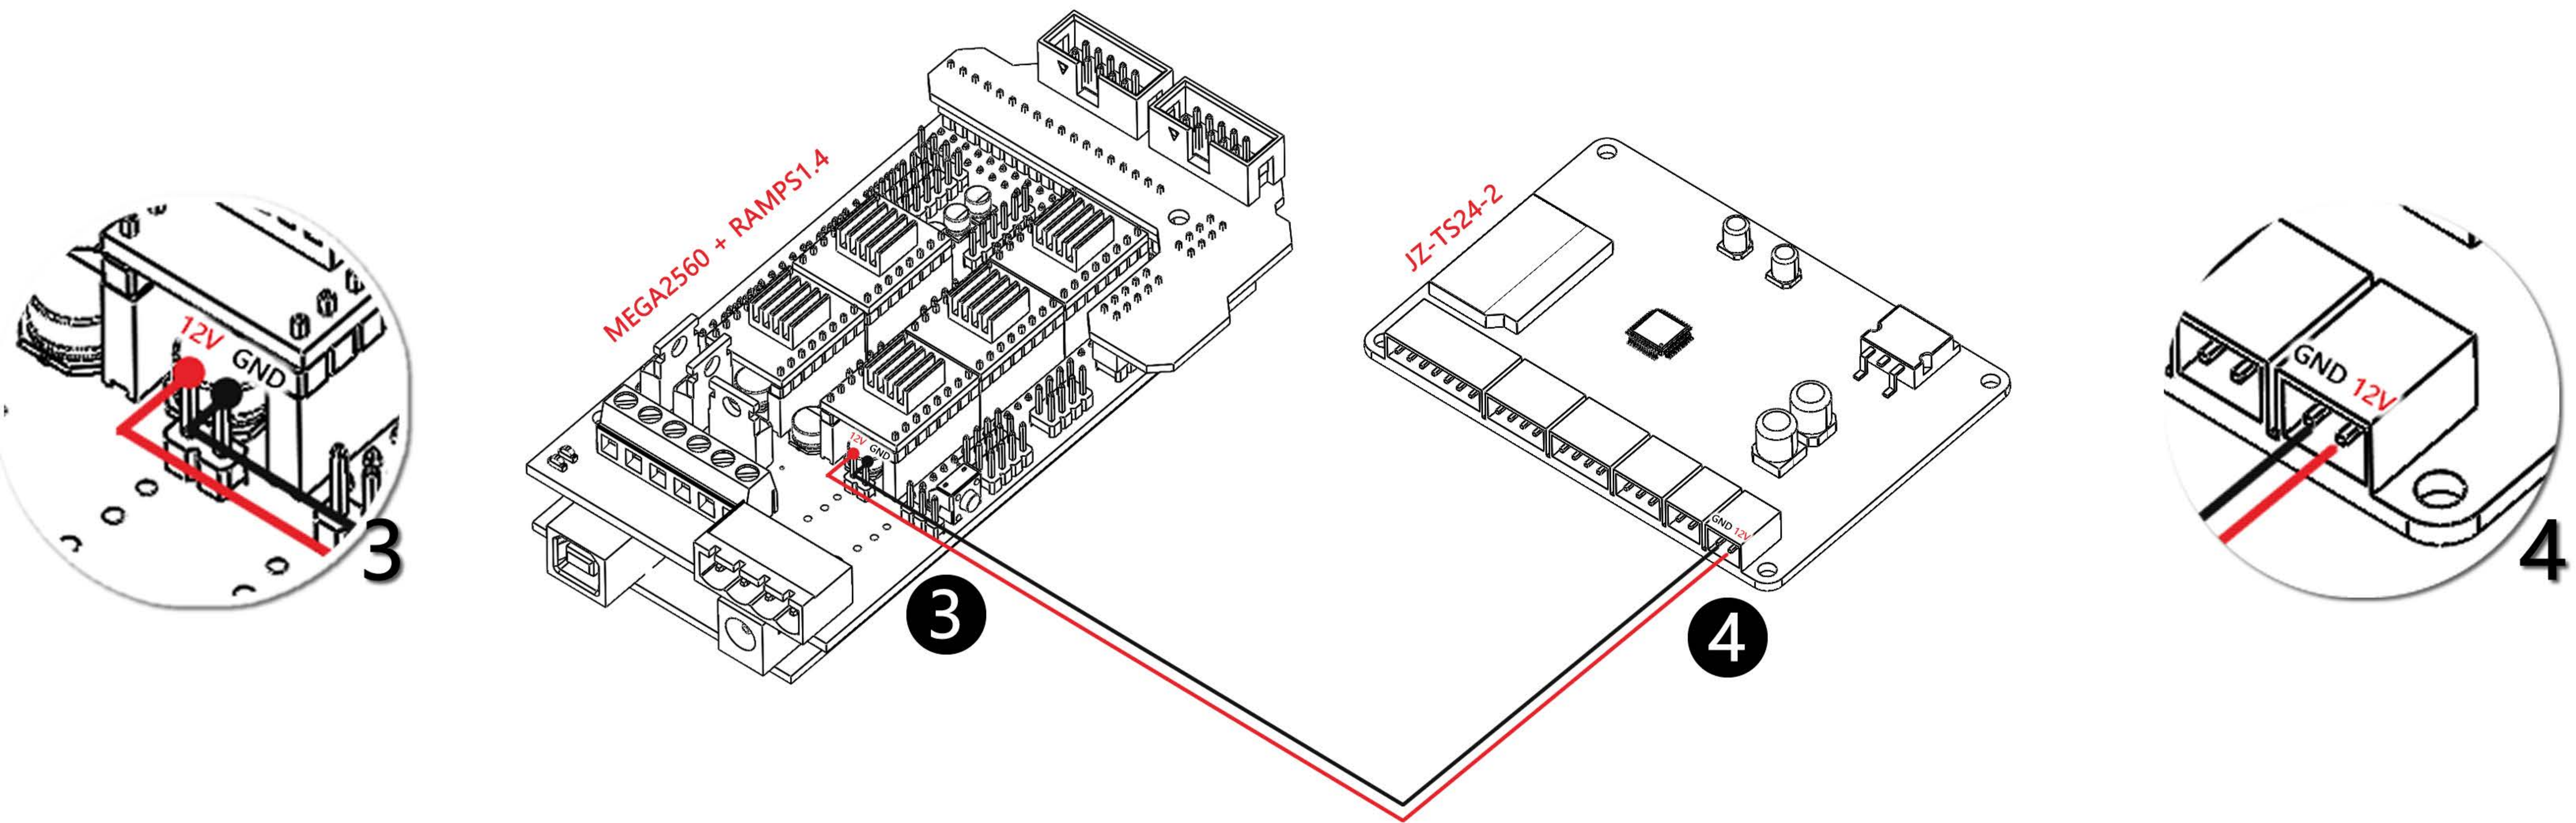

## Part3: OneKey Reset

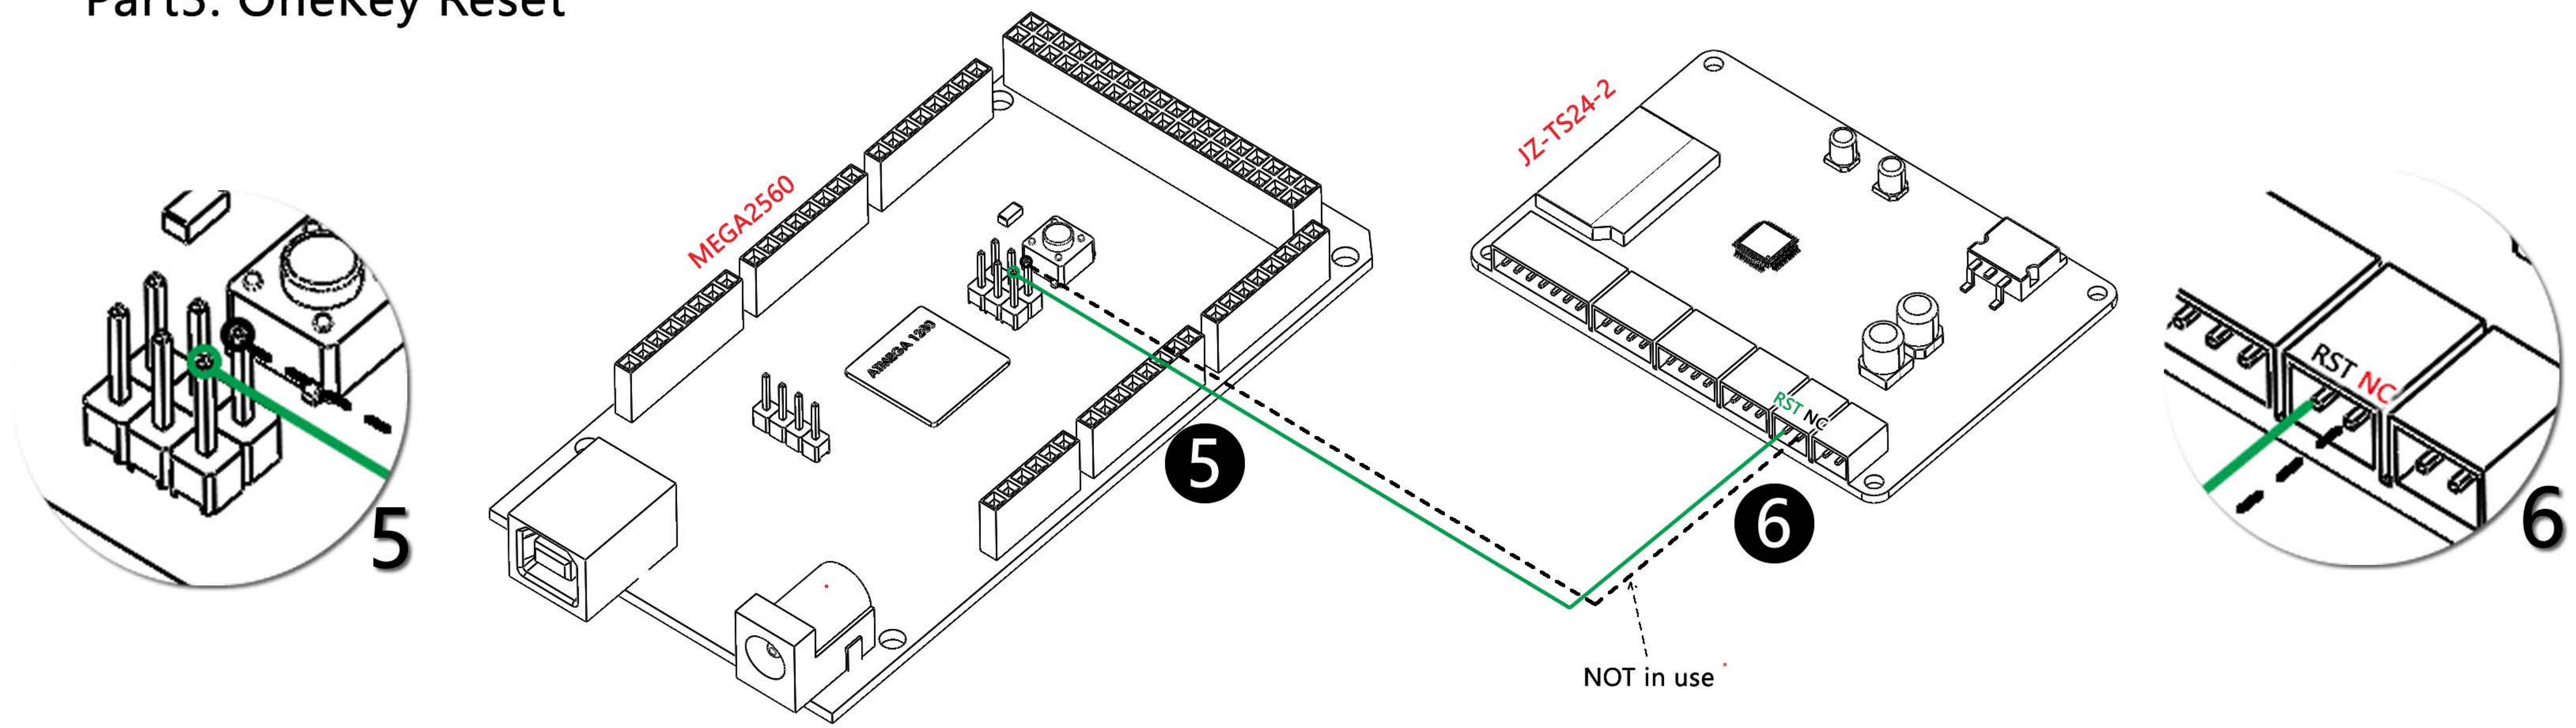

## Part4: Auto Power Off

