

AXI4-Stream BFM – Quick Reference

axistream_transmit (data_array, [user_array], msg, clk, axistream_if, [scope, [msg_id_panel, [config]]])

Example (tdata'length = 16) : axistream_transmit ((x"D0", x"D1", x"D2", x"D3"), (x"00", x"0A"), "Send a 4 byte packet with tuser=A at the 2nd (last) word", clk, axistream_if);

Example (tdata'length = 8) : axistream_transmit ((x"D0", x"D1", x"D2", x"D3"), (x"00", x"00", x"00", x"0A"), "Send a 4 byte packet with tuser=A at the 4th (last) word", clk, axistream_if);

Example: axistream_transmit(v_data_array(0 to 1), "Send two bytes", clk, axistream_if_m, C_SCOPE, shared_msg_id_panel, axistream_bfm_config);

Example: axistream_transmit(v_data_array(0 to v_numBytes-1), v_user_array(0 to v_numWords-1), "Send two bytes", clk, axistream_if_m, C_SCOPE, shared_msg_id_panel, axistream_bfm_config);

Suggested usage: axistream_transmit(v_data_array(0 to 1), v_user_array(0 to v_numWords-1), "send two bytes"); -- Suggested usage requires local overload (see section 5)

BFM



axistream_bfm_pkg.v

axistream_receive (data_array, data_length, user_array, msg, clk, axistream_if, [scope, [msg_id_panel, [config, [proc_name]]]])

Example: axistream_receive(v_received_data_array, v_received_length, v_received_user_array, "Receive packet", clk, axistream_if);

axistream_expect (exp_data_array, [exp_user_array], msg, clk, axistream_if, [alert_level, [scope, [msg_id_panel, [config]]]])

Example (tdata'length = 16) : axistream_expect((x"D0", x"D1", x"D2", x"D3"), (x"00", x"0A"), "Expect a 4 byte packet with tuser=A at the 2nd (last) word", clk, axistream_if);

Example (tdata'length = 8) : axistream_expect((x"D0", x"D1", x"D2", x"D3"), (x"00", x"00", x"00", x"0A"), "Expect a 4 byte packet with tuser=A at the 4th (last) word", clk, axistream_if);

Example: axistream_expect(v_data_array(0 to 1), "Expect a 2 byte packet, ignoring the tuser bits", clk, axistream_if);

Example: axistream_expect(v_data_array(0 to v_numBytes-1), v_user_array(0 to v_numWords-1), "Expect a packet, also check the tuser bits", clk, axistream_if);

Suggested usage: axistream_expect(v_data_array(0 to 1), v_user_array(0 to v_numWords-1), "Expect a packet"); -- Suggested usage requires local overload (see section 5)

init_axistream_if_signals (is_master, data_width, user_width)

Example: axistream_if <= init_axistream_if_signals(is_master => true, data_width => axistream_if.tdata'length, user_width => axistream_if.tuser'length); -- When the BFM is master

BFM Configuration record 't_axistream_bfm_config'

| Name | Type | C_AXISTREAM_BFM_CONFIG_DEFAULT |
|--------------------------|---------------|--------------------------------|
| max_wait_cycles | natural | 10 |
| max_wait_cycles_severity | t_alert_level | ERROR |
| clock_period | time | 0 ns |
| check_packet_length | boolean | false |
| protocol_error_severity | t_alert_level | ERROR |
| ready_low_at_word_num | integer | 0 |
| ready_low_duration | integer | 0 |
| ready_default_value | std_logic | '0' |
| id_for_bfm | t_msg_id | ID_BFM |
| id_for_bfm_wait | t_msg_id | ID_BFM_WAIT |
| id_for_bfm_poll | t_msg_id | ID_BFM_POLL |

Signal record 't_axistream_if'

| Name | Type |
|--------|------------------|
| tdata | std_logic_vector |
| tkeep | std_logic_vector |
| tuser | std_logic_vector |
| tvalid | std_logic |
| tlast | std_logic |
| tready | std_logic |

BFM non-signal parameters

| Name | Type | Example(s) | Description |
|--------------|------------------------|------------------------------------|---|
| data_array | t_slv8_array | x"D0" & x"D1" | <p>A byte array containing the packet data to be sent or the data received. Regardless of the width of axistream_if.tdata, each data_array entry is 8-bit wide.</p> <p>data_array(0) is sent/received first. data_array(data_array'high) is sent/received last. For clarity, data_array is required to be ascending: For example defined by the test sequencer as follows :</p> <pre>variable v_data_array : t_slv8_array(0 to c_max_bytes-1);</pre> |
| user_array | t_user_array | x"01" & x"02" | <p>Sideband data to send or has been received via the tuser signal.</p> <p>The number of entries in user_array equals the number of data <u>words</u> to be transmitted (i.e. number of clock cycles). If 16 bytes shall be sent, and there are 8 bytes transmitted per word, the user_array has 2 entries.</p> <p>The number of bits actually used in each user_array entry depends on the width of axistream_if.tuser.</p> <p>Note: If axistream_if.tuser is wider than 8, increase the value of the constant c_max_tuser_bits in axistream_bfm_pkg. This is where the t_user_array is defined.</p> |
| data_length | natural | 2 | The number of bytes received, i.e. the number of valid bytes in dataArray. |
| alert_level | t_alert_level | ERROR or TB_WARNING | Set the severity for the alert that may be asserted by the procedure. |
| msg | string | "Set state active on peripheral 1" | A custom message to be appended in the log/alert. |
| scope | string | "AXISTREAM BFM" | <p>A string describing the scope from which the log/alert originates.</p> <p>In a simple single sequencer typically "AXISTREAM BFM". In a verification component typically "AXISTREAM_VVC".</p> |
| msg_id_panel | t_msg_id_panel | shared_msg_id_panel | Optional msg_id_panel, controlling verbosity within a specified scope. Defaults to a common message ID panel defined in the UVVM-Util adaptations package. |
| config | t_axistream_bfm_config | C_AXISTREAM_BFM_CONFIG_DEFAULT | Configuration of BFM behaviour and restrictions. See section 0 for details. |

BFM signal parameters

| Name | Type | Description |
|--------------|----------------|---|
| clk | std_logic | The clock signal used to read and write data in/out of the AXI4-Stream BFM. |
| axistream_if | t_axistream_if | <p>See table "Signal record 't_axistream_if'".</p> <p>Note: the tuser element must be present even when it is not used (connected to DUT).</p> <p>If the record signal connects to a Slave BFM, where the tuser element is an input, assign a dummy value:</p> <pre>axistream_if.tuser <= (others => '0');</pre> <p>Regardless, the tuser check will be skipped when the test sequencer calls axistream_expect() without providing the user_array argument.</p> |

For more information on the AXI4-Stream signals, refer to "AMBA® 4 AXI4-Stream Protocol Specification", document number ARM IHI 0051A (ID030510), available from ARM

BFM features

This BFM supports the following subset of the AXI4-Stream protocol :

- Continuous aligned stream, as described in chapter 1.2.2 in AMBA 4 AXI4-Stream protocol Specification (ARM IHI 0051A)

The following subset of the AXI4-Stream interface is supported:

| Signal | Source | Width | Supported by BFM | Description |
|---------|--------|--------------------|------------------|--|
| ACLK | Clock | 1 | Yes | Sample on the rising edge |
| ARESETn | Reset | - | No | BFM doesn't control the reset. |
| TVALID | Master | 1 | Yes | A transfer takes place when both TVALID and TREADY are asserted |
| TREADY | Slave | 1 | Yes | A transfer takes place when both TVALID and TREADY are asserted |
| TDATA | Master | n*8 | Yes | Data word. The width must be a multiple of bytes. |
| TSTRB | Master | - | No | Mark Position Byte. Not typically used. For marking packet remainders, TKEEP rather than TSTRB is used. |
| TKEEP | Master | TDATA'length/8 | Partly | When TKEEP is '0', it indicates a null byte that can be removed from the stream. The same limitations apply for this BFM as in the Xilinx ug761 AXI Reference Guide : Null bytes are only used for signalling the number of valid bytes in the last data word. Leading or intermediate Null bytes are not supported. |
| TLAST | Master | 1 | Yes | When '1', it indicates that the tdata is the last word of the packet. |
| TID | Master | - | No | Indicates different streams of data. Usually used by routing infrastructures |
| TDEST | Master | - | No | Provides routing info. Usually used by routing infrastructures |
| TUSER | Master | 1:c_max_tuser_bits | Yes | Sideband info transmitted alongside the data stream. Note 1 : The TUSER signal must exist in the axistream_if record even when it is not used by DUT. See the "BFM signal parameters" table above. Note 2: If axistream_if.tuser is wider than c_max_tuser_bits in axistream_bfm_pkg, increase the value of the constant c_max_tuser_bits. |

BFM details

1 BFM procedure details

| Procedure | Description |
|--|---|
| <code>axistream_transmit()</code> | <p><code>axistream_transmit (data_array, [user_array], msg, clk, axistream_if, [scope, [msg_id_panel, [config]]])</code></p> <p>The <code>axistream_transmit ()</code> procedure transmits a packet on the AXI interface.</p> <p>The packet length and data are defined by the "data_array" argument. data_array is a byte array. One byte is sent per data_array entry, but multiple bytes may be sent each word (clock cycle). data_array(0) is sent first. data_array(data_array'high) is sent last. Byte locations within the data word are defined in chapter 2.3 in "AMBA® 4 AXI4-Stream Protocol Specification", document number ARM IHI 0051A (ID030510), available from ARM.</p> <p>The side band data signal TUSER is defined by the optional user_array argument. If user_array is omitted, all the TUSER bits are zero during every data word transmitted.</p> <p>At the last word, the BFM asserts the TLAST bit, and it asserts the TKEEP bits corresponding to the data bytes that are valid within the word. At all other words, all TKEEP bits are '1', thus the BFM supports only "continuous aligned stream", as described in chapter 1.2.2 in AMBA 4 AXI4-Stream protocol Specification (ARM IHI 0051A).</p> |
| <code>axistream_receive()</code> | <p><code>axistream_receive(data_array, data_length, user_array, msg, clk, axistream_if, [scope, [msg_id_panel, [config]]])</code></p> <p>The <code>axistream_receive()</code> procedure receives a packet on the AXI interface. The received packet data is stored in the data_array output, which is a byte array. data_array'length can be longer than the actual packet received, so that you can call receive() without knowing the length to be expected. The packet length (number of bytes received) is indicated in the packet_length output.</p> <p>The side band data signal tuser is stored in user_array, which has one entry per data word (clock cycle).</p> <p>When TLAST = '1' the TKEEP bits are used to determine the number of valid data bytes within the last word. At all other words, the BFM checks that all TKEEP bits are '1', since the BFM supports only "continuous aligned stream" described in chapter 1.2.2 in AMBA 4 AXI4-Stream protocol Specification (ARM IHI 0051A)</p> |
| <code>axistream_expect()</code> | <p><code>axistream_expect(exp_data_array, [exp_user_array], msg, clk, axistream_if, [alert_level, [scope, [msg_id_panel, [config]]]])</code></p> <p>Calls the <code>axistream_receive()</code> procedure, then compares the received data with <code>exp_data_array</code>. If <code>exp_user_array</code> is provided as an argument, the <code>exp_user_array</code> is compared to the received <code>user_array</code>.</p> |
| <code>init_axistream_if_signals()</code> | <p><code>init_axistream_if_signals(is_master, data_width, user_width)</code></p> <p>This function initializes the AXI4-Stream interface. All the BFM outputs are set to zeros ('0')</p> |

2 BFM Configuration record

Type name: t_axistream_bfm_config

| Name | Type | C_AXISTREAM_BFM_CONFIG_DEFAULT | Description |
|--------------------------|---------------|--------------------------------|---|
| max_wait_cycles | natural | 10 | Used for setting the maximum cycles to wait before an alert is issued when waiting for ready or valid signals from the DUT. |
| max_wait_cycles_severity | t_alert_level | failure | The above timeout will have this severity |
| clock_period | time | 10 ns | Period of the clock signal. |
| check_packet_length | boolean | false | When true, receive() will check that tlast is set at dataArray'high. Set to false when length of packet to be received is unknown. |
| protocol_error_severity | t_alert_level | ERROR | severity if protocol errors are detected |
| ready_low_at_word_num | integer | 0 | When the Slave BFM shall deassert ready while receiving the packet |
| ready_low_duration | integer | 0 | Number of clock cycles to deassert ready |
| ready_default_value | std_logic | '0' | Determines the ready output value while the Slave BFM is idle |
| id_for_bfm | t_msg_id | ID_BFM | The message ID used as a general message ID in the BFM |
| id_for_bfm_wait | t_msg_id | ID_BFM_WAIT | The message ID used for logging waits in the BFM |
| id_for_bfm_poll | t_msg_id | ID_BFM_POLL | The message ID used for logging polling in the BFM |

3 Additional Documentation

For additional documentation on the AXI4-Stream standard, refer to "AMBA® 4 AXI4-Stream Protocol Specification", document number ARM IHI 0051A (ID030510), available from ARM.

4 Compilation

The AXI4-Stream BFM may only be compiled with VHDL 2008. It is dependent on the UVVM Utility Library (UVVM-Util), which is only compatible with VHDL 2008. See the separate UVVM-Util documentation for more info. After UVVM-Util has been compiled, the axistream_bfm_pkg.vhd BFM can be compiled into any desired library.

4.1 Simulator compatibility and setup

This BFM has been compiled and tested with Modelsim version 10.3d and Riviera-PRO version 2015.10.85.

For required simulator setup see UVVM-Util Quick reference.

5 Local BFM overloads

A good approach for better readability and maintainability is to make simple, local overloads for the BFM procedures in the TB process.

This allows calling the BFM procedures with the key parameters only

e.g.

```
axistream_transmit(v_data_array(0 to 1), v_user_array(0), "Send two bytes");
```

rather than

```
axistream_transmit(v_data_array(0 to 1), v_user_array(0), "Send two bytes", clk, axistream_if_m, C_SCOPE, shared_msg_id_panel, axistream_bfm_config);
```

By defining the local overload as e.g.:

```
procedure axistream_transmit (
  constant data_array  : in t_slv8_array;
  constant user_array  : in t_user_array;
  constant msg         : in string) is
begin
  axistream_transmit(data_array,                -- keep as is
                    user_array,                 -- keep as is
                    msg,                       -- keep as is
                    clk,                      -- Clock signal
                    axistream_if,             -- Signal must be visible in local process scope
                    C_SCOPE,                 -- Just use the default
                    shared_msg_id_panel,      -- Use global, shared msg_id_panel
                    C_AXISTREAM_BFM_CONFIG_LOCAL); -- Use locally defined configuration or C_AXISTREAM_BFM_CONFIG_DEFAULT
end;
```

Using a local overload like this also allows the following – if wanted:

- Set up defaults for constants. May be different for two overloads of the same BFM
- Apply dedicated message_id_panel to allow dedicated verbosity control

IMPORTANT

This is a simplified Bus Functional Model (BFM) for AXI4-Stream. The given BFM complies with the basic AXI4-Stream protocol and thus allows a normal access towards an AXI4-Stream interface. This BFM is not AXI4-Stream protocol checker. For a more advanced BFM please contact Bitvis AS at support@bitvis.no

INTELLECTUAL PROPERTY

Disclaimer: This IP and any part thereof are provided "as is", without warranty of any kind, express or implied, including but not limited to the warranties of merchantability, fitness for a particular purpose and noninfringement. In no event shall the authors or copyright holders be liable for any claim, damages or other liability, whether in an action of contract, tort or otherwise, arising from, out of or in connection with this IP.