
















playing 

all modes	album party and story book mode	story book mode
 play/pause	 previous track	 next track
 vol. down	 vol. up	 goto track 1

idle 


card erase	card setup
<p>known card</p>  enter mode	<p>new card</p>  cancel setup
 cancel mode	 jump 10 folders/tracks backward
	 jump 10 folders/tracks forward
	 announce folder/track number

startup    **erase EEPROM**
 (use with care)




spielt ab


alle Modi



Play/Pause




Lautstärke verringern




Lautstärke erhöhen

Modi: Album, Party und Hörbuch




Voriger Track




Nächster Track

Modus: Hörbuch




gehe zu Track 1




pausiert

bekannte Karte




Karte löschen bestätigen




Karte löschen abbrechen

Karte löschen


neue Karte




Setup abbrechen




10 Ordner/Dateien zurückspringen



10 Ordner/Dateien vorspringen



Auswahl bestätigen



Ordner-/Dateinummer ansagen

Kartensetup

Startvorgang    EEPROM löschen (Vorsicht!)