























	all modes	album, party and story book mode	story book mode
 playing	 play/pause	 optional  or	 5s goto track 1
	 vol. down  vol. up	 2s previous track  2s next track	

	parents- or sub menu	card setup
 idle	 announce current option	 announce folder/track number or mode
	 previous option	 confirm selection
	 2s jump 10 options back	 2s jump 10 folders/tracks back
	 5s Menü öffnen	 2s cancel setup
	 next option	
	 2s exit menu	
	 2s jump 10 options forward	 2s jump 10 folders/tracks forward

startup



erase EEPROM  
(use with care!)