


README_ZH

• 开发板选择注意事项

开发板请选择“ESP32S3 Dev Module”



点击工具选项，红框内的配置请参考下图进行配置

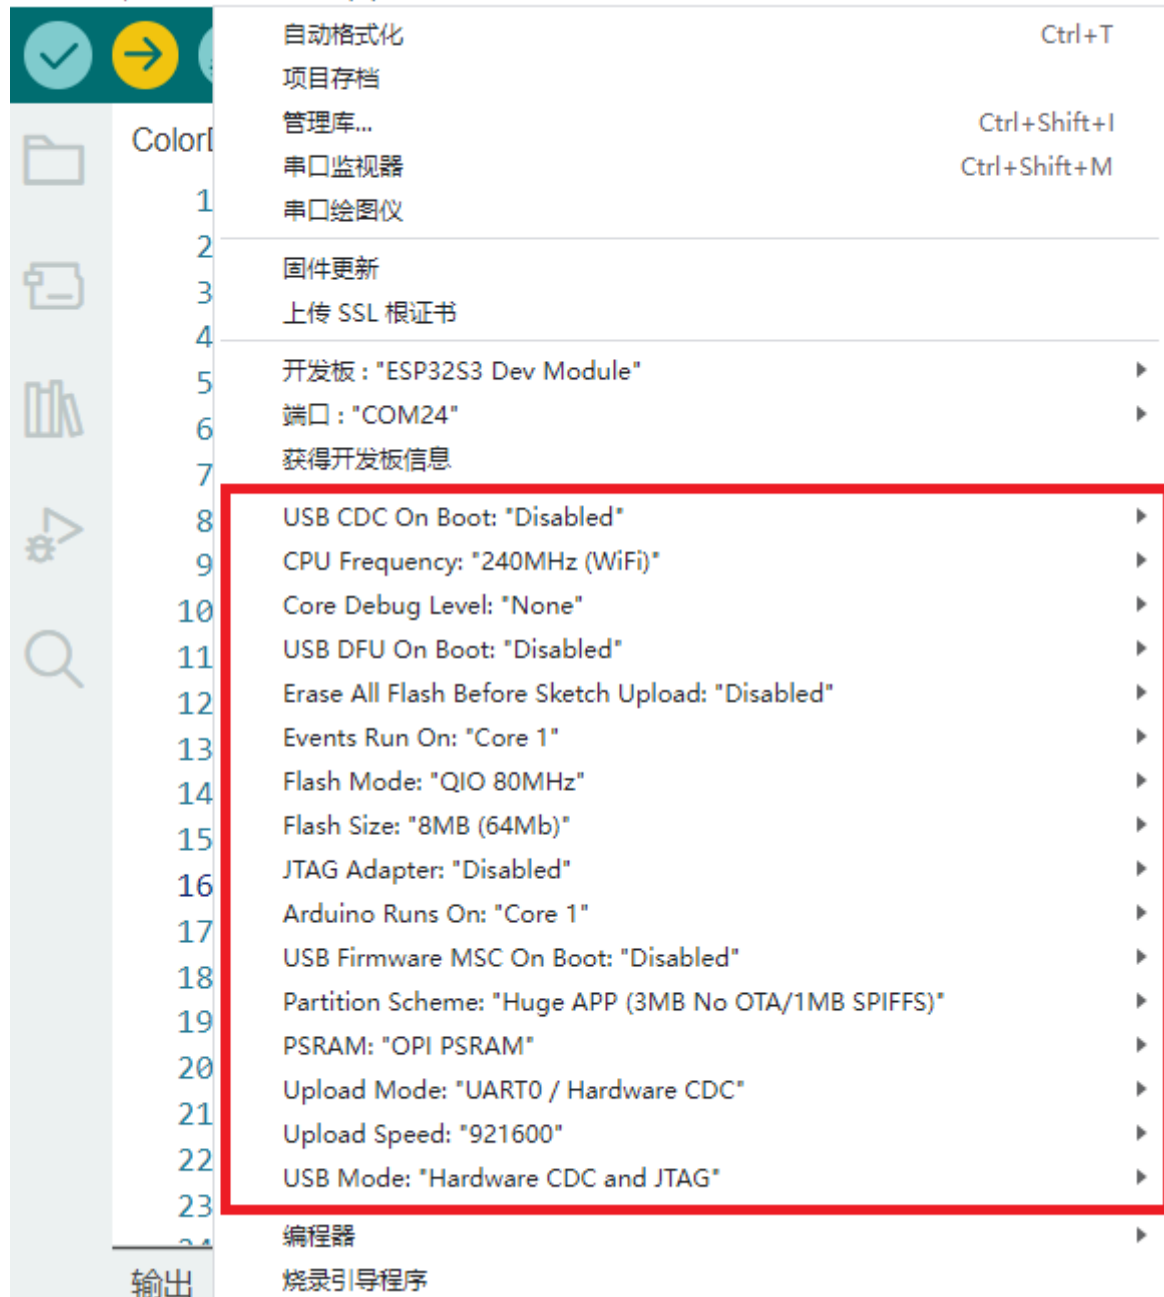

The screenshot shows the Arduino IDE interface. The 'Tools' menu is open, displaying various options. A red rectangular box highlights the 'Development Board' section, which includes the following items:

- USB CDC On Boot: "Disabled"
- CPU Frequency: "240MHz (WiFi)"
- Core Debug Level: "None"
- USB DFU On Boot: "Disabled"
- Erase All Flash Before Sketch Upload: "Disabled"
- Events Run On: "Core 1"
- Flash Mode: "QIO 80MHz"
- Flash Size: "8MB (64Mb)"
- JTAG Adapter: "Disabled"
- Arduino Runs On: "Core 1"
- USB Firmware MSC On Boot: "Disabled"
- Partition Scheme: "Huge APP (3MB No OTA/1MB SPIFFS)"
- PSRAM: "OPI PSRAM"
- Upload Mode: "UART0 / Hardware CDC"
- Upload Speed: "921600"
- USB Mode: "Hardware CDC and JTAG"

Below the highlighted section, the 'Burn Bootloader' option is visible. The left sidebar shows the 'Tools' menu icon (a wrench) and the 'Output' window icon (a magnifying glass).