

Diagram illustrating the wiring connections for the ECU (ECM) and various sensors.

ECU (ECM) Terminals: A29, B4, C4, B1, C2, C3, B8, B9.

Sensors and Components:

- REAR OXYGEN SENSOR:** Terminals 4, 3, 1, 2.
- FRONT OXYGEN (A/F) SENSOR:** Terminals 4, 3, 1, 2.
- Relay:** B34.
- Fuse:** 50.
- Ground:** E22.
- Ground:** E4.
- Ground:** E23.
- Ground:** E.

Legend:

- *1:** LHD MODEL : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 5 AND 6
RHD MODEL : 2
- *2:** LHD MODEL : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 5 AND 6
RHD MODEL : 1
- *3:** LHD MODEL : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 3, 4, 7 AND 8
RHD MODEL : 3

