



SO	: SOHC MODEL
DO	: DOHC MODEL

MAIN FUSE BOX (M/B)

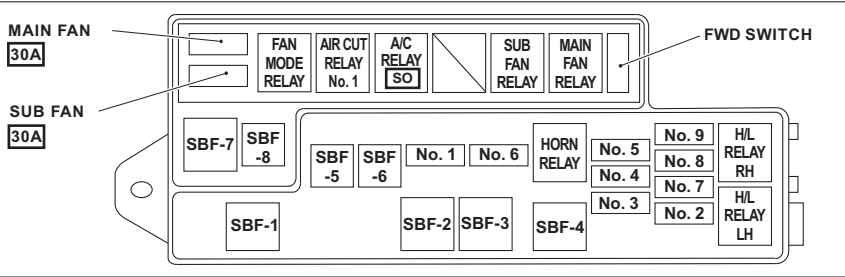

SECONDARY AIR FUSE BOX (DOHC MODEL)

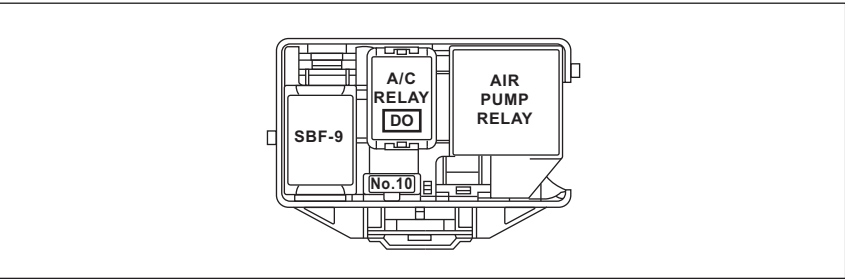

FUSE & RELAY BOX (F/B)

