



SO : SOHC MODEL
DO : DOHC MODEL

MAIN FUSE BOX (M/B)

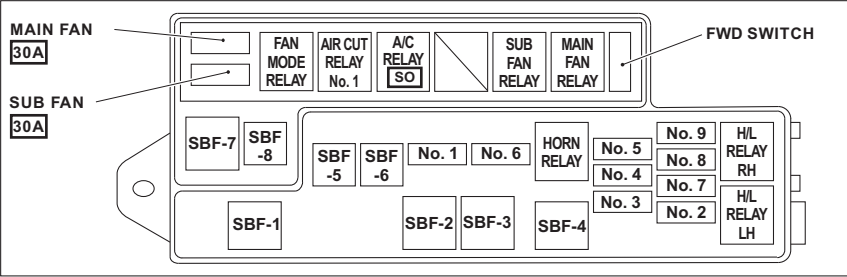

SECONDARY AIR FUSE BOX (DOHC MODEL)

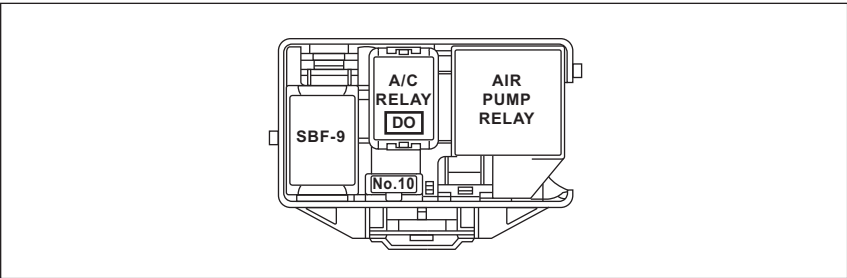

FUSE & RELAY BOX (F/B)

