


WARNING !

- Niryo Stepper 1 and Niryo Stepper 2 connectors are reserved. Don't use them.
- Only connect Dynamixel XL-320 motors to the XL-320 connector.
- Only connect Dynamixel XL-430 motors to the XL-430 connector.
- DO NOT short-circuit SW1 and SW2 pins.
- Absolute operating voltage of GPIO1 and GPIO2 connectors is 5V. External expander applications must operate at 5V. DO NOT short-circuit 5V and GND pins with any other pins.

! Wrong connection or wrong input voltage could permanently damage the robot or external micro-controller !

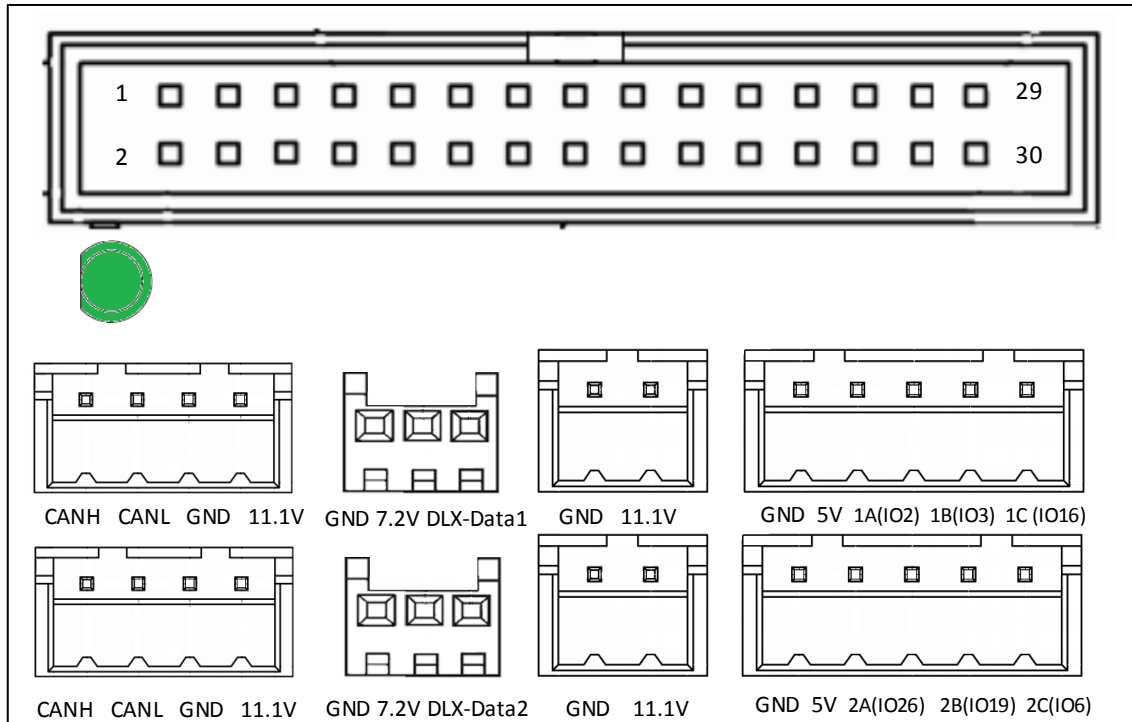

Niryo Stepper 1	XL-320	SW1	GPIO1
Niryo Stepper 2	XL-430	SW2	GPIO2