

# Toyota Giraffe Switch Settings Flowchart


Start Here

Switch positions are written from left to right.  
Switch settings are represented by 0 and 1.

0 is OFF  
1 is ON

OFF is Down  
ON is Up

Comma Power is an optional device that provides constant power from the OBD port to the Giraffe, Panda, and EON, even when the car is off. It prevents the Cruise Fault error.

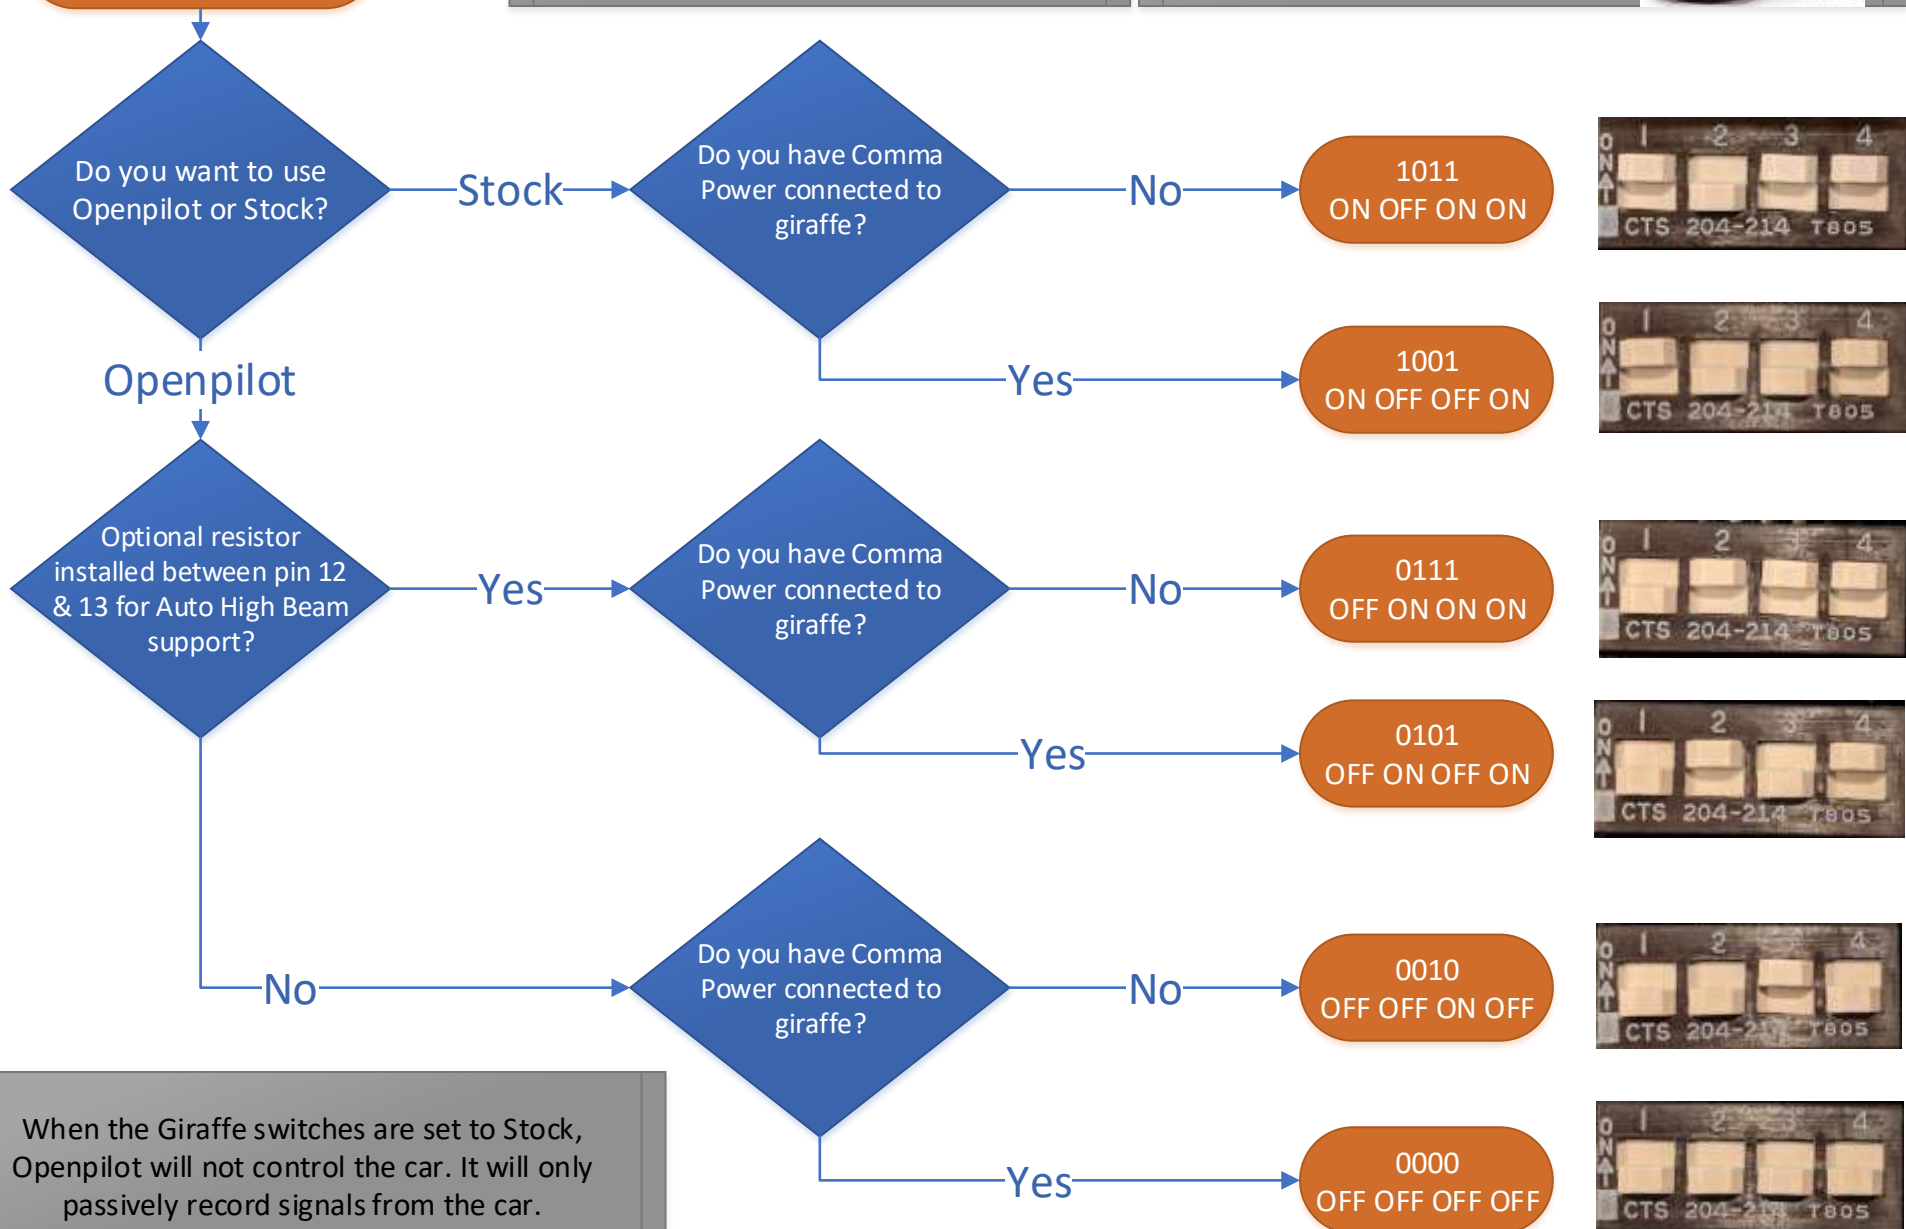

When the Giraffe switches are set to Stock, Openpilot will not control the car. It will only passively record signals from the car.