



Position of Parts in Engine Compartment (LHD 1VD-FTV)

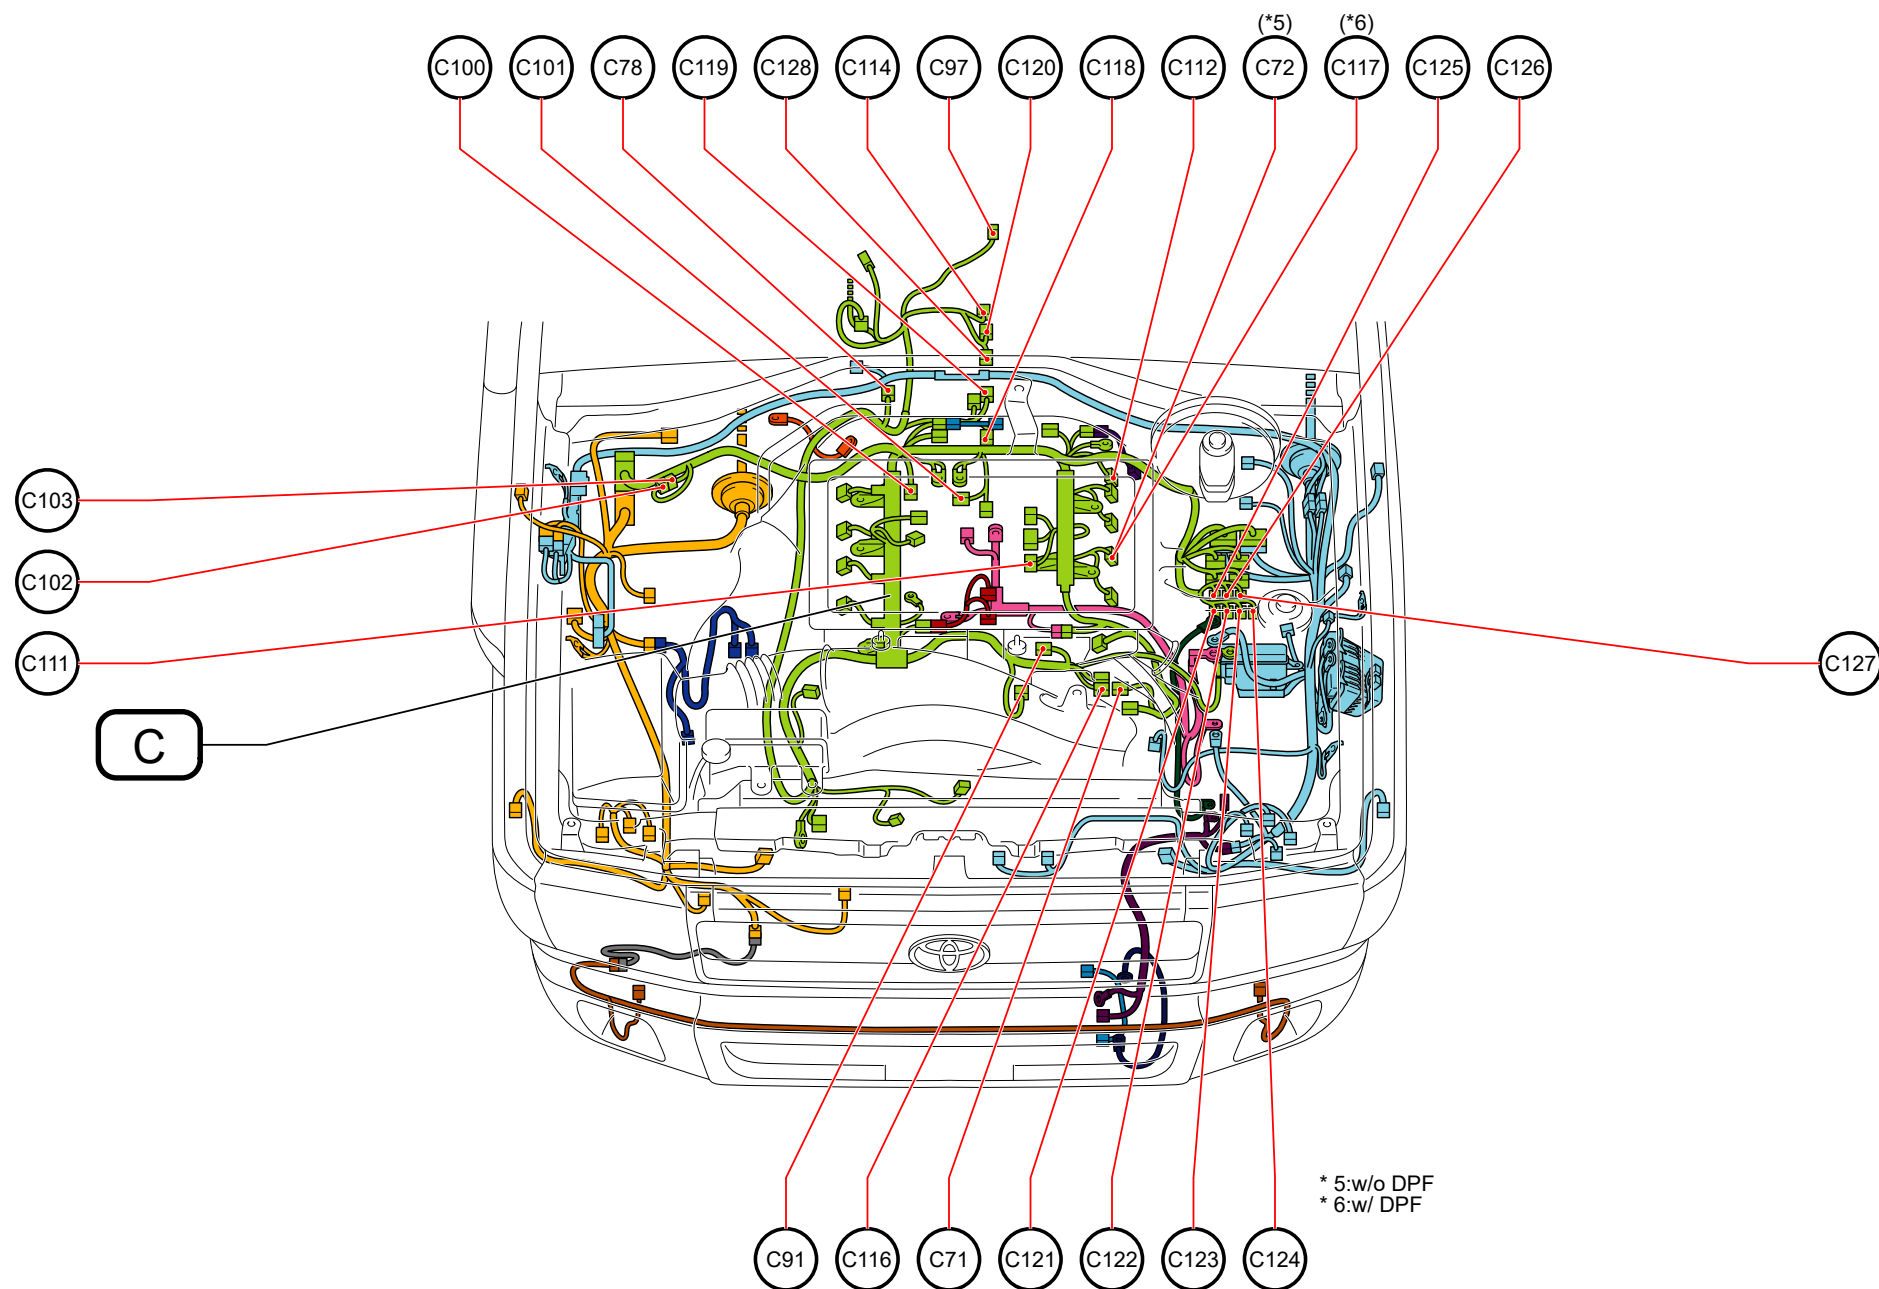


C71	Engine Oil Level Sensor
C72	Injector Assembly No. 4
C78	Shift Position Switch
C91	Electric Vacuum Regulating Valve Assembly (EGR)
C97	Fuel Sender Gage Assembly (Front)
C100	Fuel Pressure Sensor
C101	Diesel Turbo Pressure Sensor
C102	Short Connector
C103	Short Connector
C111	No. 1 Vacuum Switching Valve Assembly (for EGR Cooler Bypass Valve)
C112	Injector Assembly No. 8
C114	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C116	Diesel Engine Coolant Temperature Sensor
C117	Injector Assembly No. 4
C118	No. 1 Exhaust Gas Temperature Sensor
C119	No. 2 Exhaust Gas Temperature Sensor
C120	DPF Temperature Sensor (No. 3 Exhaust Gas Temperature Sensor)
C121	Injector Driver (EDU) (No. 1)
C122	Injector Driver (EDU) (No. 1)
C123	Injector Driver (EDU) (No. 1)
C124	Injector Driver (EDU) (No. 1)
C125	Injector Driver (EDU) (No. 2)
C126	Injector Driver (EDU) (No. 2)
C127	Injector Driver (EDU) (No. 2)
C128	Differential Pressure Sensor


Position of Parts in Engine Compartment (LHD 1VD-FTV)

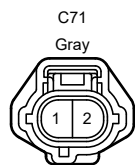


90980-11235

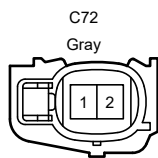


90980-11875

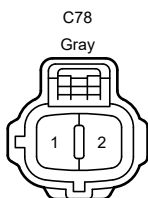


90980-10923

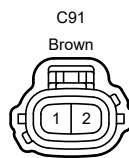


90980-11162
(1HZ)

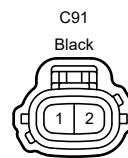


90980-11162
(1VD-FTV)

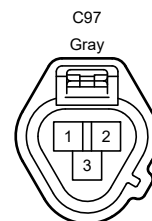

90980-11016

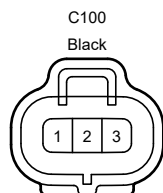

90980-10845

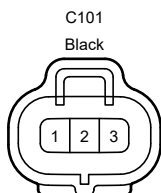


90980-10845




90980-11178




90980-11177

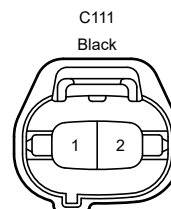

90980-11156

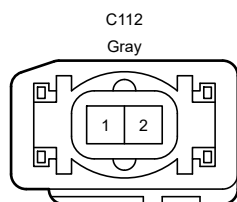


90980-12747

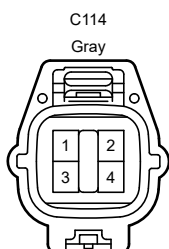

90980-11930




90980-10735

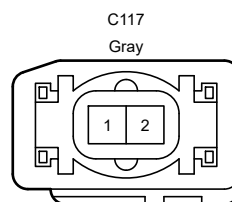

90980-12747



90980-11273

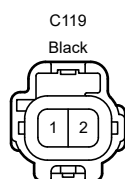


90980-11273




90980-11273




90980-11285

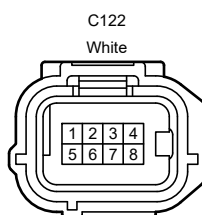


90980-12520

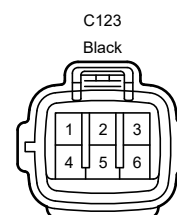


90980-11194

 


90980-11028

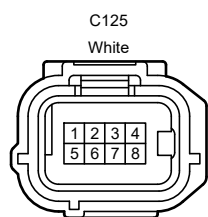


90980-12520

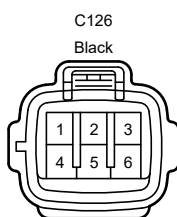

90980-11194

 

90980-11028

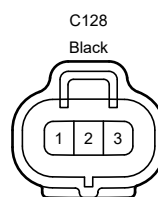

90980-10845