


Position of Parts in Engine Compartment (RHD 1VD-FTV)

- * 3:Before Aug. 2016 Production
- * 4:From Aug. 2016 Production
- * 5:Australia Pick-Up
- * 6:Except *5
- * 9:Except Australia Large Type
- * 10:Australia Large Type

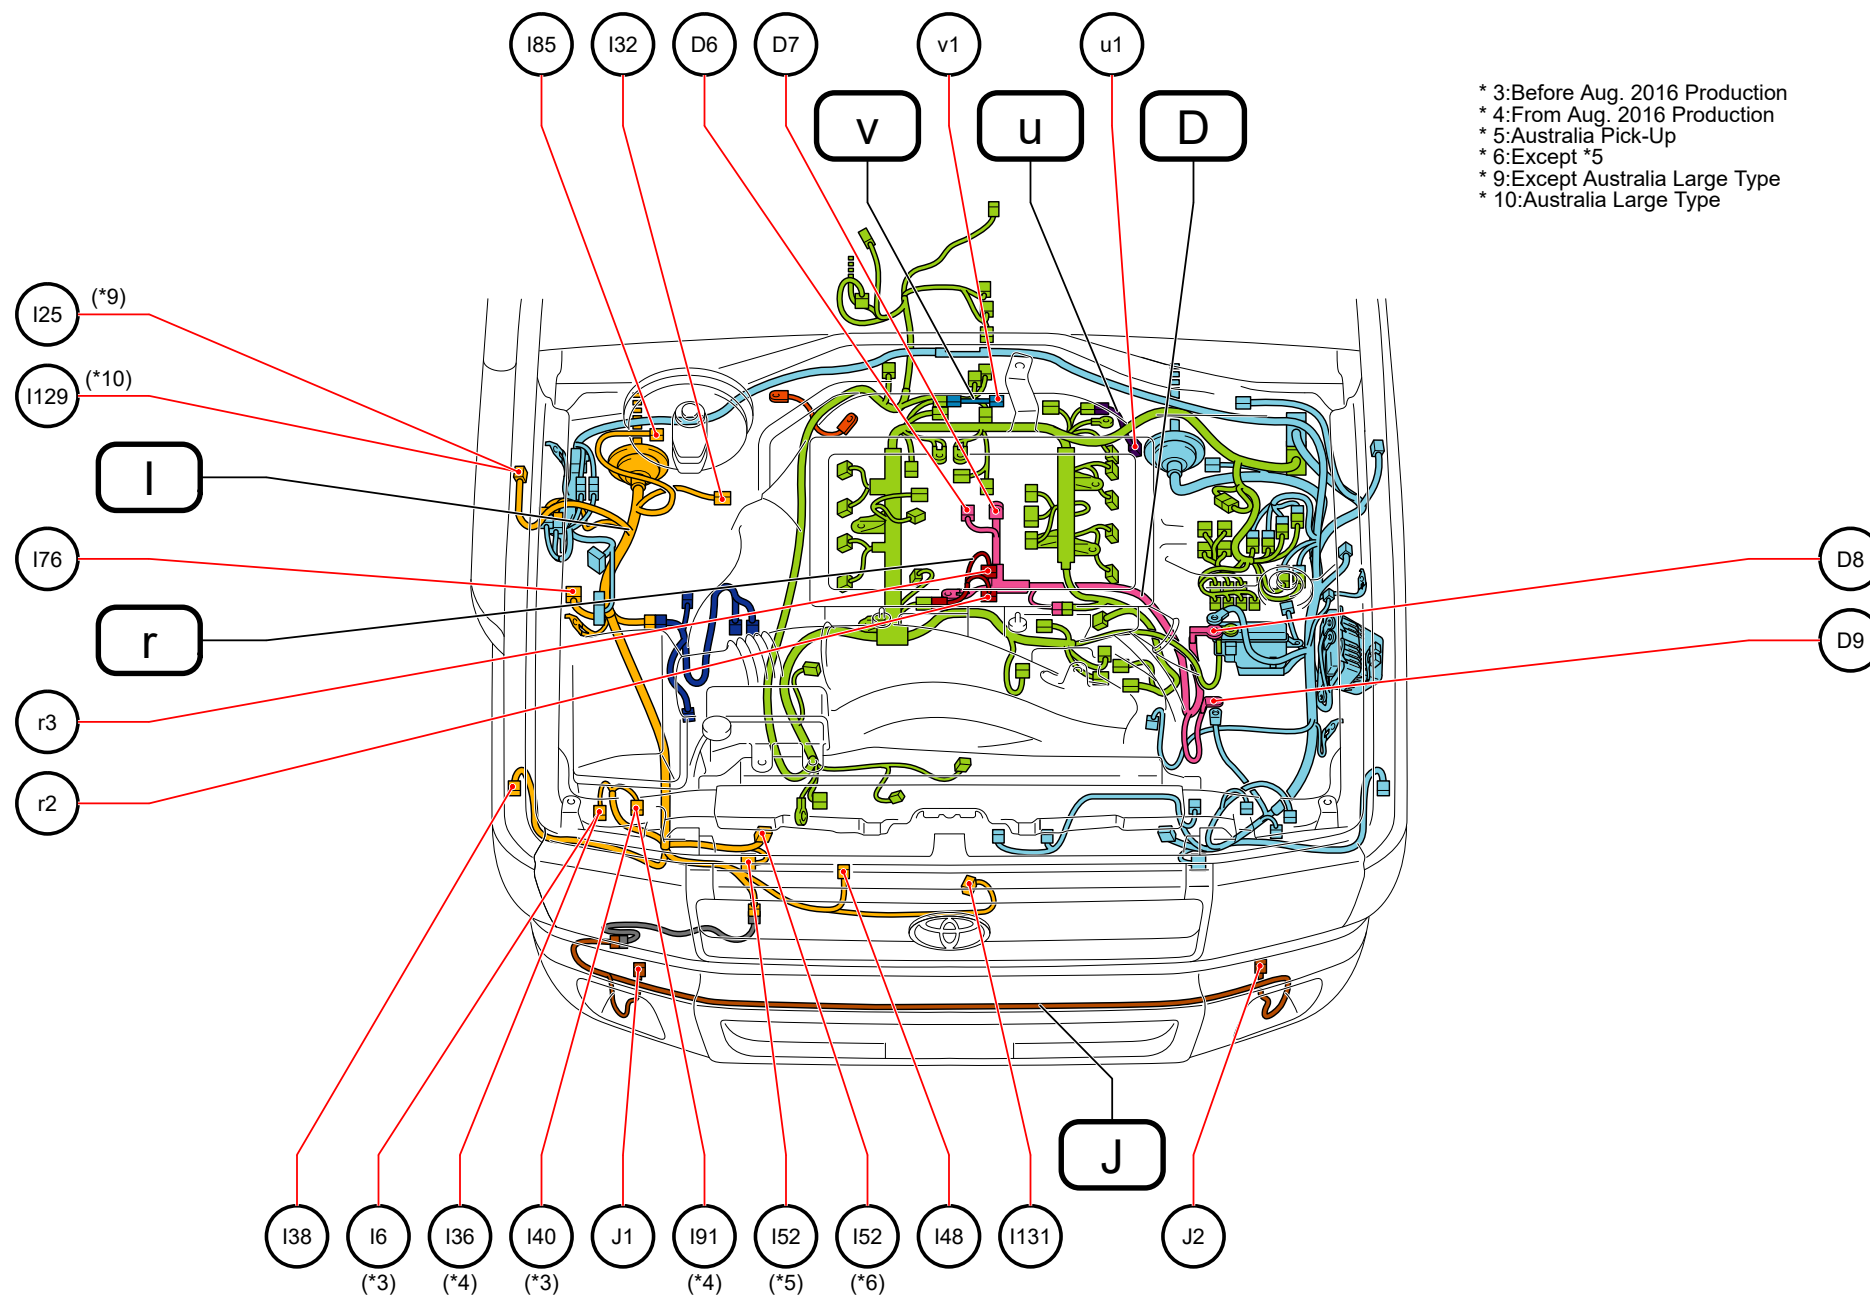

Position of Parts in Engine Compartment (RHD 1VD-FTV)

D6	Starter Assembly
D7	Starter Assembly
D8	Battery (Main)
D9	Battery (Main)
I6	Front Blower Motor (Heater Blower Case)
I25	Side Turn Signal Light Assembly RH
I32	Vacuum Warning Switch Assembly
I36	Headlight Assembly RH
I38	Headlight Assembly RH
I40	Headlight Assembly RH
I48	Thermistor Assembly
I52	Front Airbag Sensor RH
I76	Fuse Block Assembly
I85	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
I91	Headlight Assembly RH
I129	Side Turn Signal Light Assembly RH
I131	Millimeter Wave Radar Sensor Assembly
J1	Fog Light Assembly RH
J2	Fog Light Assembly LH
r2	Suction Control Valve
r3	Fuel Temperature Sensor
u1	Exhaust Fuel Addition Injector Assembly
v1	Pressure Discharge Valve Assembly (Common Rail Assembly)

Position of Parts in Engine Compartment (RHD 1VD-FTV)

