



Position of Parts in Engine Compartment (LHD 1GR-FE)

* 1: Before Aug. 2016 Production
* 2: From Aug. 2016 Production
* 3: Except Middle East
* 4: Middle East

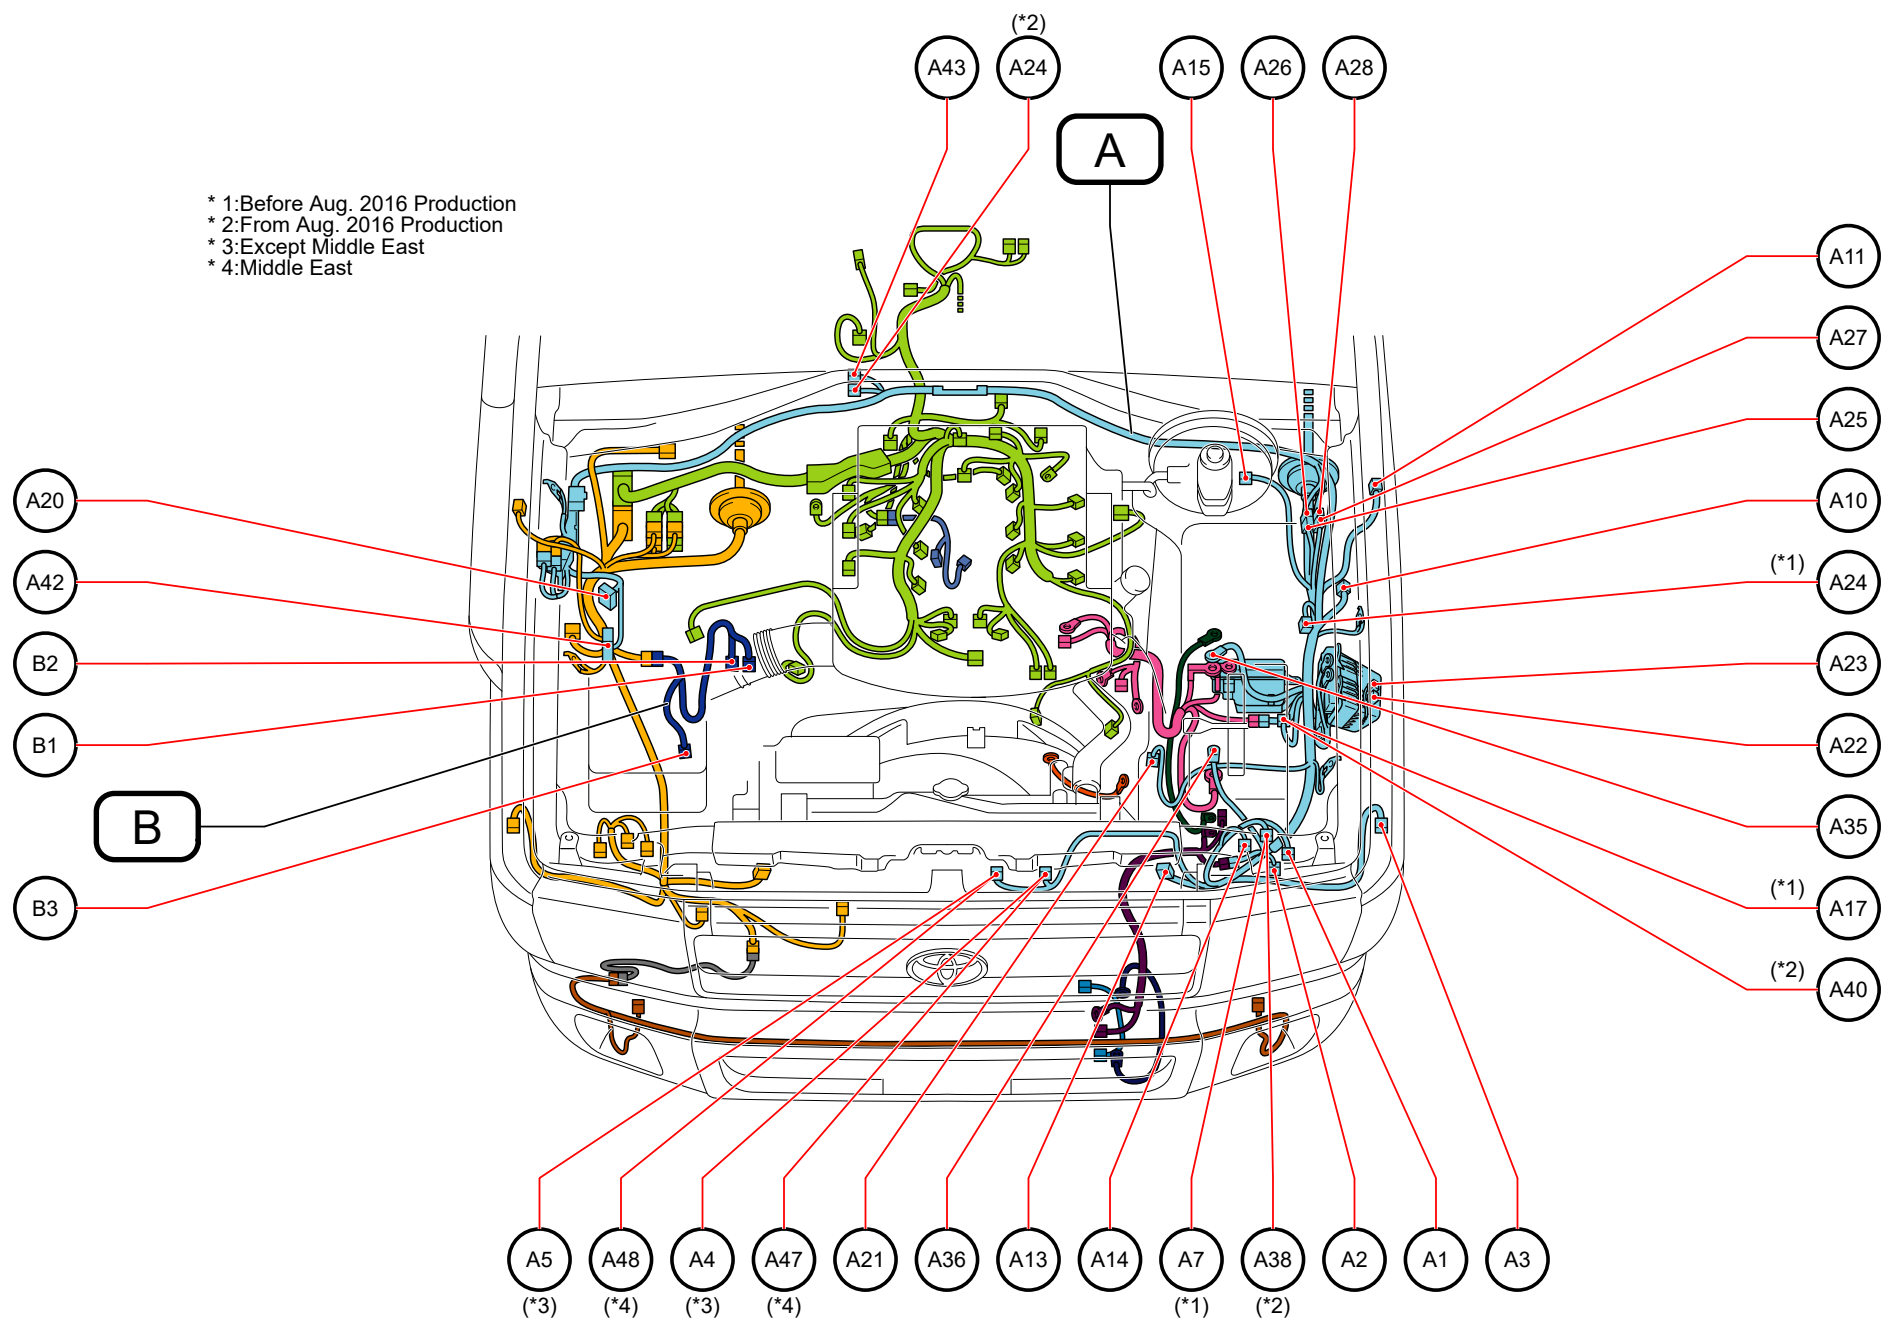


A1	Headlight Assembly LH
A2	Windshield Washer Motor and Pump Assembly
A3	Headlight Assembly LH
A4	Low Pitched Horn Assembly
A5	High Pitched Horn Assembly
A7	Headlight Assembly LH
A10	Antenna with Holder Assembly
A11	Side Turn Signal Light Assembly LH
A13	Front Airbag Sensor LH
A14	Headlight Assembly LH
A15	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
A17	Fuel Pump Resistor Assembly
A20	Brake Actuator Assembly
A21	Front Speed Sensor LH (Skid Control Sensor Wire LH)
A22	No. 1 Junction Connector
A23	No. 2 Junction Connector
A24	No. 3 CAN Junction Connector
A25	Brake Vacuum Check Valve Assembly
A26	Brake Vacuum Check Valve Assembly
A27	Brake Vacuum Check Valve Assembly
A28	Brake Vacuum Check Valve Assembly
A35	Battery (Main)
A36	Battery (Main)
A38	Headlight Assembly LH
A40	Fuel Pump Resistor Assembly
A42	Brake Actuator Assembly
A43	No. 34 Junction Connector
A47	Low Pitched Horn Assembly
A48	High Pitched Horn Assembly
B1	No. 2 Differential Lock Shift Actuator
B2	Front Differential Lock Position Switch
B3	Front Speed Sensor RH (Skid Control Sensor Wire RH)


Position of Parts in Engine Compartment (LHD 1GR-FE)

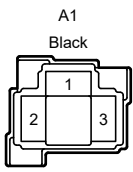


90980-11314
(High, Low)

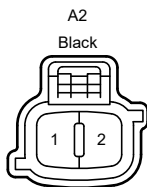


90980-11019

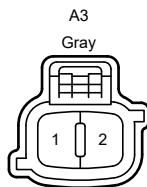


90980-11019
(Front Turn Signal Light)

 

90980-10619

 

90980-10619

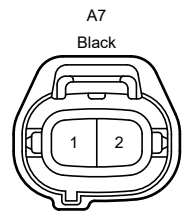


90980-12634
(Front Clearance Light)




90980-10988




90980-11162

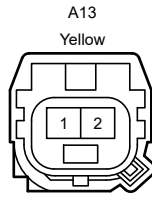


90980-12490

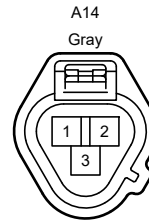


90980-11016
(Headlight Beam Level Control Actuator)

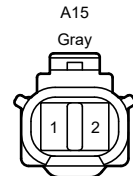


90980-11207

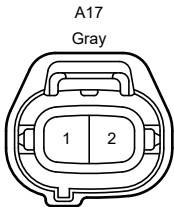


90980-12634

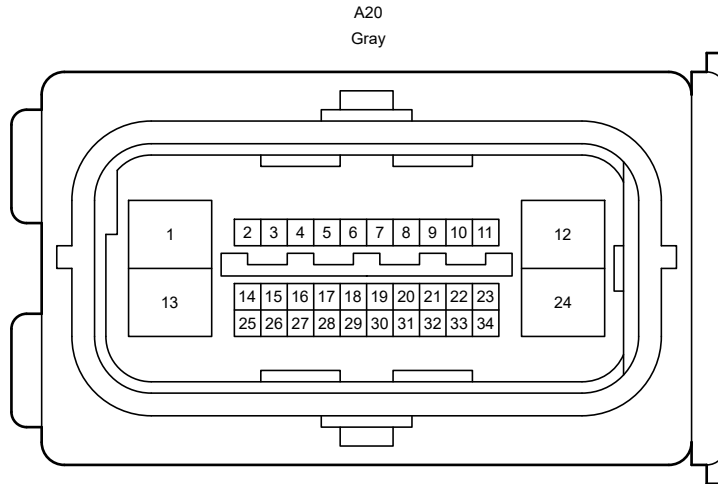


90980-12687

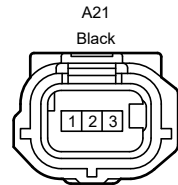

90980-12353

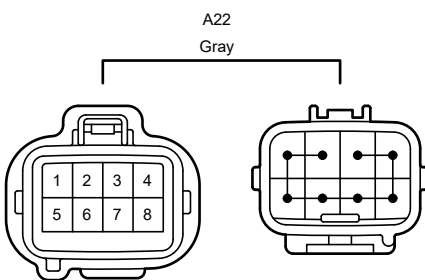

90980-10897

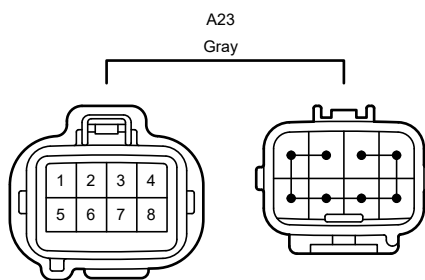

90980-10897

Position of Parts in Engine Compartment (LHD 1GR-FE)

