



Position of Parts in Instrument Panel (RHD)

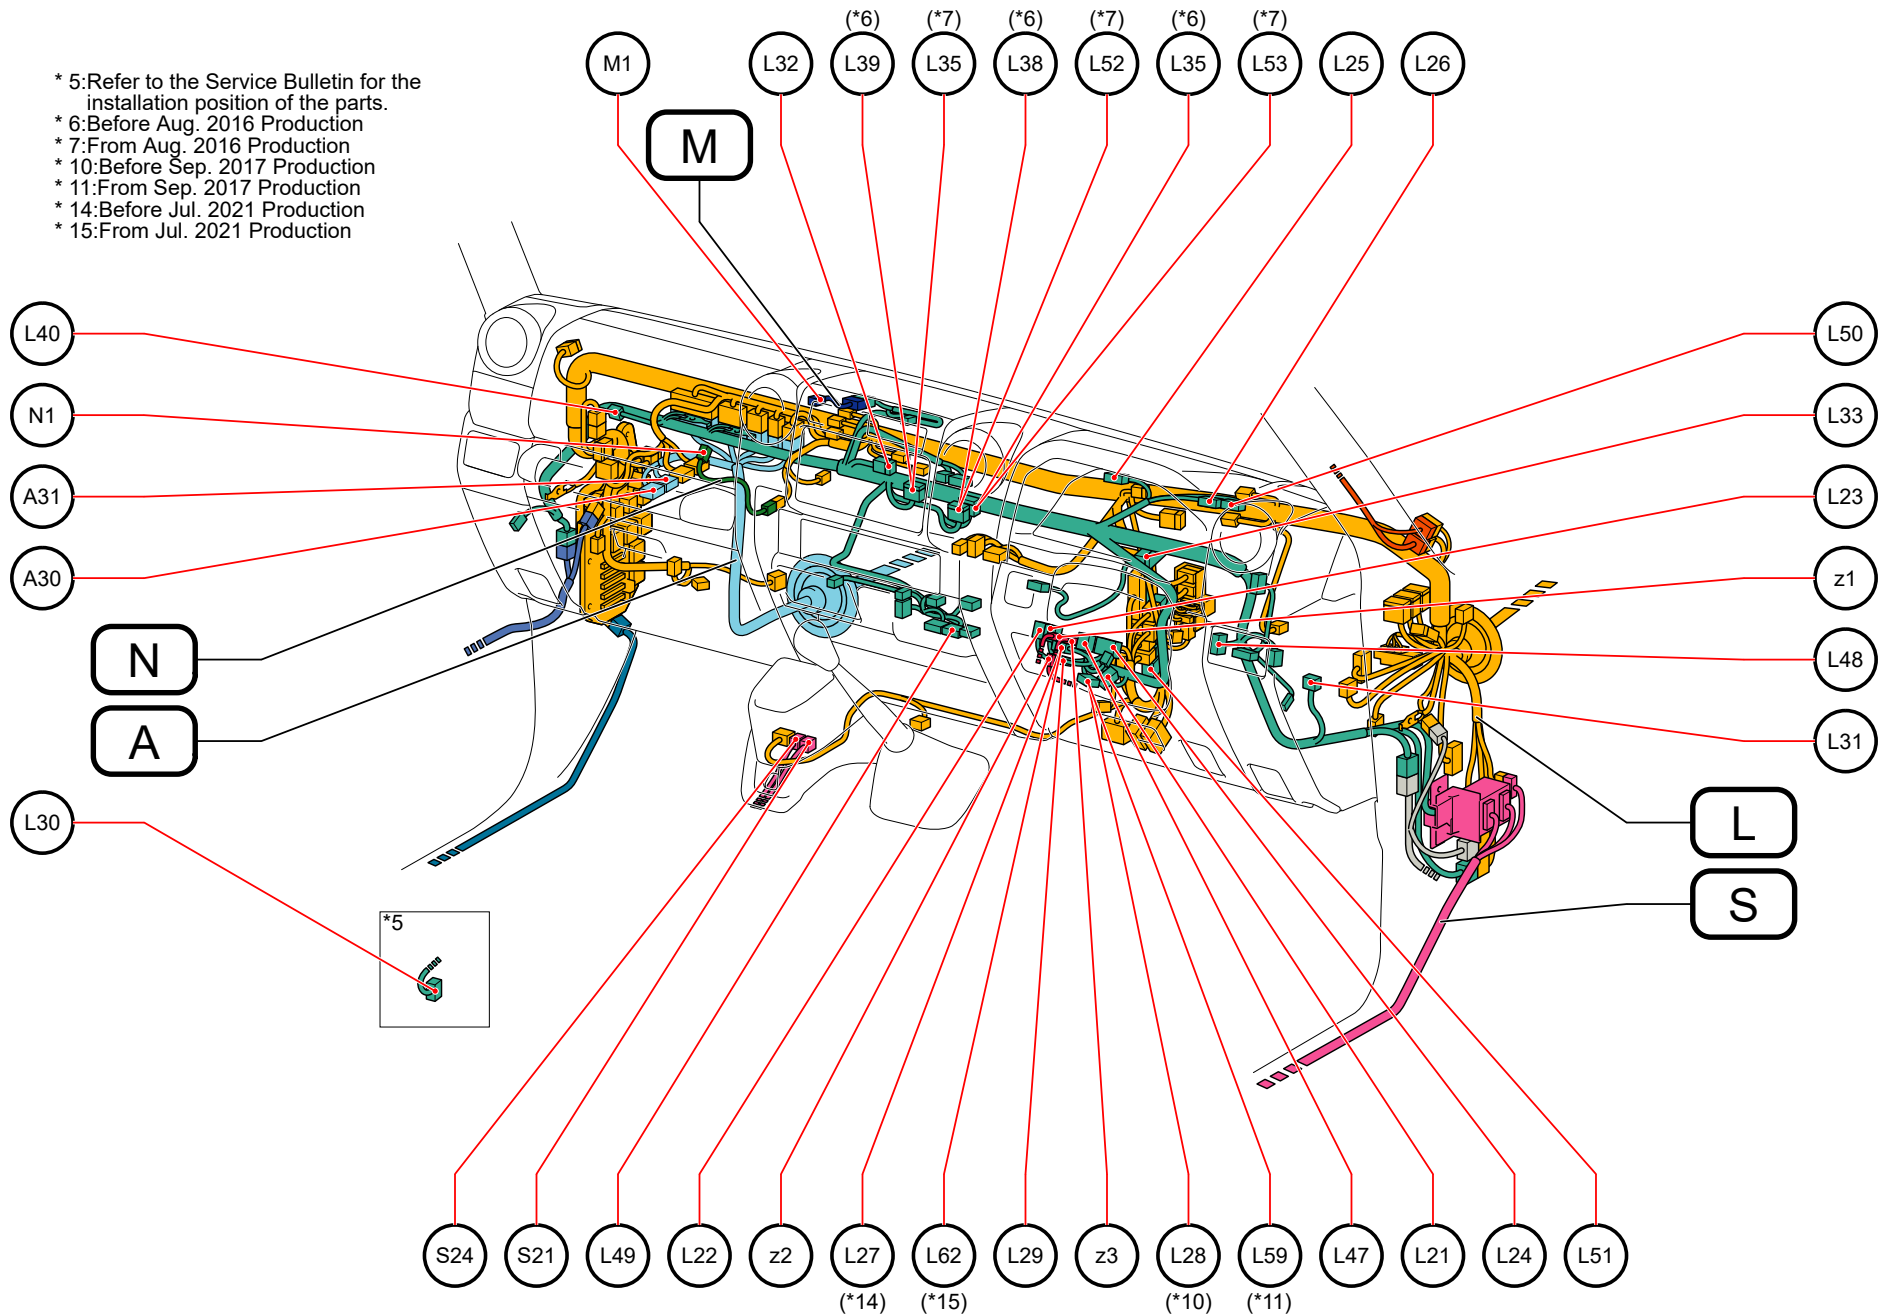


Position of Parts in Instrument Panel (RHD)

A30	Emission Control ECU
A31	Emission Control ECU
L21	Ignition or Starter Switch Assembly
L22	Windshield Wiper Switch Assembly
L23	Windshield Wiper Switch Assembly
L24	Headlight Dimmer Switch Assembly
L25	Combination Meter Assembly
L26	Combination Meter Assembly
L27	Spiral Cable Sub-Assembly
L28	Transponder Key Amplifier
L29	Spiral Cable Sub-Assembly
L30	Transponder Key ECU Assembly
L31	Door Control ECU with Receiver Assembly
L32	No. 24 Junction Connector
L33	No. 25 Junction Connector
L35	No. 27 Junction Connector
L38	No. 30 Junction Connector
L39	No. 31 Junction Connector
L40	Option Connector (Auto Antenna)
L47	Steering Sensor (Spiral Cable with Sensor Sub-Assembly)
L48	DPF Switch Assembly (DPR Switch Assembly)
L49	VSC Off Switch
L50	Combination Meter Assembly
L51	No. 25 Junction Connector
L52	No. 30 Junction Connector
L53	No. 31 Junction Connector
L59	Transponder Key Coil
L62	Spiral Cable Sub-Assembly
M1	Hazard Warning Signal Switch Assembly
N1	Front Passenger Side Squib Circuit (Instrument Panel Passenger Airbag Assembly)
S21	Airbag Sensor Assembly
S24	Airbag Sensor Assembly
z1	Horn Button Wire Sub-Assembly , Spiral Cable Sub-Assembly
z2	Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z3	Cruise Control Switch Wire , Spiral Cable Sub-Assembly


Position of Parts in Instrument Panel (RHD)

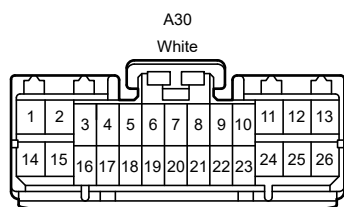


90980-11390

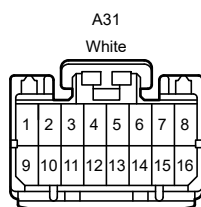


90980-11391

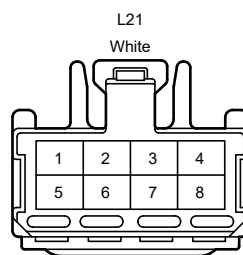


90980-11615

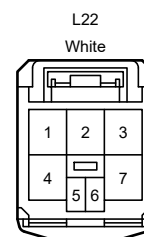


90980-12358

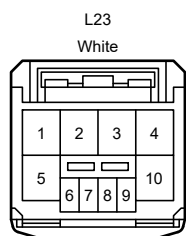


90980-12359

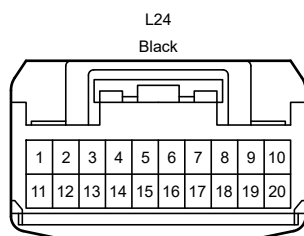


90980-12460

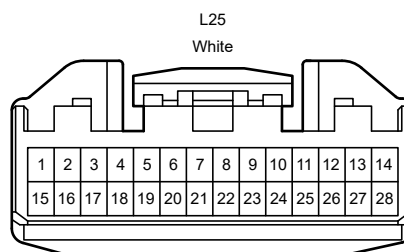


90980-12555

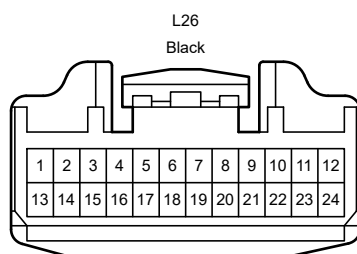


90980-12554

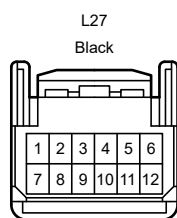


90980-12552

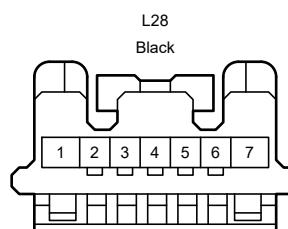


90980-12092

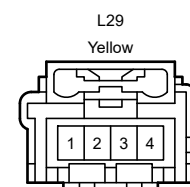


90980-12160

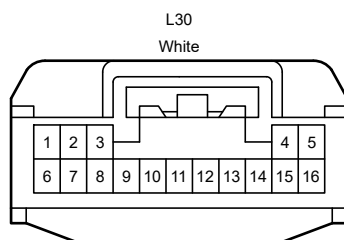



90980-12423

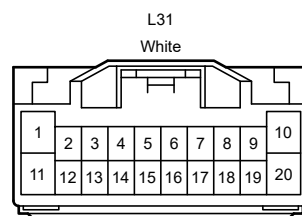


90980-12038

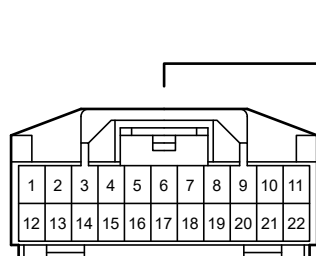













90980-11915

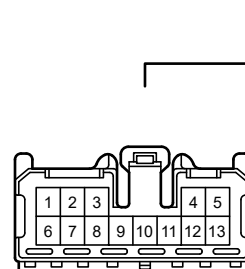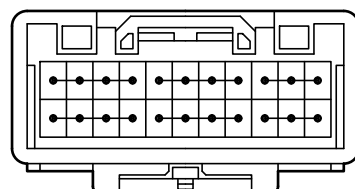

90980-12479

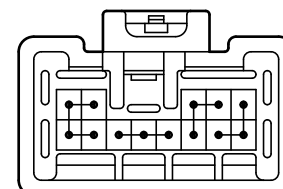

Position of Parts in Instrument Panel (RHD)

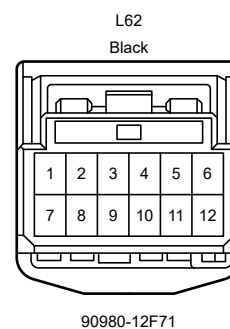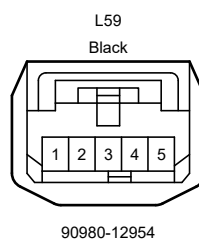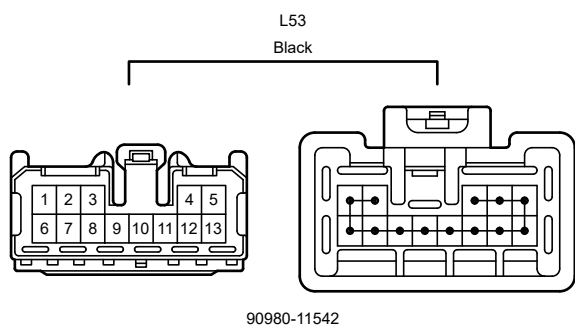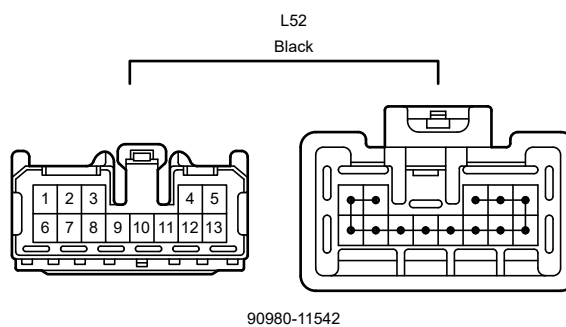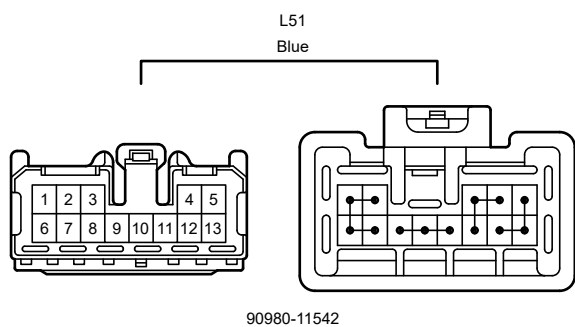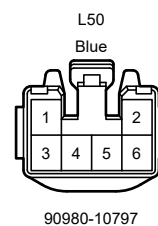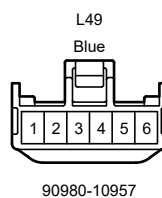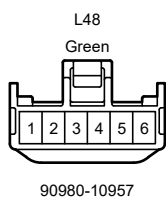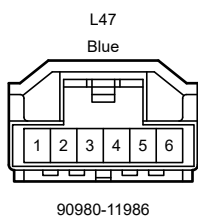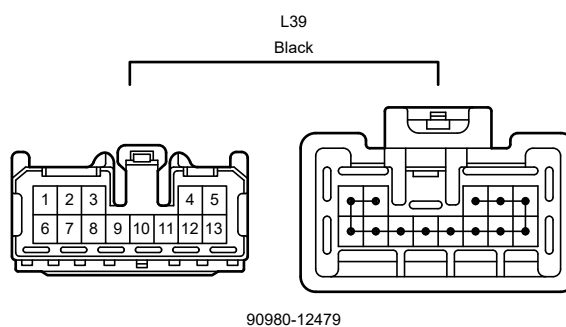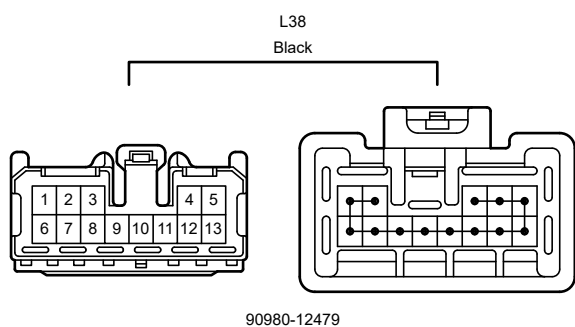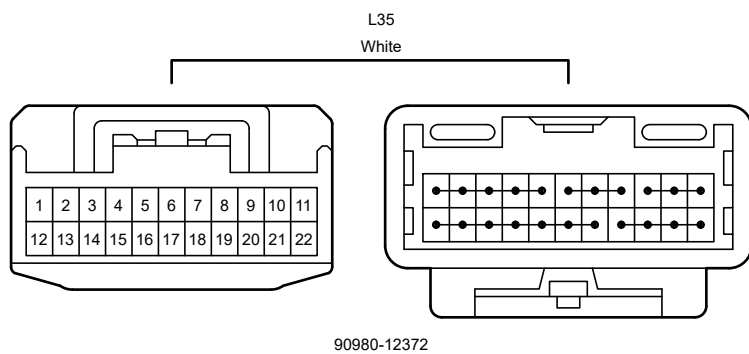

Position of Parts in Instrument Panel (RHD)

