

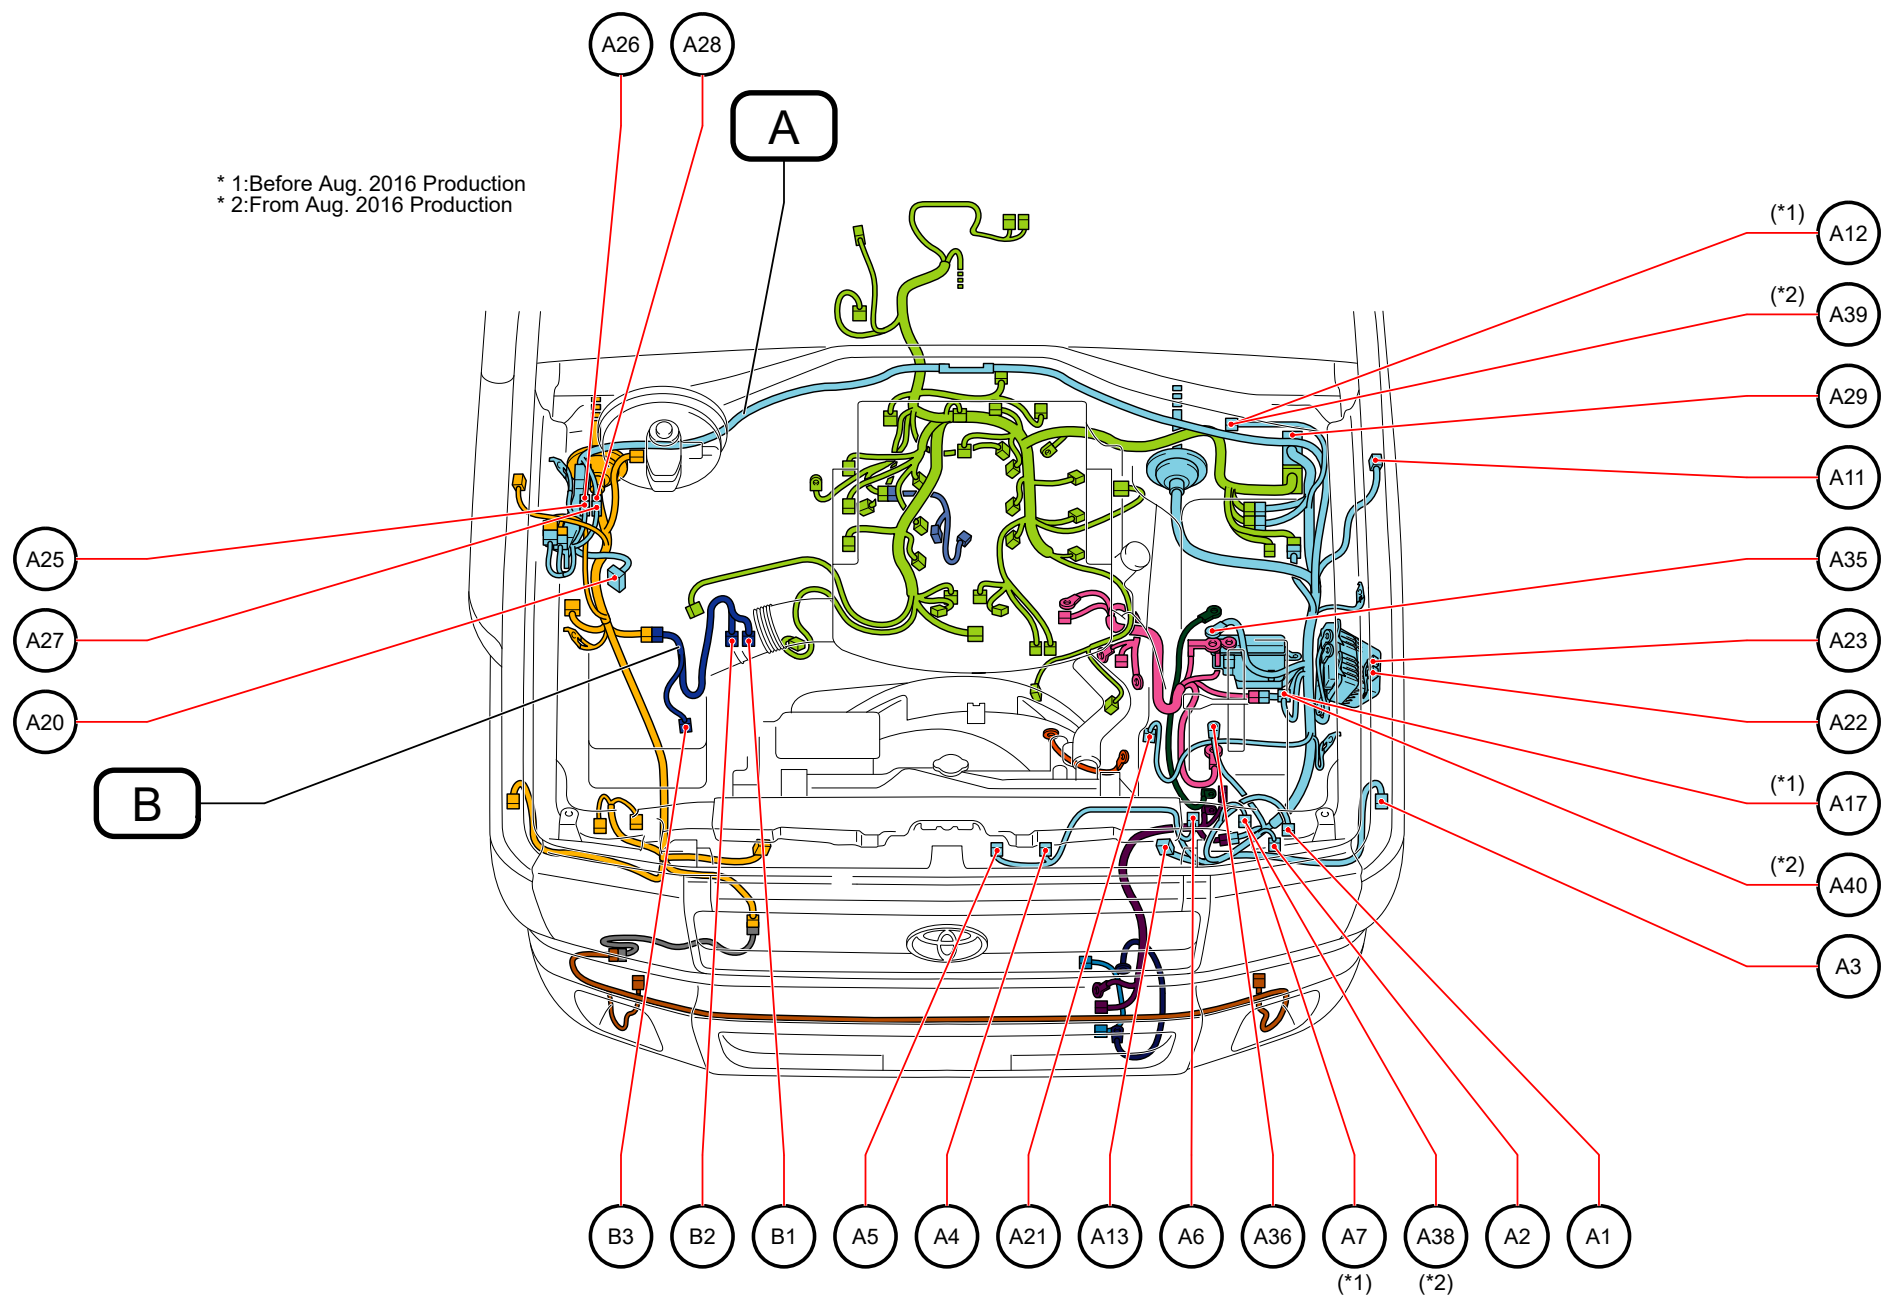
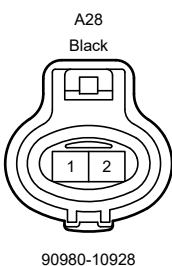
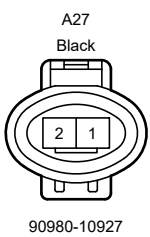
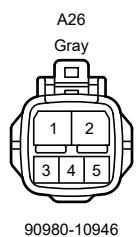
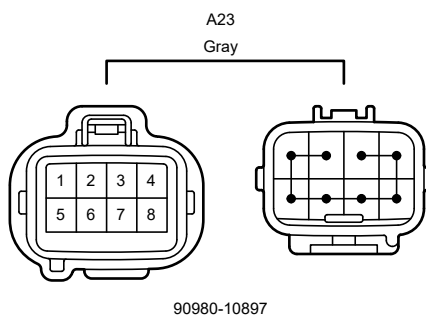
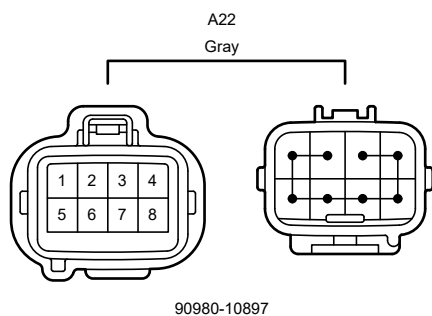
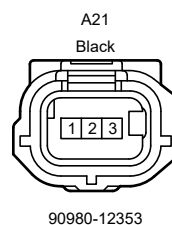
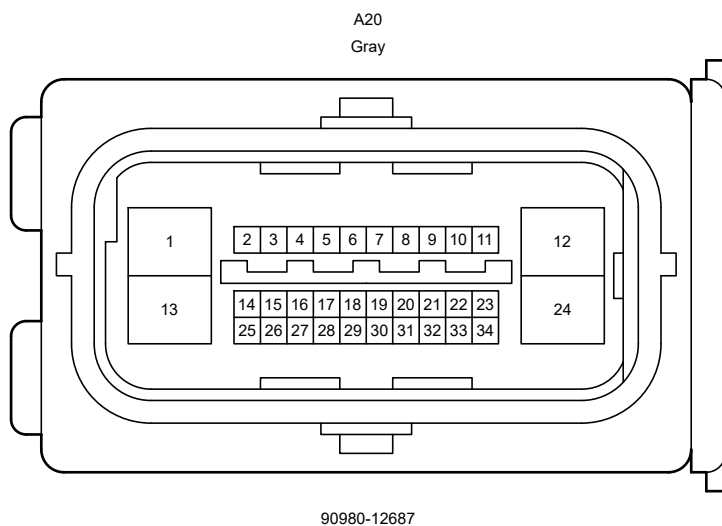
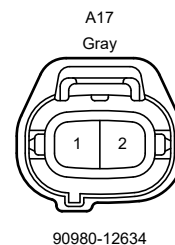
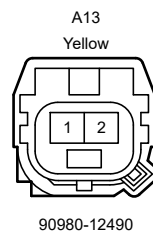
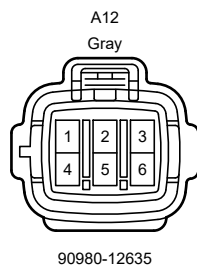
 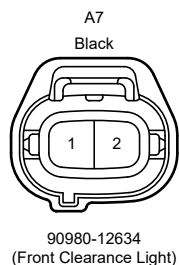
 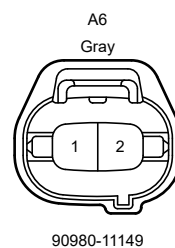


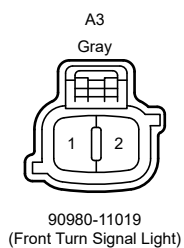


Position of Parts in Engine Compartment (RHD 1GR-FE)

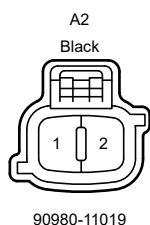


A1	Headlight Assembly LH
A2	Windshield Washer Motor and Pump Assembly
A3	Headlight Assembly LH
A4	Low Pitched Horn Assembly
A5	High Pitched Horn Assembly
A6	A/C Pressure Switch (Cooler Refrigerant Liquid Pipe B)
A7	Headlight Assembly LH
A11	Side Turn Signal Light Assembly LH
A12	Windshield Wiper Motor Assembly
A13	Front Airbag Sensor LH
A17	Fuel Pump Resistor Assembly
A20	Brake Actuator Assembly
A21	Front Speed Sensor LH (Skid Control Sensor Wire LH)
A22	No. 1 Junction Connector
A23	No. 2 Junction Connector
A25	Brake Vacuum Check Valve Assembly
A26	Brake Vacuum Check Valve Assembly
A27	Brake Vacuum Check Valve Assembly
A28	Brake Vacuum Check Valve Assembly
A29	ECM
A35	Battery (Main)
A36	Battery (Main)
A38	Headlight Assembly LH
A39	Windshield Wiper Motor Assembly
A40	Fuel Pump Resistor Assembly
B1	No. 2 Differential Lock Shift Actuator
B2	Front Differential Lock Position Switch
B3	Front Speed Sensor RH (Skid Control Sensor Wire RH)




Position of Parts in Engine Compartment (RHD 1GR-FE)

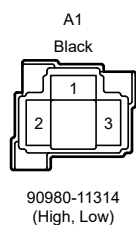


Position of Parts in Engine Compartment (RHD 1GR-FE)

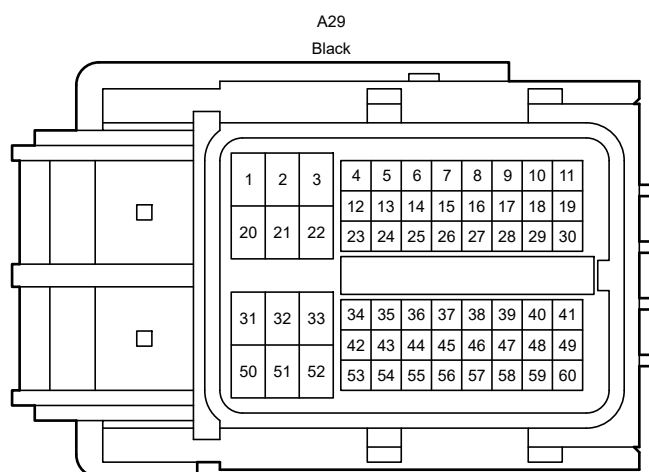


90980-12462

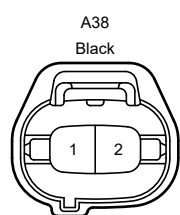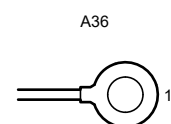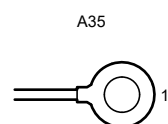


90980-11156
(Clearance Light)

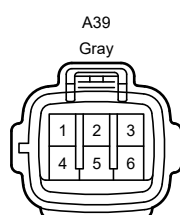


90980-11194

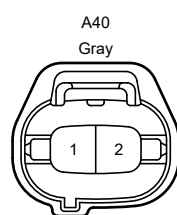


90980-11156

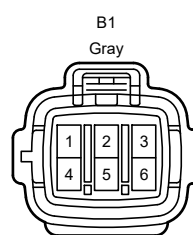

90980-12635

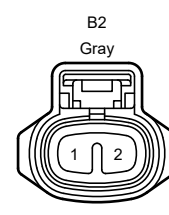

90980-11250

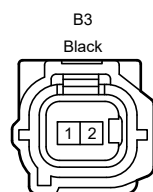

90980-12416