


Position of Parts in Instrument Panel (RHD)

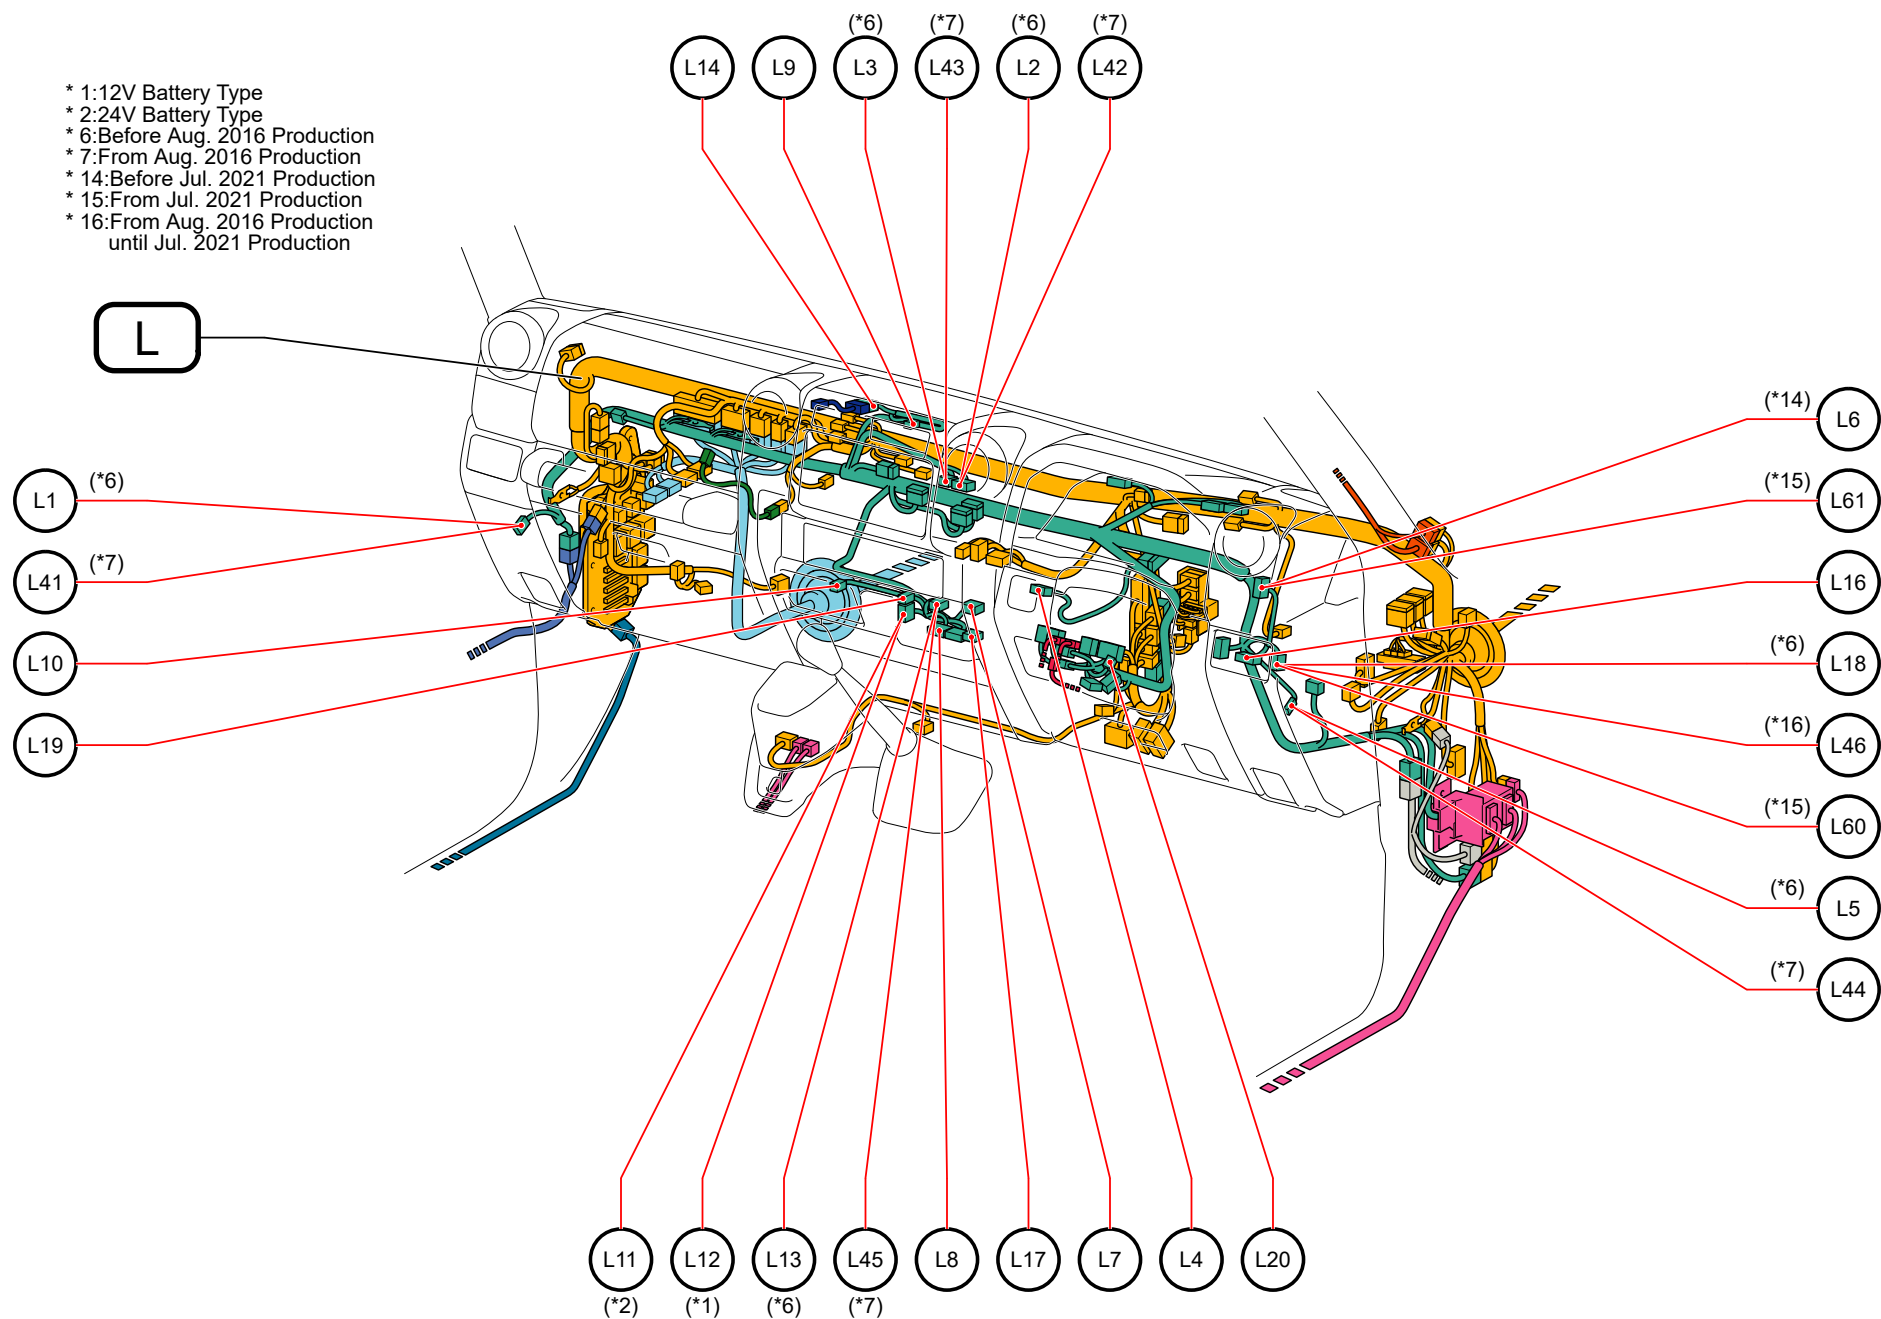

Position of Parts in Instrument Panel (RHD)

L1	Front No. 1 Speaker Assembly LH
L2	Radio Receiver Assembly
L3	Radio Receiver Assembly
L4	Center Differential Lock Switch
L5	Front No. 1 Speaker Assembly RH
L6	Idle Up Switch
L7	Rear Window Defogger Switch Assembly
L8	Fuel Control Switch Assembly
L9	Clock Assembly
L10	Ashtray Receptacle Light
L11	Cigarette Lighter Assembly
L12	Cigarette Lighter Assembly
L13	Antenna Switch Assembly
L14	Hazard Warning Signal Switch Assembly
L16	Outer Mirror Switch Assembly
L17	Transmission Control Switch
L18	Door Control Switch Assembly
L19	Cigarette Lighter Illumination (Cigarette Lighter Bezel Stay)
L20	Un-Lock Warning Switch Assembly
L41	Front No. 1 Speaker Assembly LH
L42	Radio Receiver Assembly
L43	Radio Receiver Assembly
L44	Front No. 1 Speaker Assembly RH
L45	Antenna Switch Assembly
L46	Door Control Switch Assembly
L60	Combination Switch Assembly
L61	Door Control Switch Assembly

Position of Parts in Instrument Panel (RHD)

