

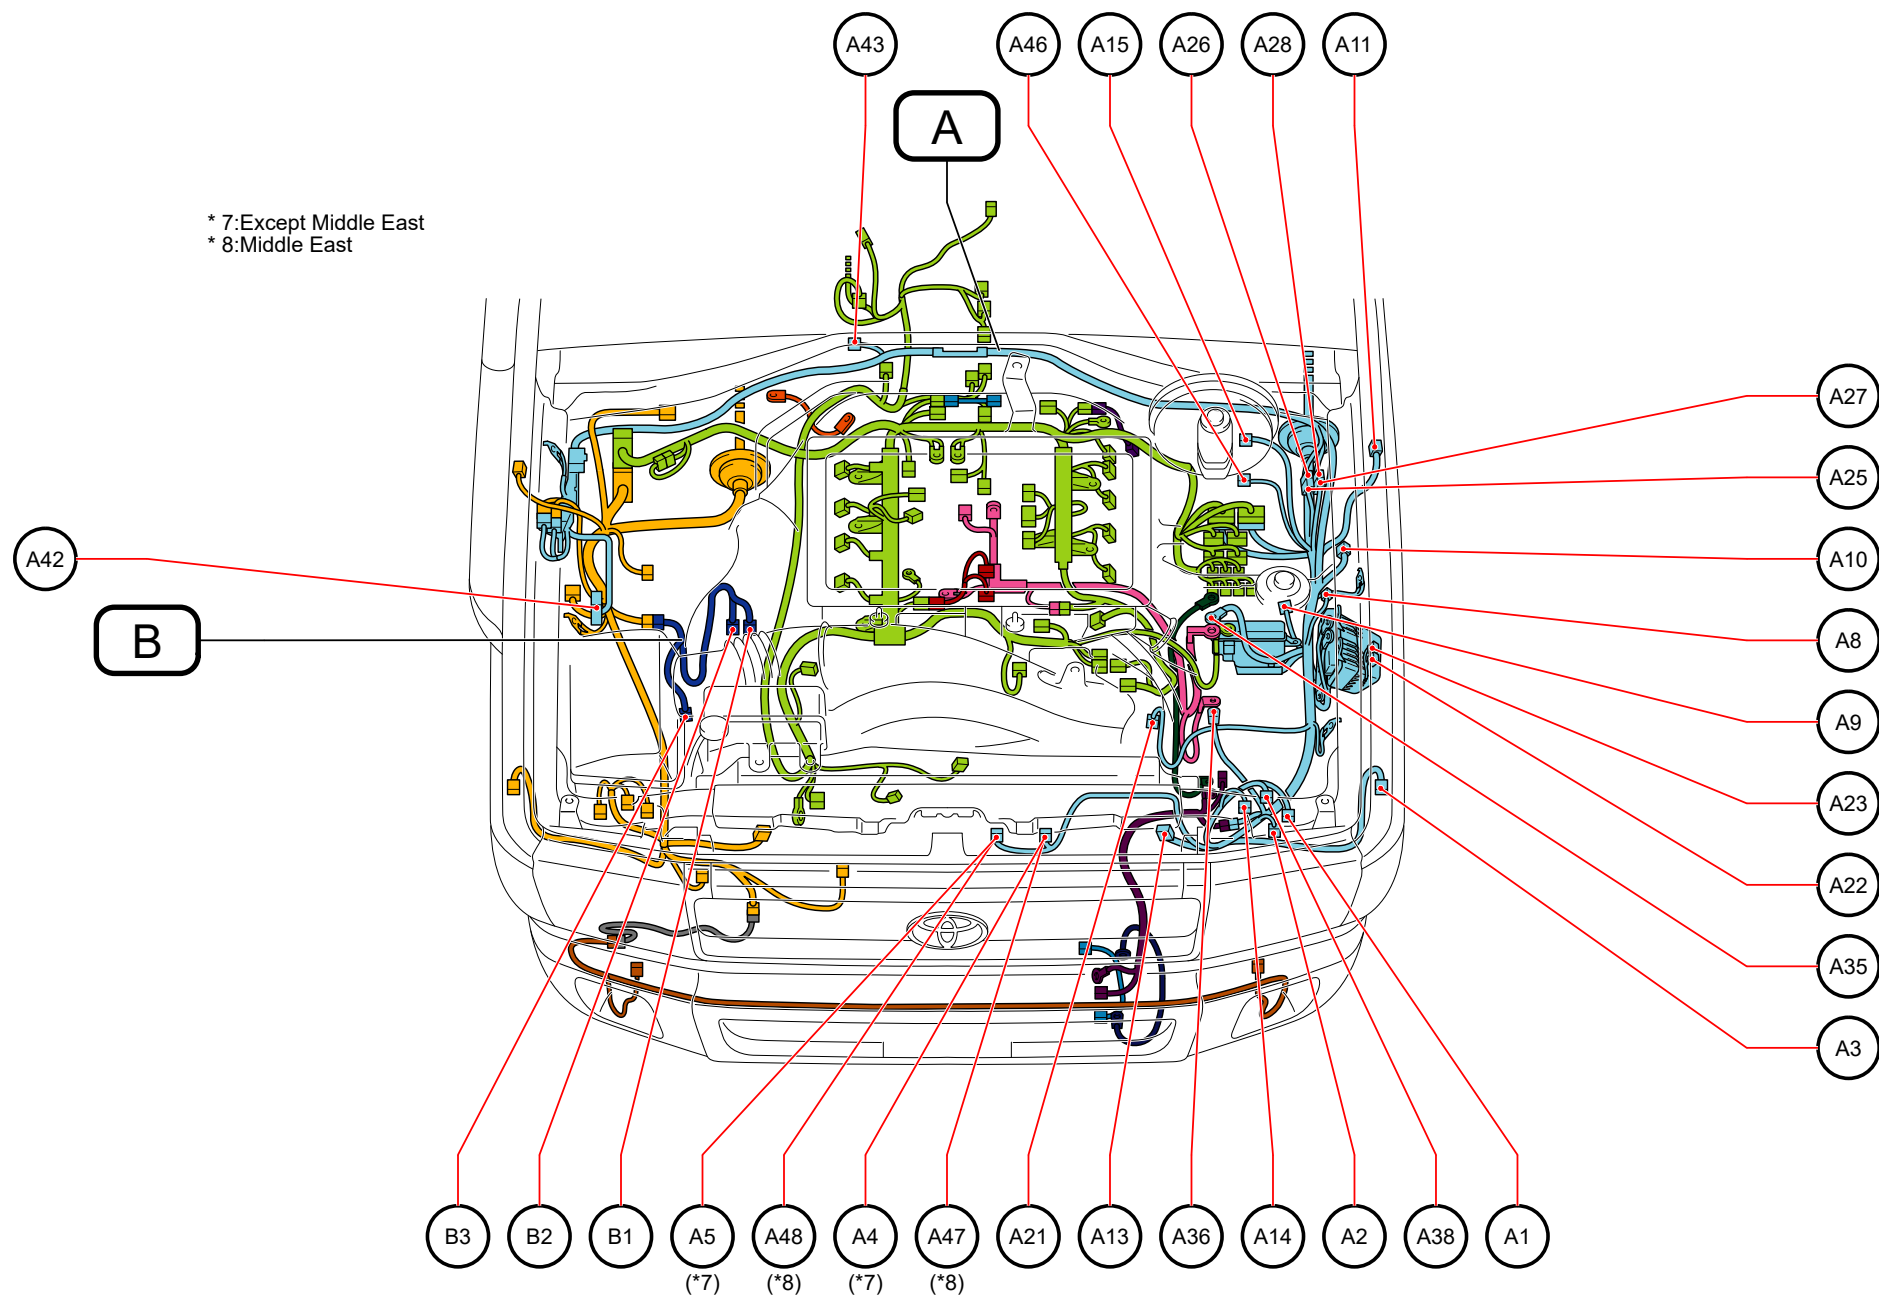
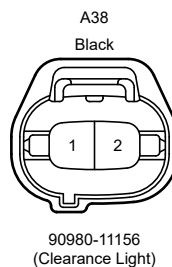
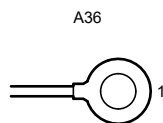
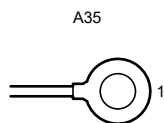
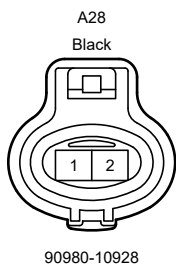
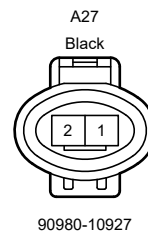
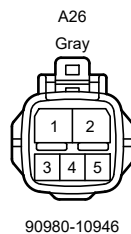
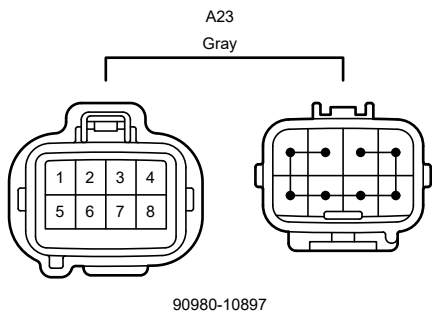
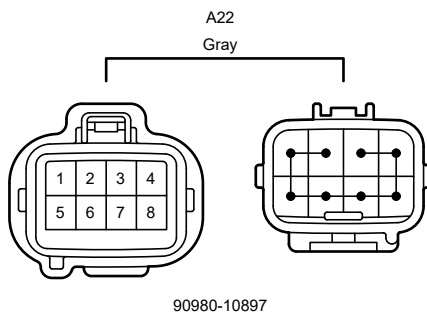
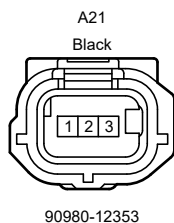
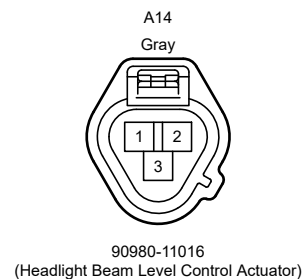
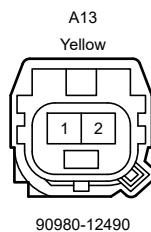
 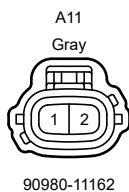
 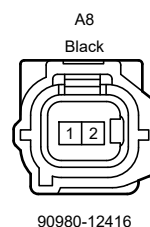


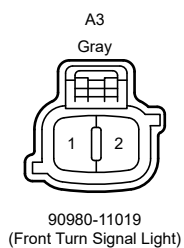


Position of Parts in Engine Compartment (LHD 1VD-FTV)

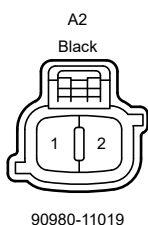

A1	Headlight Assembly LH
A2	Windshield Washer Motor and Pump Assembly
A3	Headlight Assembly LH
A4	Low Pitched Horn Assembly
A5	High Pitched Horn Assembly
A8	Fuel Filter Vacuum Sensor
A9	Fuel Sediment Switch
A10	Antenna with Holder Assembly
A11	Side Turn Signal Light Assembly LH
A13	Front Airbag Sensor LH
A14	Headlight Assembly LH
A15	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
A21	Front Speed Sensor LH (Skid Control Sensor Wire LH)
A22	No. 1 Junction Connector
A23	No. 2 Junction Connector
A25	Brake Vacuum Check Valve Assembly
A26	Brake Vacuum Check Valve Assembly
A27	Brake Vacuum Check Valve Assembly
A28	Brake Vacuum Check Valve Assembly
A35	Battery (Main)
A36	Battery (Main)
A38	Headlight Assembly LH
A42	Brake Actuator Assembly
A43	No. 34 Junction Connector
A46	No. 39 Junction Connector
A47	Low Pitched Horn Assembly
A48	High Pitched Horn Assembly
B1	No. 2 Differential Lock Shift Actuator
B2	Front Differential Lock Position Switch
B3	Front Speed Sensor RH (Skid Control Sensor Wire RH)

Position of Parts in Engine Compartment (LHD 1VD-FTV)

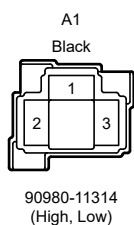

Position of Parts in Engine Compartment (LHD 1VD-FTV)

