



Position of Parts in Instrument Panel (LHD)

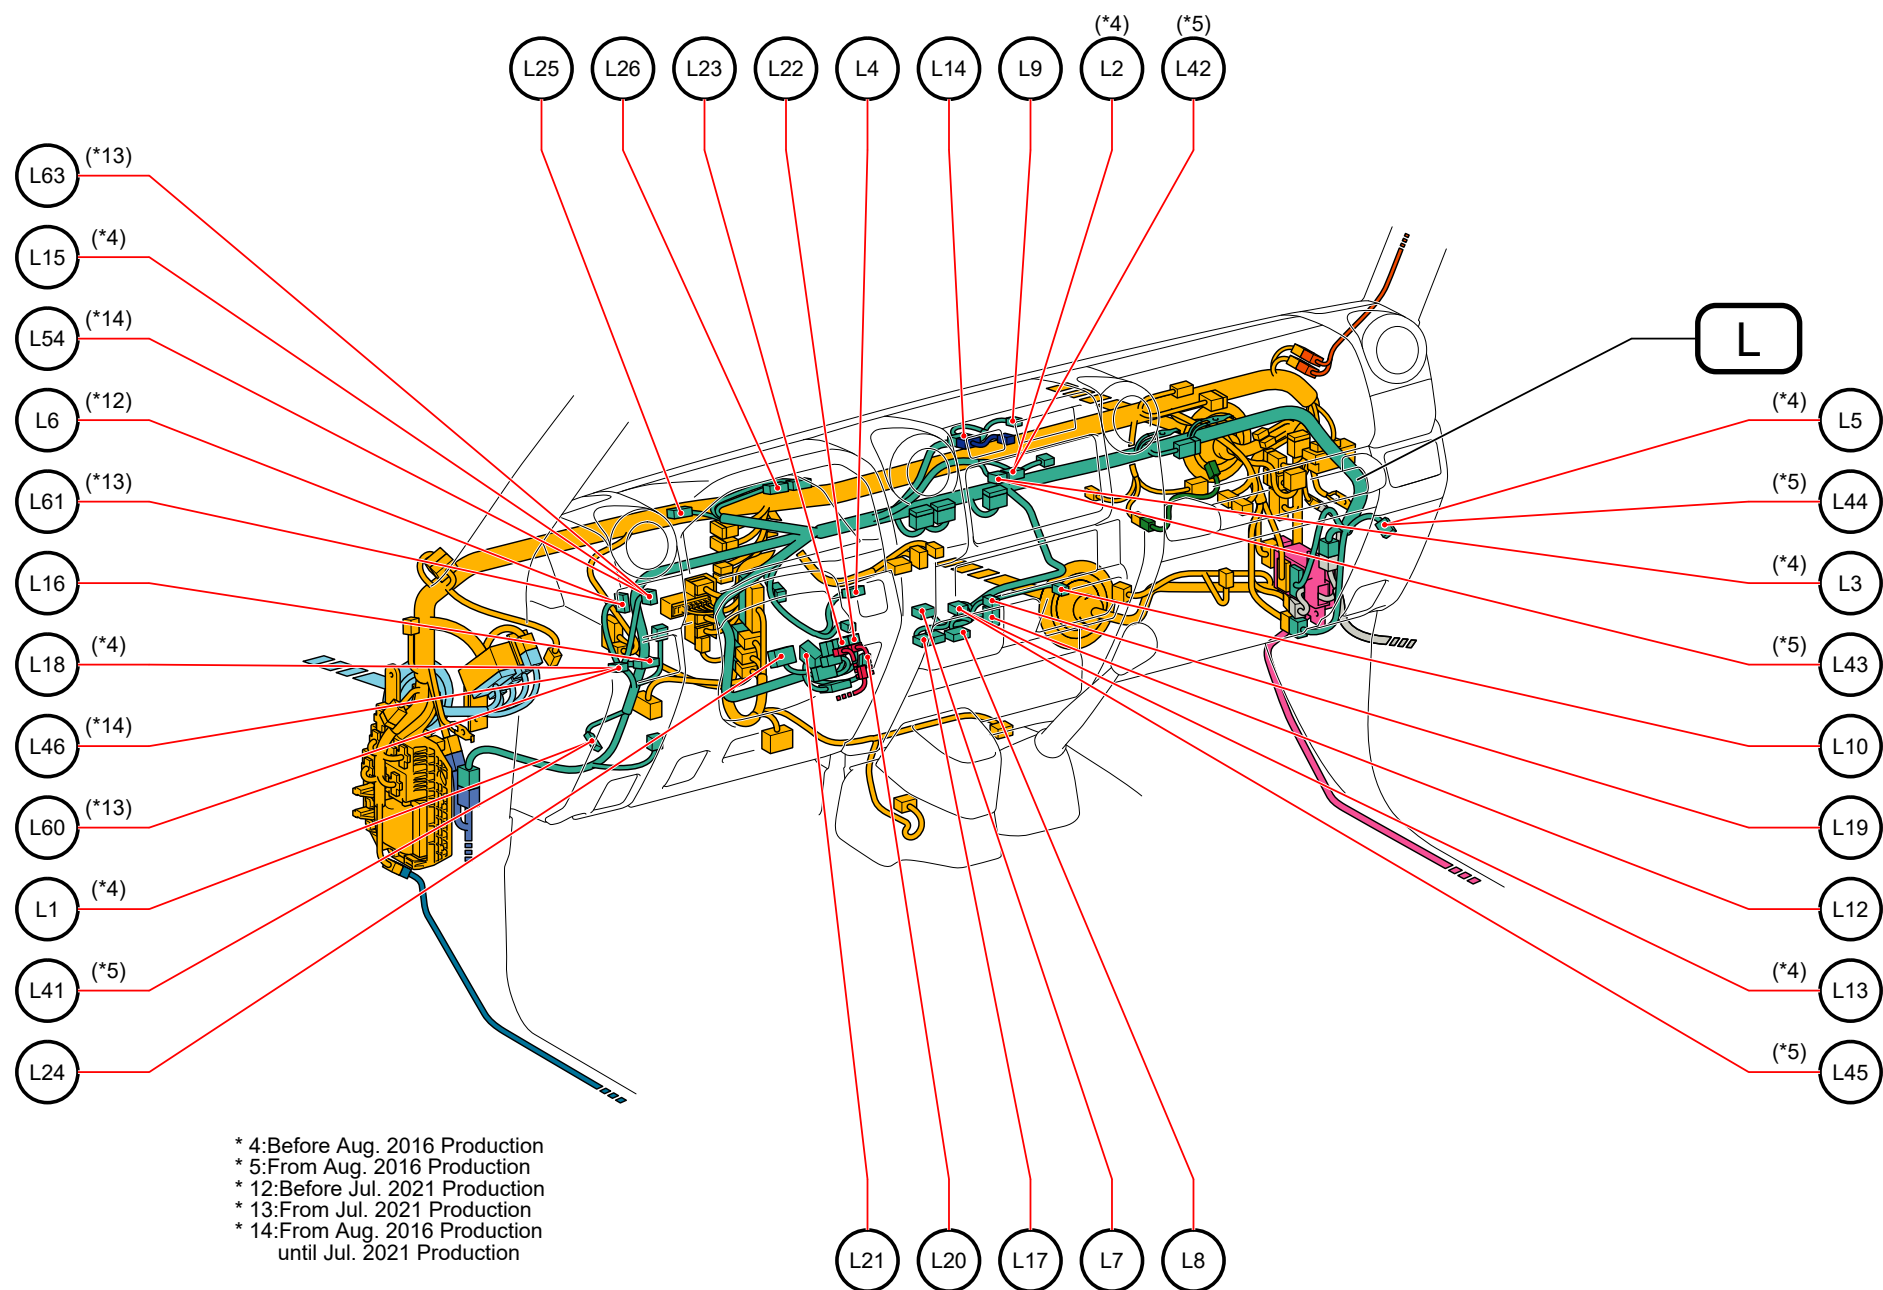


Position of Parts in Instrument Panel (LHD)

L1	Front No. 1 Speaker Assembly LH
L2	Radio Receiver Assembly
L3	Radio Receiver Assembly
L4	Center Differential Lock Switch
L5	Front No. 1 Speaker Assembly RH
L6	Idle Up Switch
L7	Rear Window Defogger Switch Assembly
L8	Fuel Control Switch Assembly
L9	Clock Assembly
L10	Ashtray Receptacle Light
L12	Cigarette Lighter Assembly
L13	Antenna Switch Assembly
L14	Hazard Warning Signal Switch Assembly
L15	Headlight Leveling Switch
L16	Outer Mirror Switch Assembly
L17	Transmission Control Switch
L18	Door Control Switch Assembly
L19	Cigarette Lighter Illumination (Cigarette Lighter Bezel Stay)
L20	Un-Lock Warning Switch Assembly
L21	Ignition or Starter Switch Assembly
L22	Windshield Wiper Switch Assembly
L23	Windshield Wiper Switch Assembly
L24	Headlight Dimmer Switch Assembly
L25	Combination Meter Assembly
L26	Combination Meter Assembly
L41	Front No. 1 Speaker Assembly LH
L42	Radio Receiver Assembly
L43	Radio Receiver Assembly
L44	Front No. 1 Speaker Assembly RH
L45	Antenna Switch Assembly
L46	Door Control Switch Assembly
L54	Headlight Leveling Switch
L60	Combination Switch Assembly
L61	Door Control Switch Assembly
L63	Headlight Leveling Switch


Position of Parts in Instrument Panel (LHD)

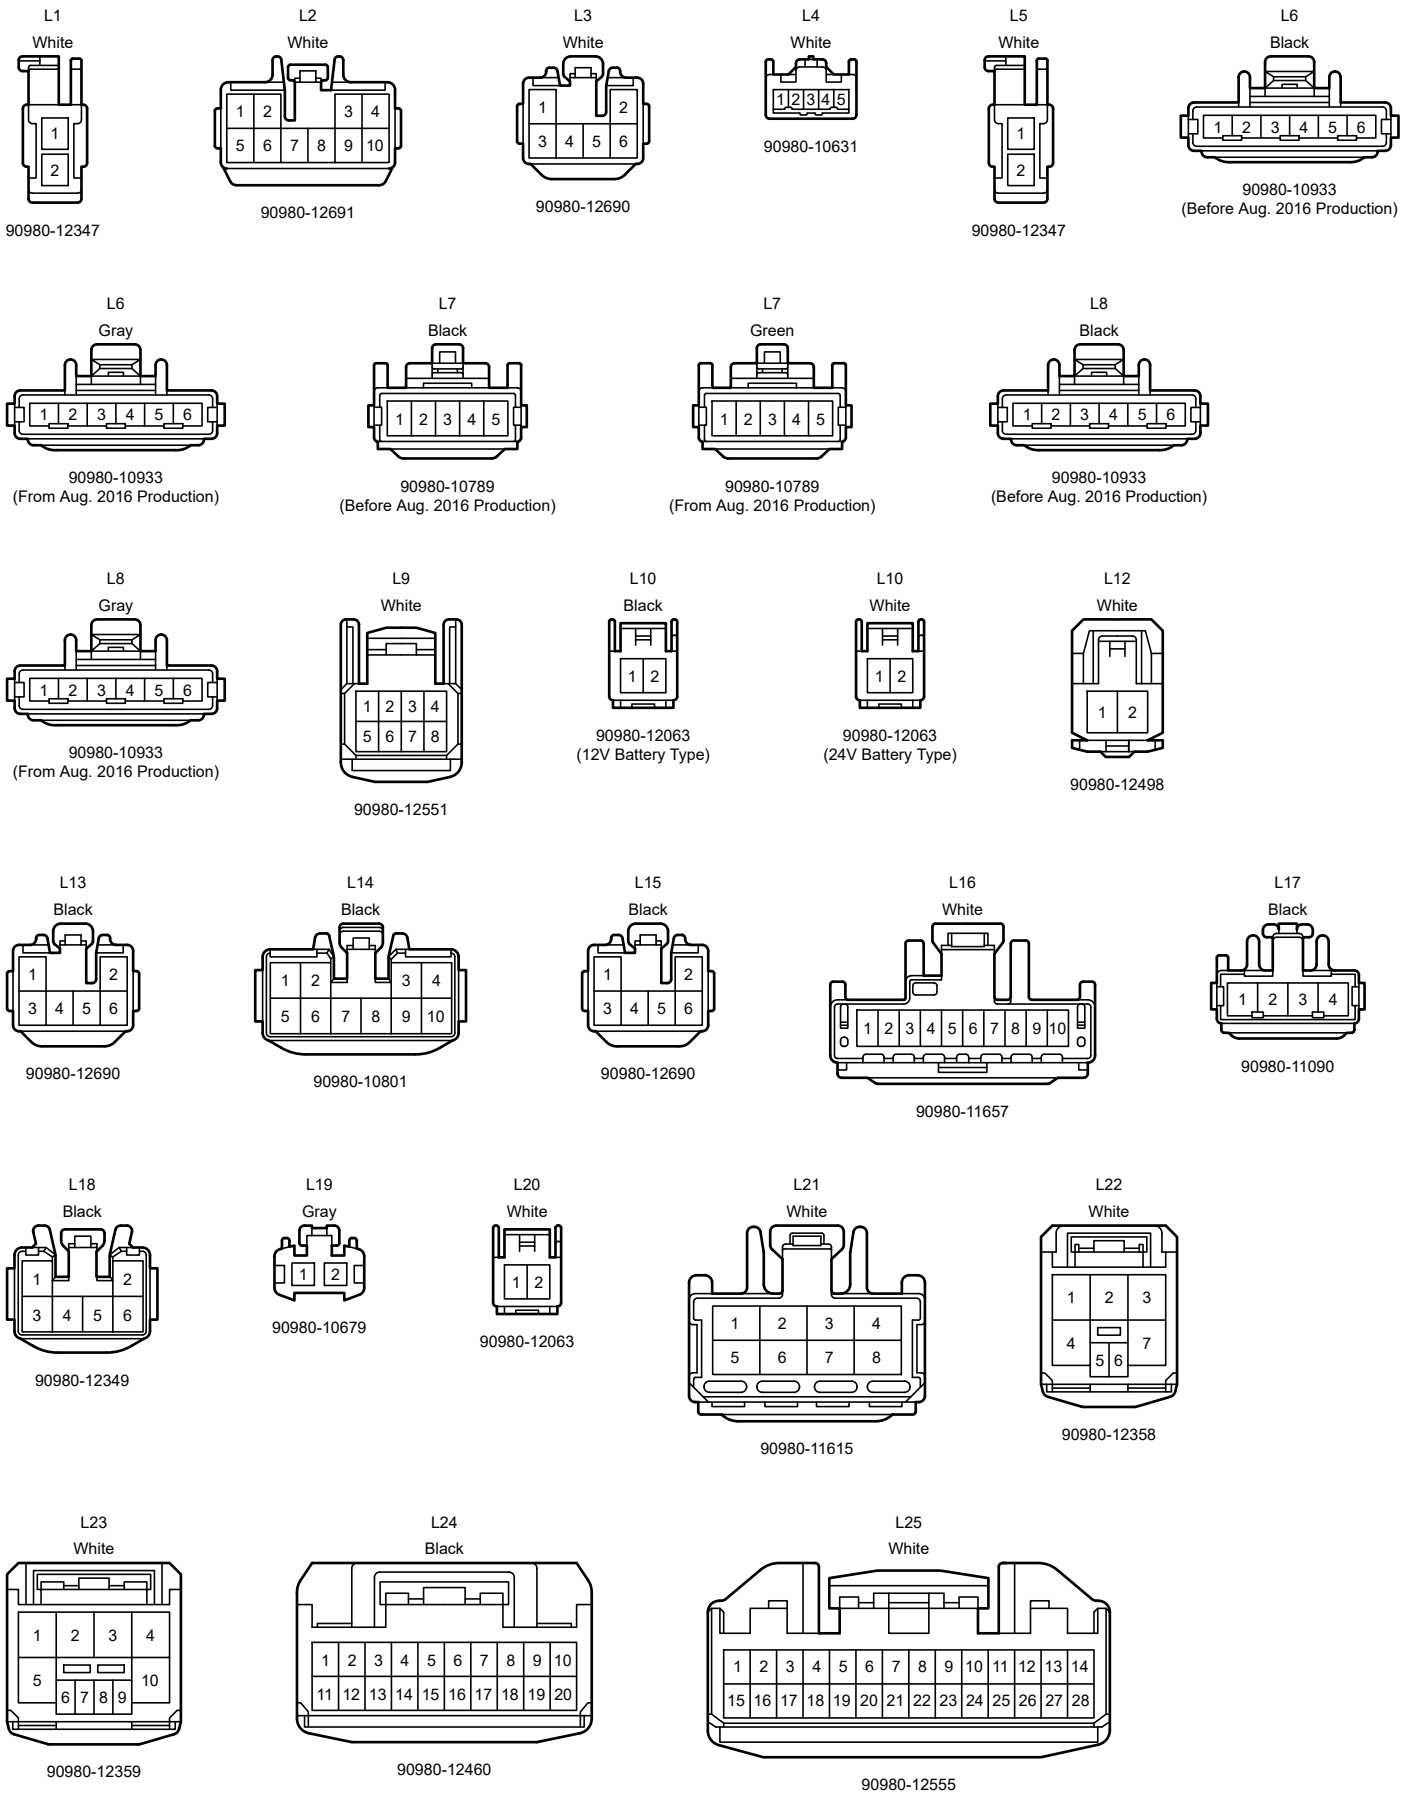


Position of Parts in Instrument Panel (LHD)

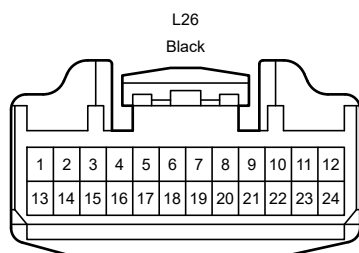


90980-12554

 


90980-10935

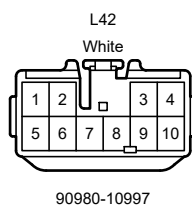


90980-10997

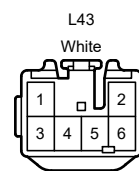


90980-10996

 


90980-10935

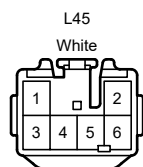


90980-10996

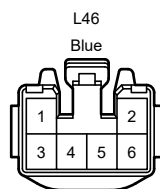


90980-10797

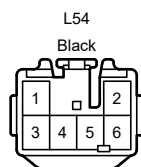


90980-10996

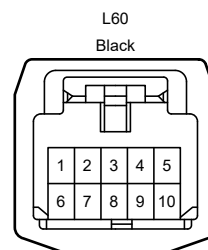

82824-78040

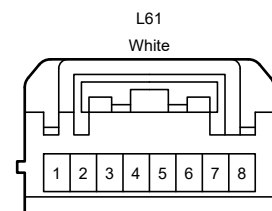

90980-12550

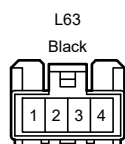

90980-11950