



Position of Parts in Instrument Panel (LHD)

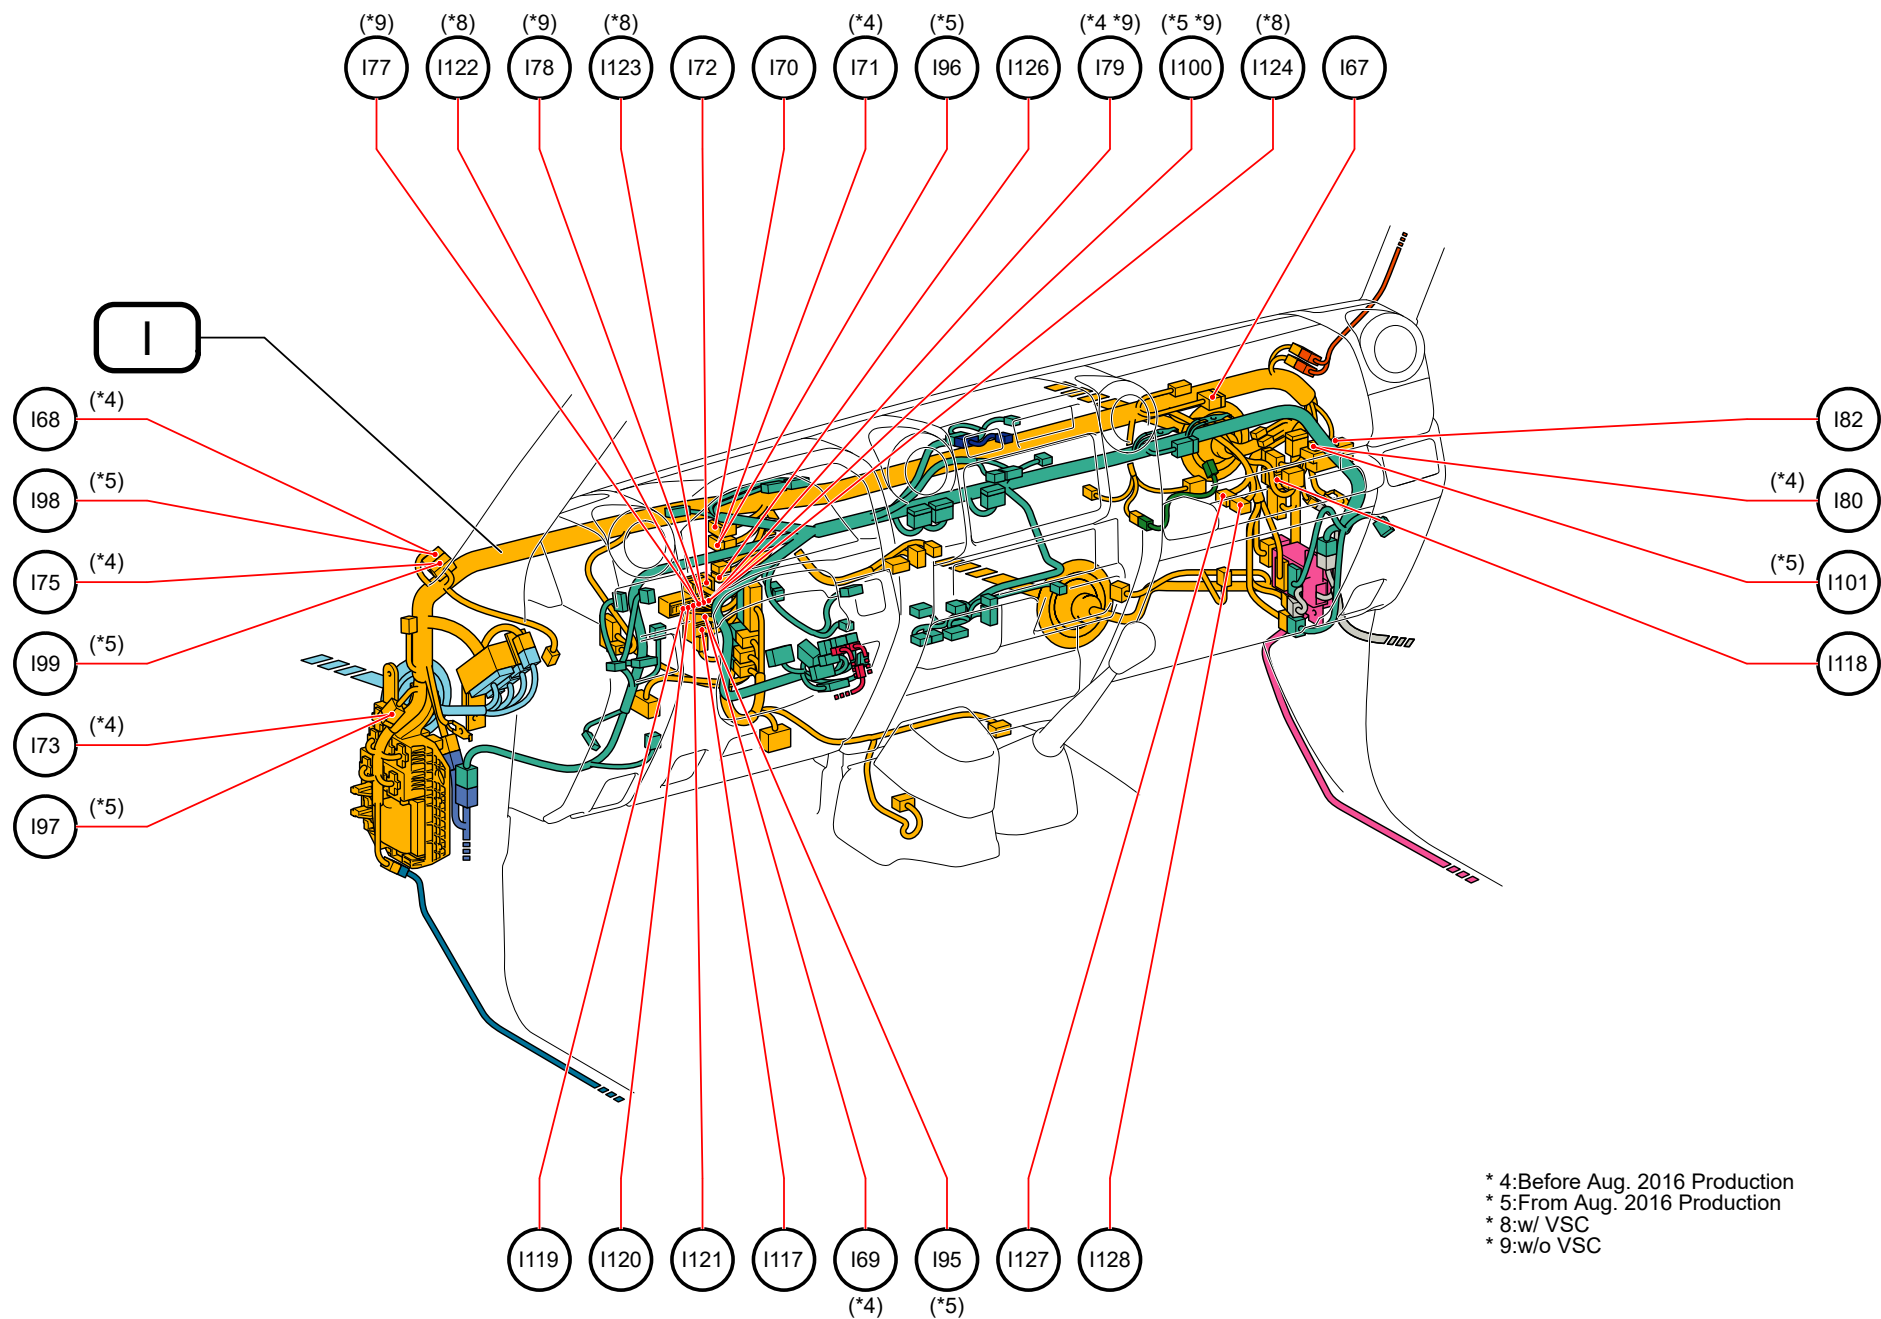


I67	No. 16 Junction Connector
I68	No. 17 Junction Connector
I69	No. 18 Junction Connector
I70	No. 19 Junction Connector
I71	No. 20 Junction Connector
I72	No. 21 Junction Connector
I73	No. 22 Junction Connector
I75	No. 17 Junction Connector
I77	No. 1 CAN Junction Connector
I78	No. 1 CAN Junction Connector
I79	No. 1 CAN Junction Connector
I80	No. 2 CAN Junction Connector
I82	No. 2 CAN Junction Connector
I95	No. 18 Junction Connector
I96	No. 20 Junction Connector
I97	No. 32 Junction Connector
I98	No. 17 Junction Connector
I99	No. 17 Junction Connector
I100	No. 1 CAN Junction Connector
I101	No. 2 CAN Junction Connector
I117	No. 35 Junction Connector
I118	No. 36 Junction Connector
I119	No. 6 CAN Junction Connector
I120	No. 6 CAN Junction Connector
I121	No. 6 CAN Junction Connector
I122	No. 6 CAN Junction Connector
I123	No. 6 CAN Junction Connector
I124	No. 6 CAN Junction Connector
I126	No. 34 Junction Connector
I127	Emission Control ECU
I128	Emission Control ECU

Position of Parts in Instrument Panel (LHD)

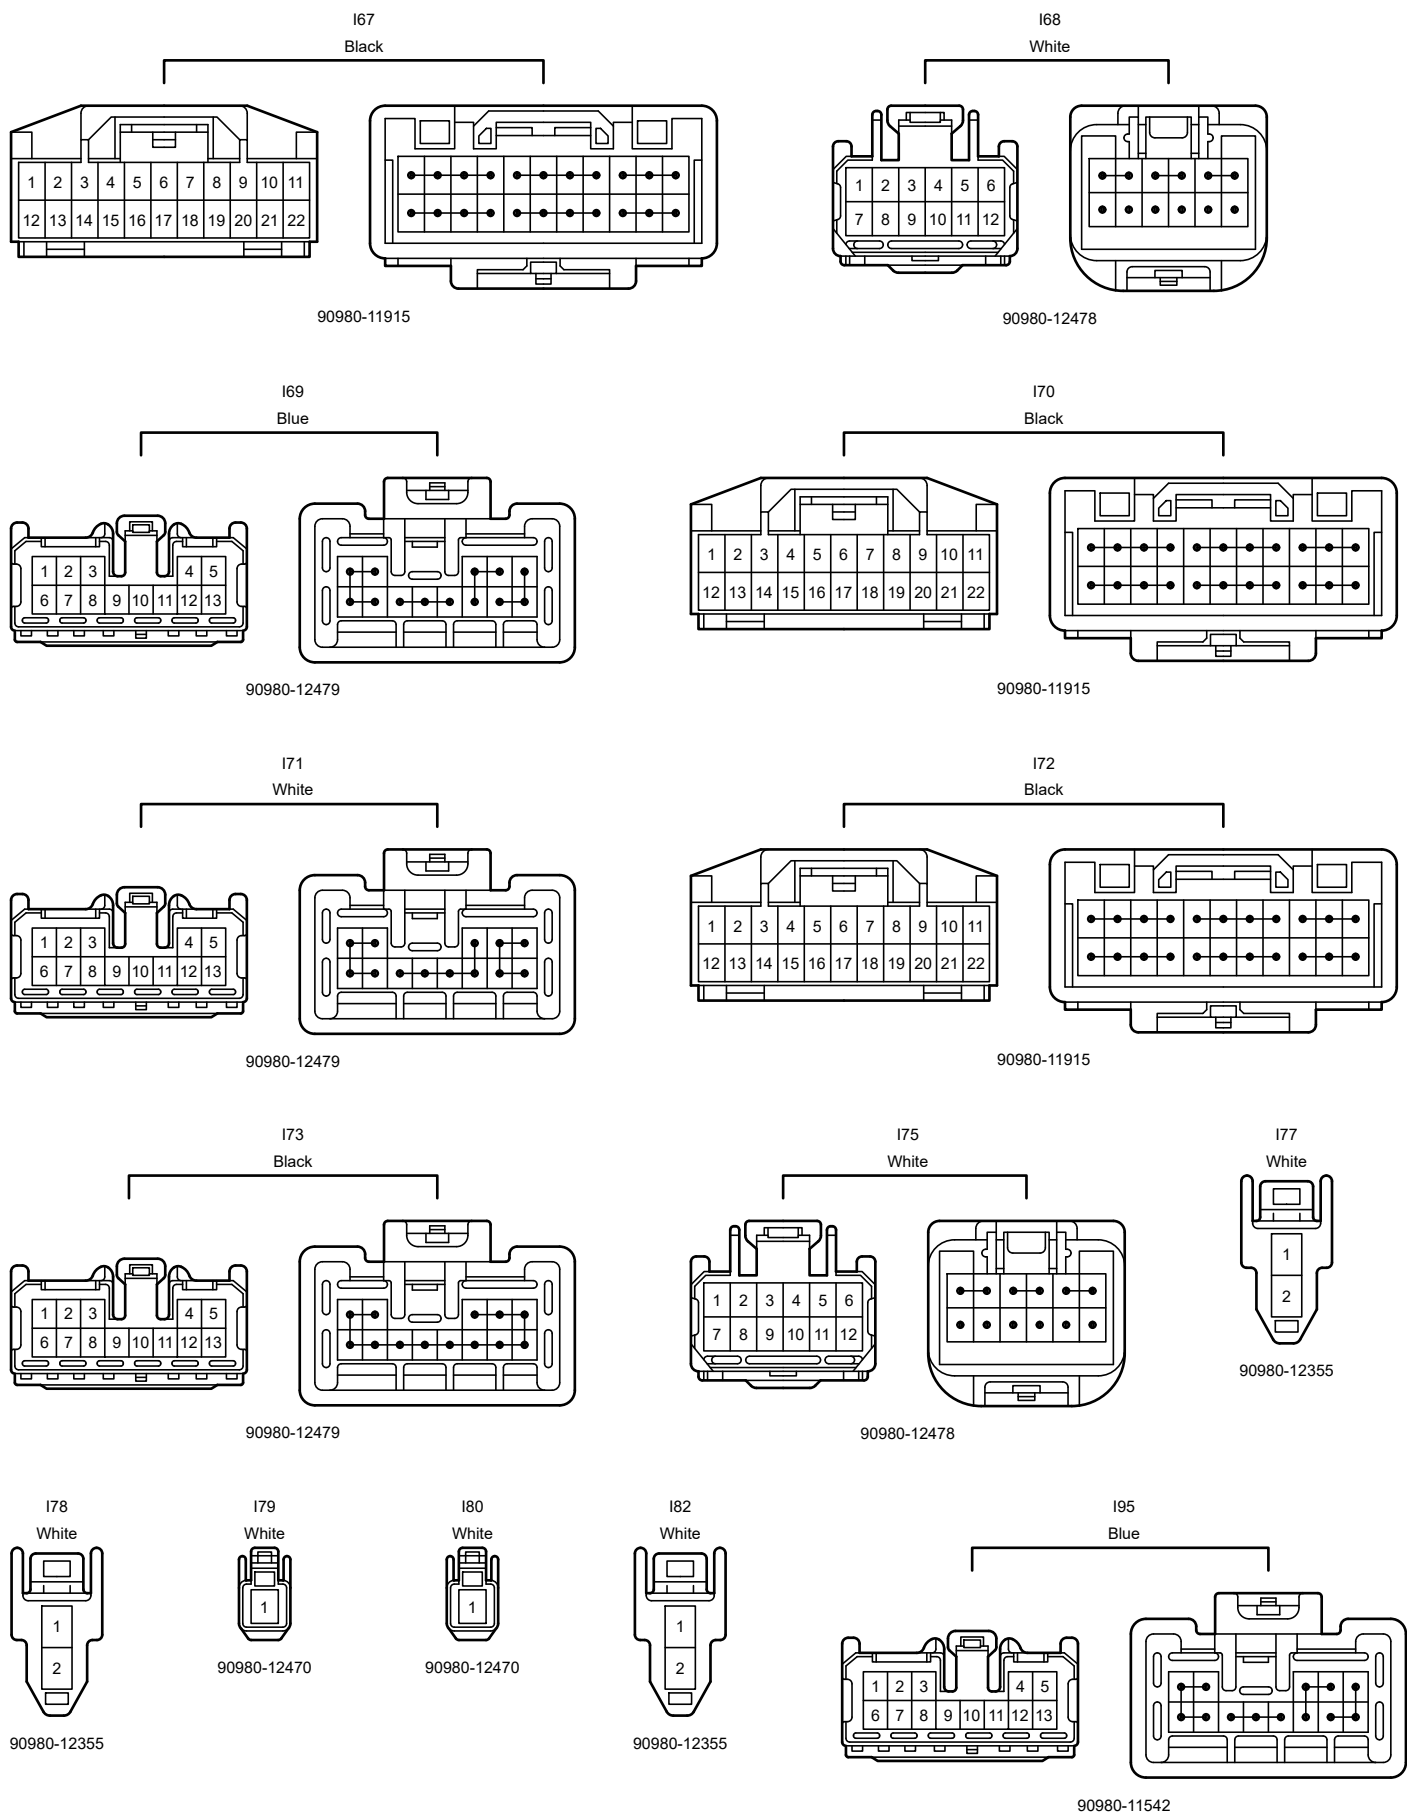

Position of Parts in Instrument Panel (LHD)

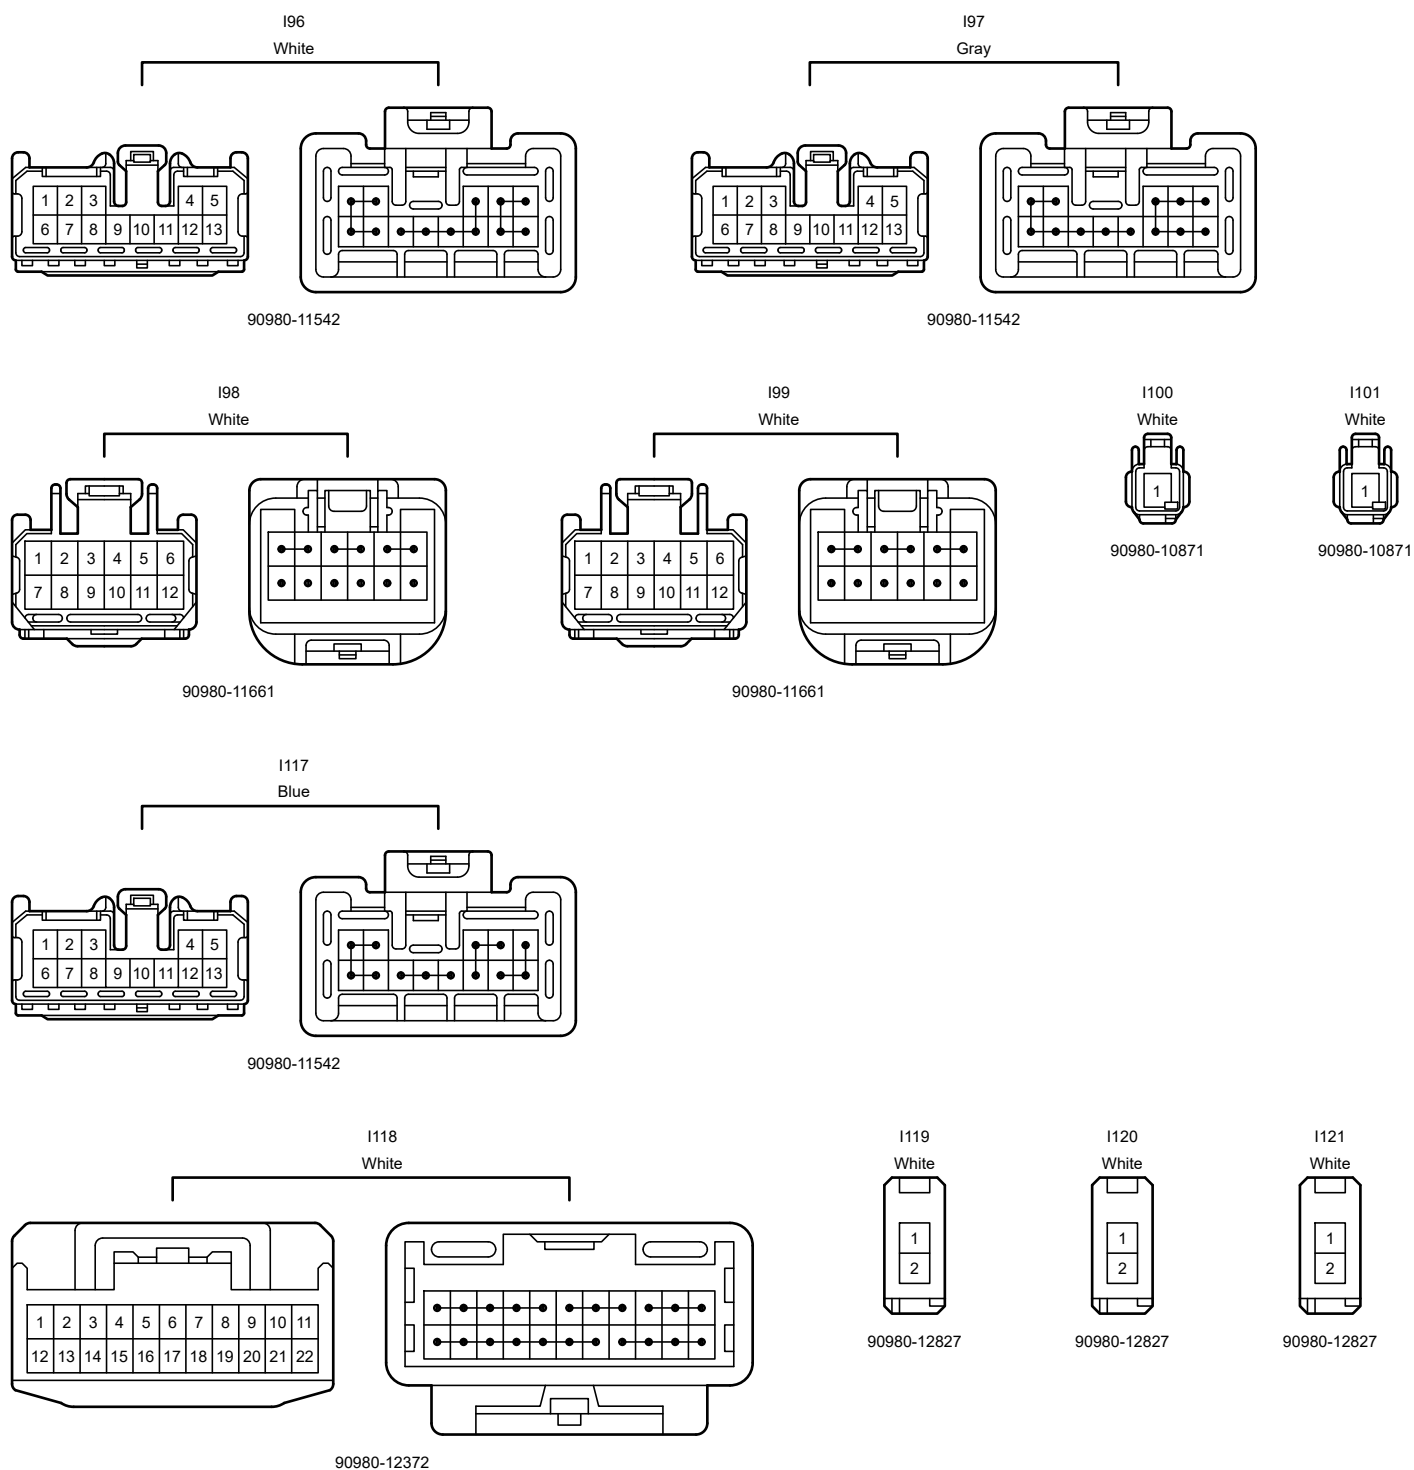

Position of Parts in Instrument Panel (LHD)

