



# Position of Parts in Engine Compartment (RHD 1HZ)

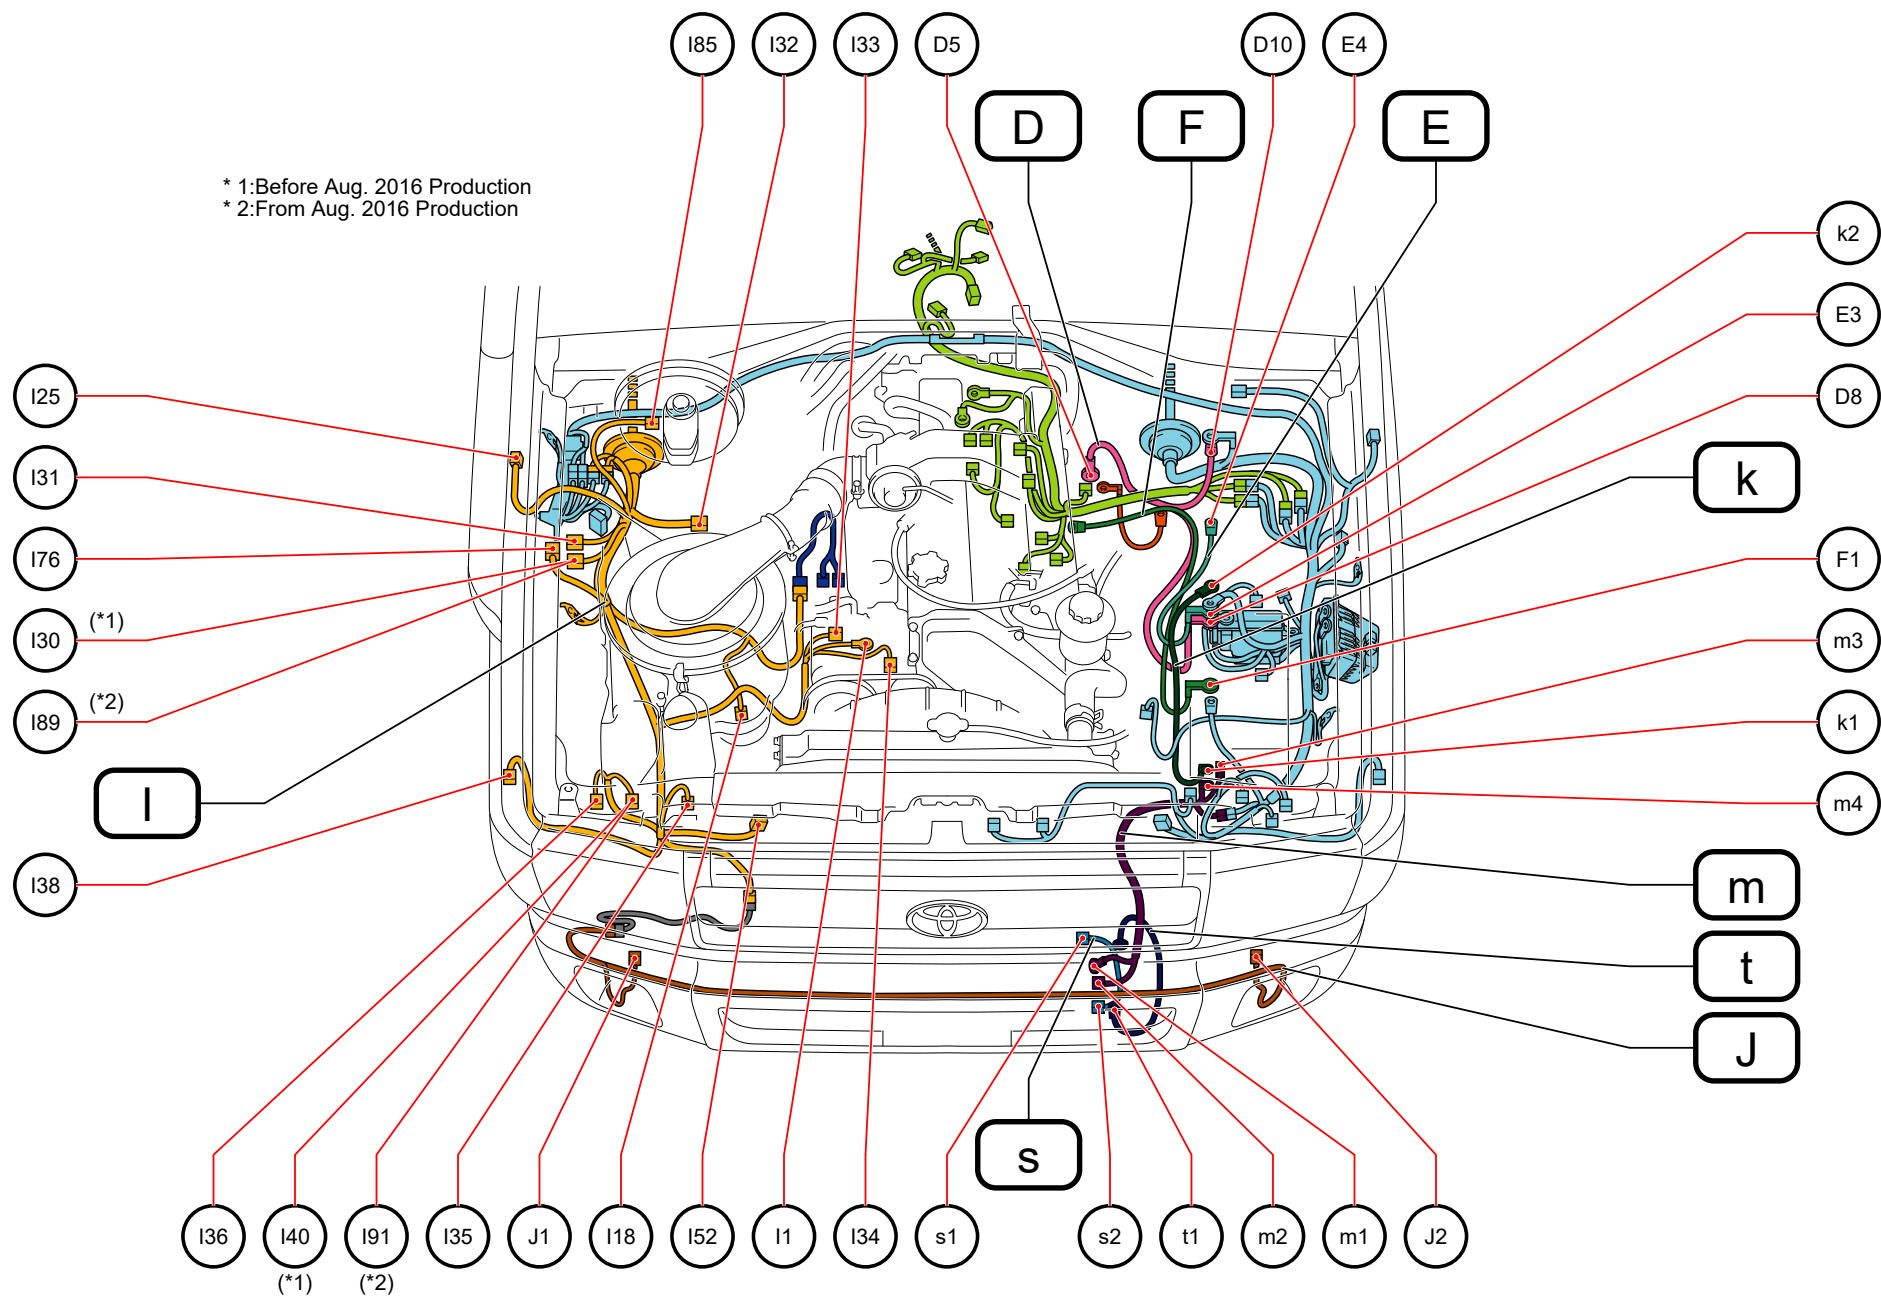

|     |   |
|-----|---|
| D5  | Starter Assembly  |
| D8  | Battery (Main)  |
| D10 | Battery (Sub)   |
| E3  | Battery (Sub)   |
| E4  | Battery (Main)  |
| F1  | Battery (Main)  |
| I1  | Generator Assembly  |
| I18 | Front Speed Sensor RH (Skid Control Sensor Wire RH)                             |
| I25 | Side Turn Signal Light Assembly RH  |
| I30 | Four Wheel Drive Control Solenoid Assembly                                      |
| I31 | Four Wheel Drive Control Solenoid Assembly                                      |
| I32 | Vacuum Warning Switch Assembly  |
| I33 | Magnet Clutch Assembly  |
| I34 | Generator Assembly  |
| I35 | Windshield Washer Motor and Pump Assembly                                       |
| I36 | Headlight Assembly RH   |
| I38 | Headlight Assembly RH   |
| I40 | Headlight Assembly RH   |
| I52 | Front Airbag Sensor RH  |
| I76 | Fuse Block Assembly   |
| I85 | Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly) |
| I89 | Four Wheel Drive Control Solenoid Assembly                                      |
| I91 | Headlight Assembly RH   |
| J1  | Fog Light Assembly RH   |
| J2  | Fog Light Assembly LH   |
| k1  | No. 1 Magnet Switch Assembly  |
| k2  | Battery (Main)  |
| m1  | Winch Motor with Magnet Switch Assembly   |
| m2  | Winch Motor with Magnet Switch Assembly   |
| m3  | No. 1 Magnet Switch Assembly  |
| m4  | No. 1 Magnet Switch Assembly  |
| s1  | Winch Assembly  |
| s2  | Winch Motor with Magnet Switch Assembly   |
| t1  | Winch Motor with Magnet Switch Assembly   |

# Position of Parts in Engine Compartment (RHD 1HZ)

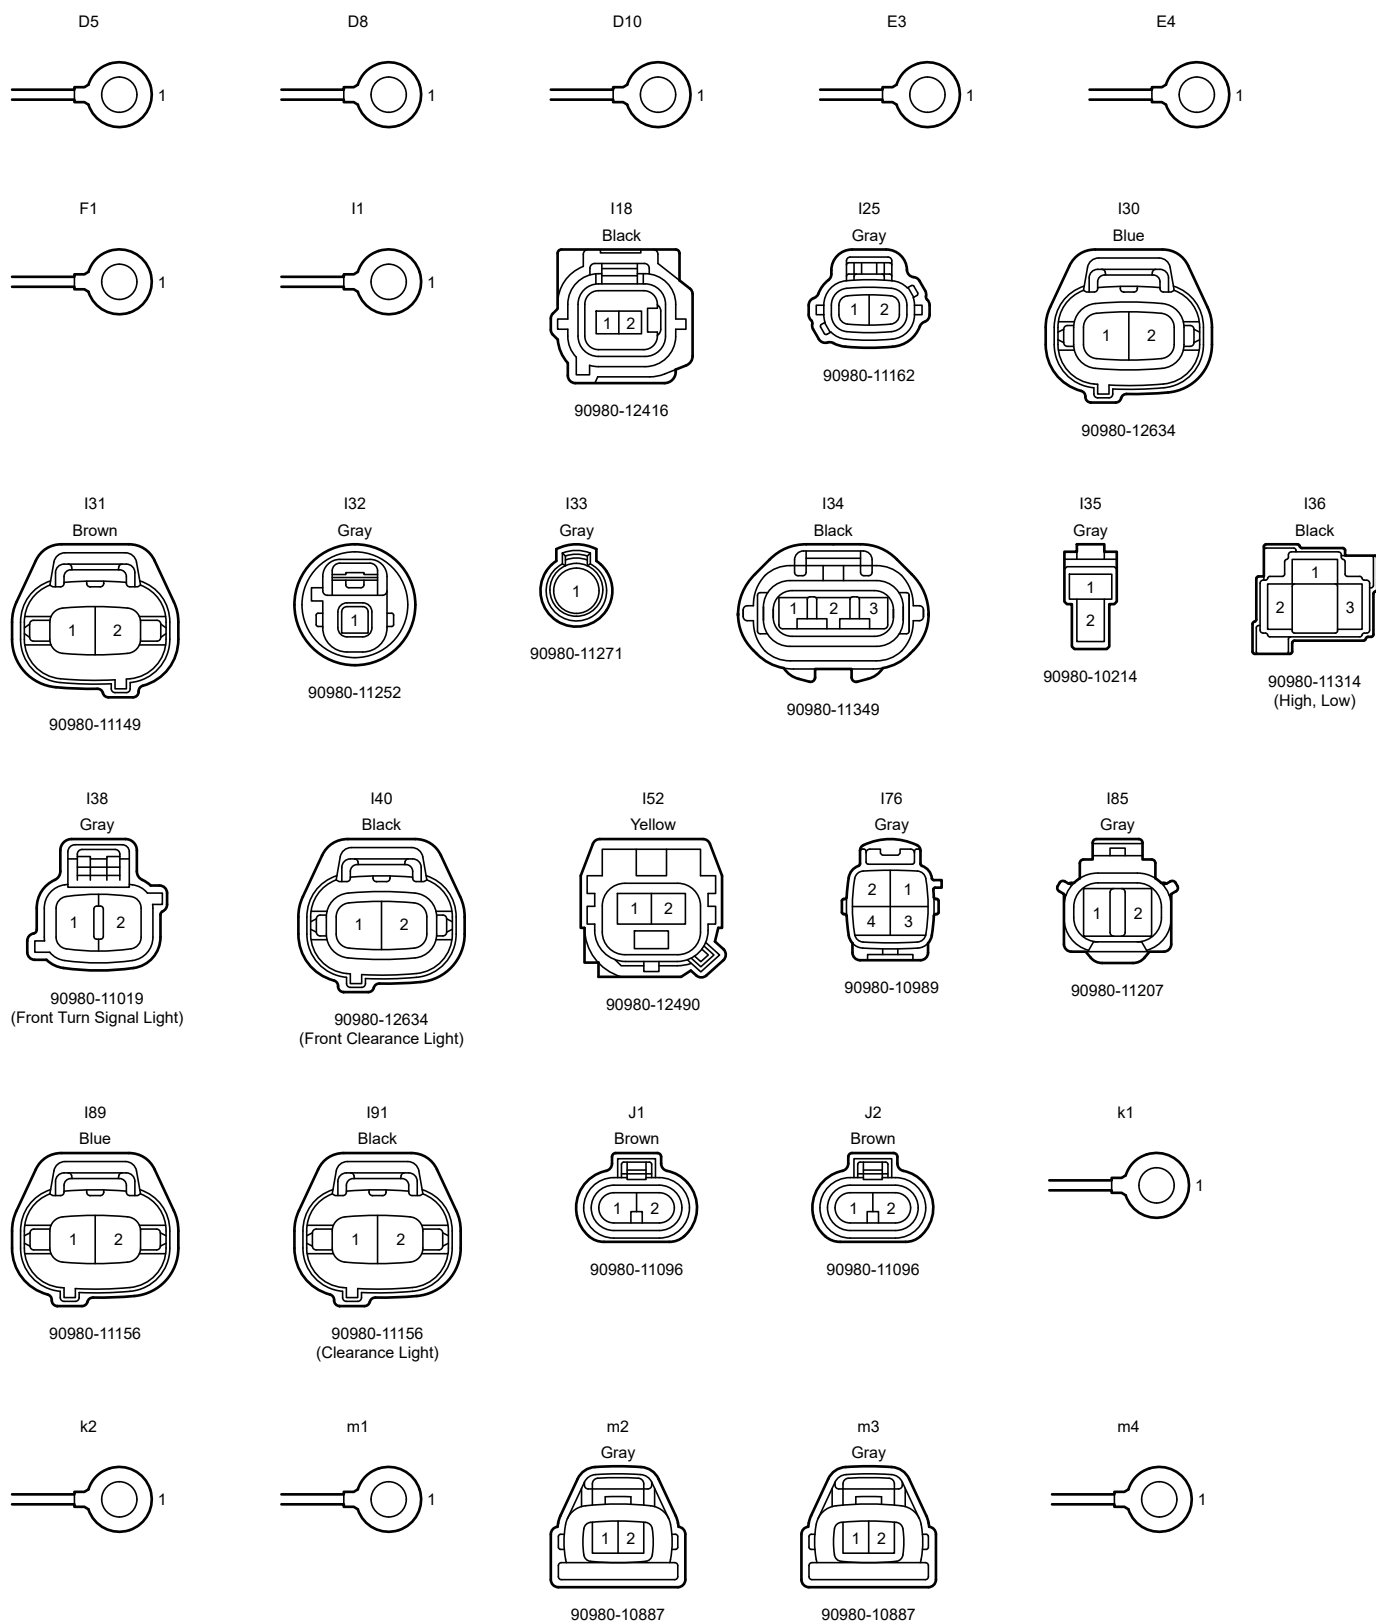

## Position of Parts in Engine Compartment (RHD 1HZ)

---

