



Position of Parts in Instrument Panel (RHD)

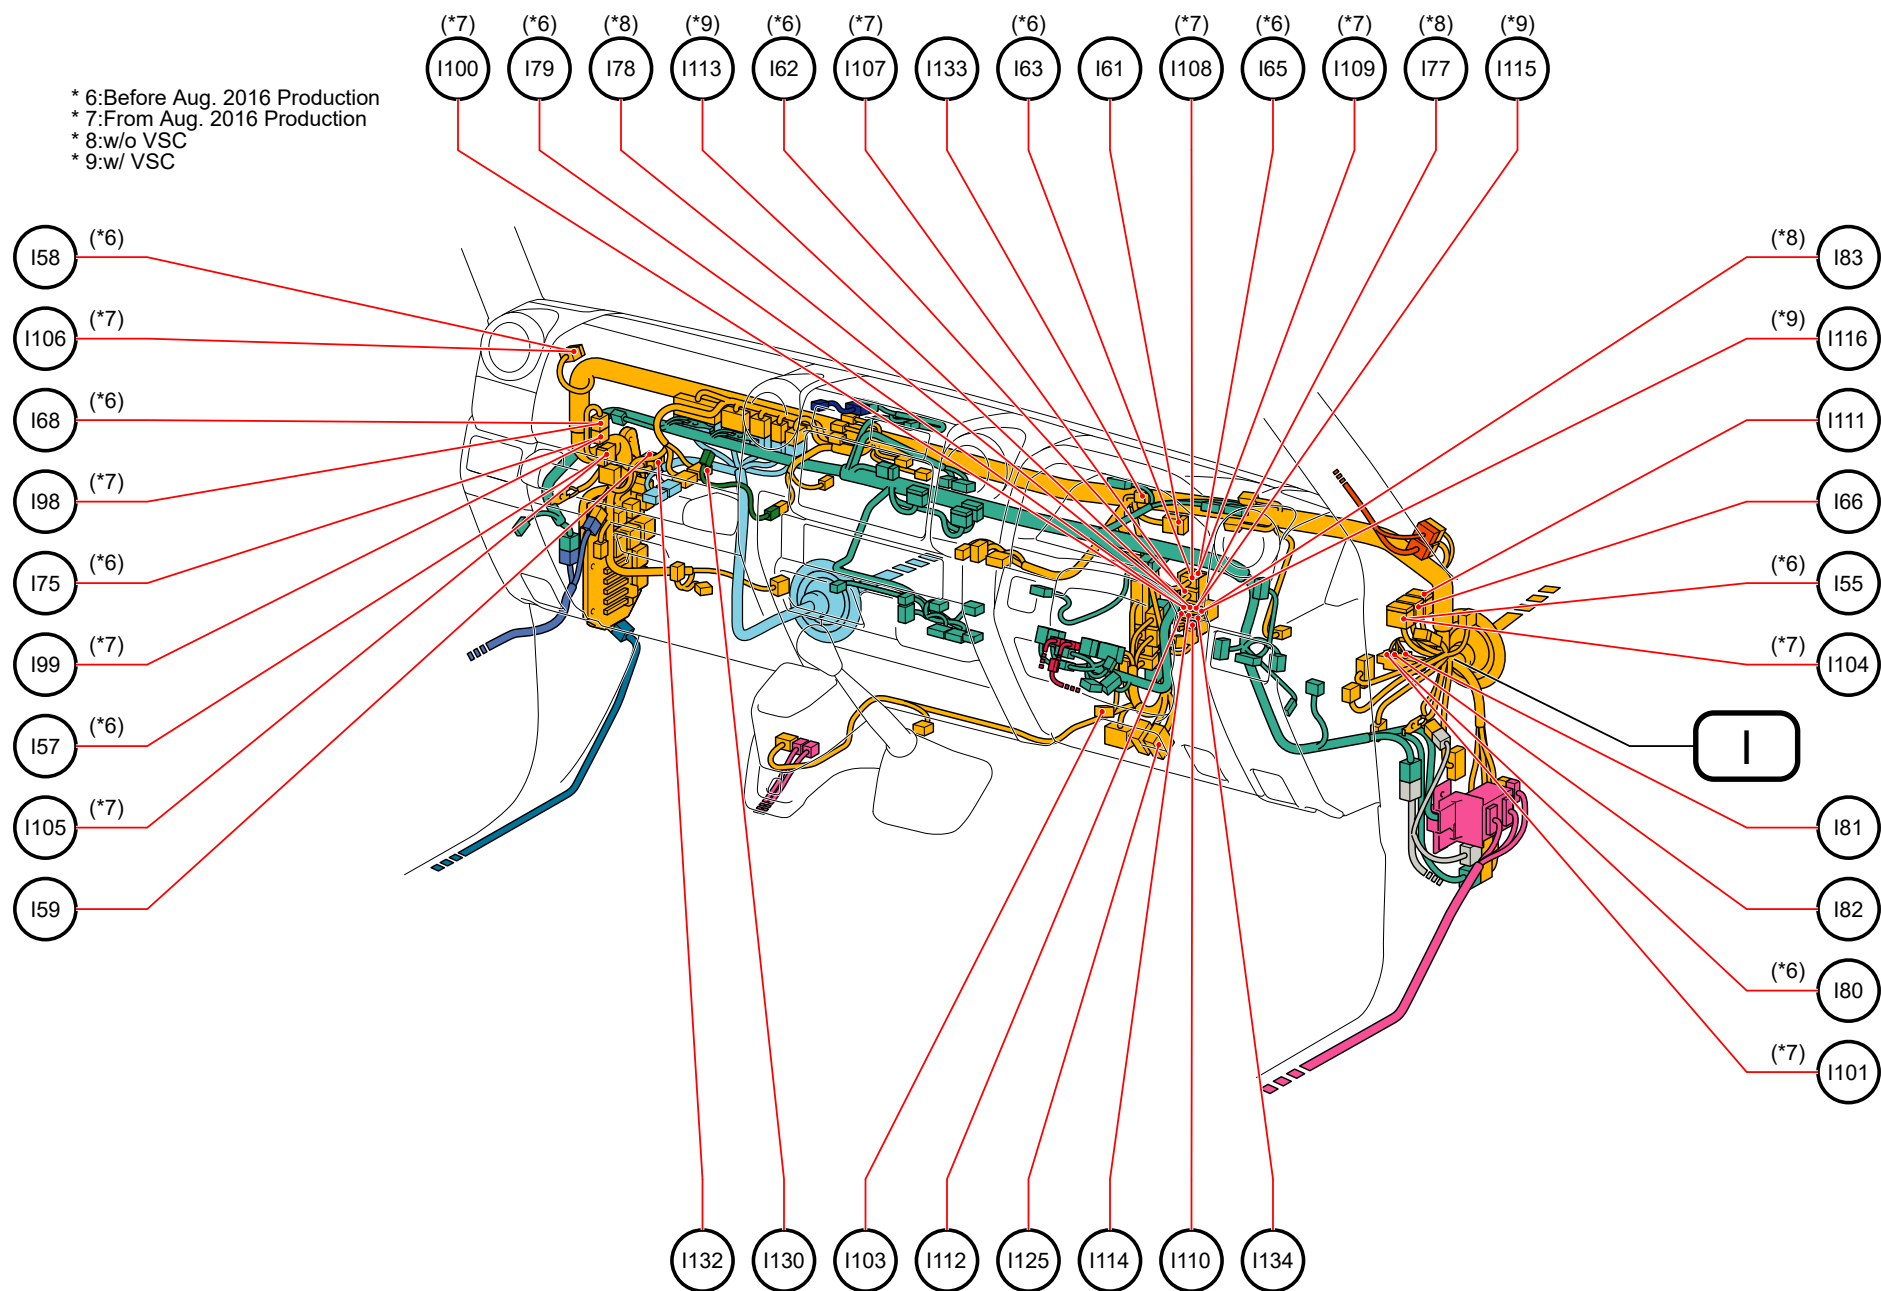

I55	No. 6 Junction Connector
I57	No. 8 Junction Connector
I58	No. 9 Junction Connector
I59	No. 10 Junction Connector
I61	No. 11 Junction Connector
I62	No. 12 Junction Connector
I63	No. 13 Junction Connector
I65	No. 13 Junction Connector
I66	No. 15 Junction Connector
I68	No. 17 Junction Connector
I75	No. 17 Junction Connector
I77	No. 1 CAN Junction Connector
I78	No. 1 CAN Junction Connector
I79	No. 1 CAN Junction Connector
I80	No. 2 CAN Junction Connector
I81	No. 2 CAN Junction Connector
I82	No. 2 CAN Junction Connector
I83	No. 1 CAN Junction Connector
I98	No. 17 Junction Connector
I99	No. 17 Junction Connector
I100	No. 1 CAN Junction Connector
I101	No. 2 CAN Junction Connector
I103	Lower No. 1 Instrument Panel Airbag Assembly
I104	No. 6 Junction Connector
I105	No. 8 Junction Connector
I106	No. 9 Junction Connector
I107	No. 12 Junction Connector
I108	No. 13 Junction Connector
I109	No. 13 Junction Connector
I110	No. 33 Junction Connector
I111	No. 5 CAN Junction Connector
I112	No. 4 CAN Junction Connector
I113	No. 4 CAN Junction Connector
I114	No. 4 CAN Junction Connector
I115	No. 4 CAN Junction Connector
I116	No. 4 CAN Junction Connector
I125	DLC3
I130	Network Gateway ECU
I132	No. 40 Junction Connector
I133	No. 41 Junction Connector
I134	No. 7 Global CAN Junction Connector


Position of Parts in Instrument Panel (RHD)

I55
White

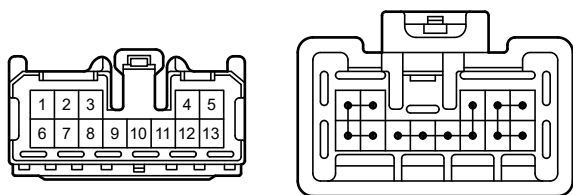


90980-12479

I57
Gray

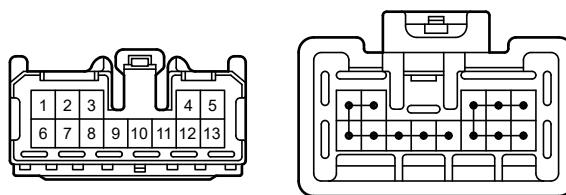


90980-12479

I58
White

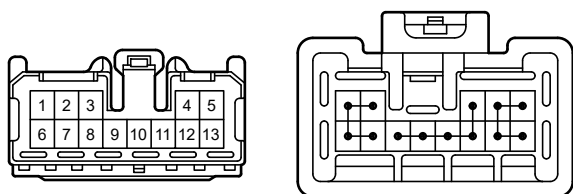


90980-12479

I59
Black

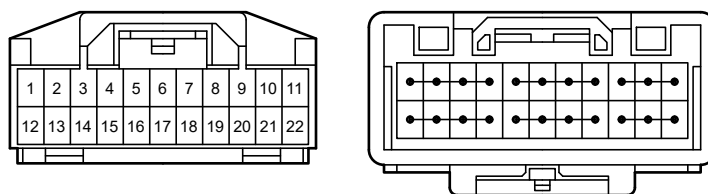


90980-11915

I61
Black

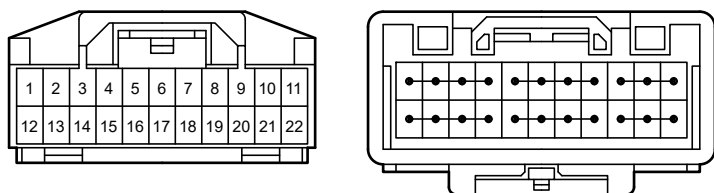


90980-11915

I62
Blue

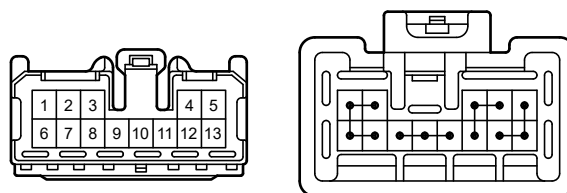


90980-12479

I63
White

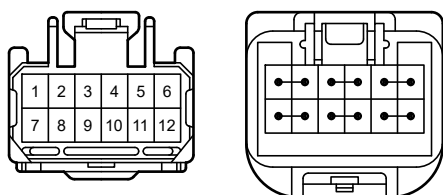


90980-12478

I65
White

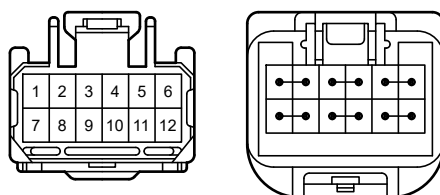


90980-12478

I66
Black

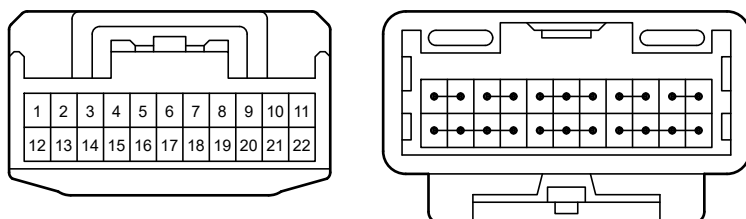


90980-11915

I68
White











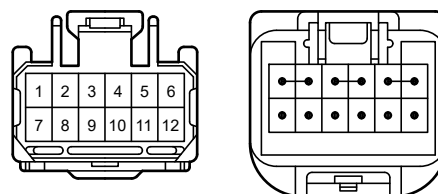


90980-12478

Position of Parts in Instrument Panel (RHD)

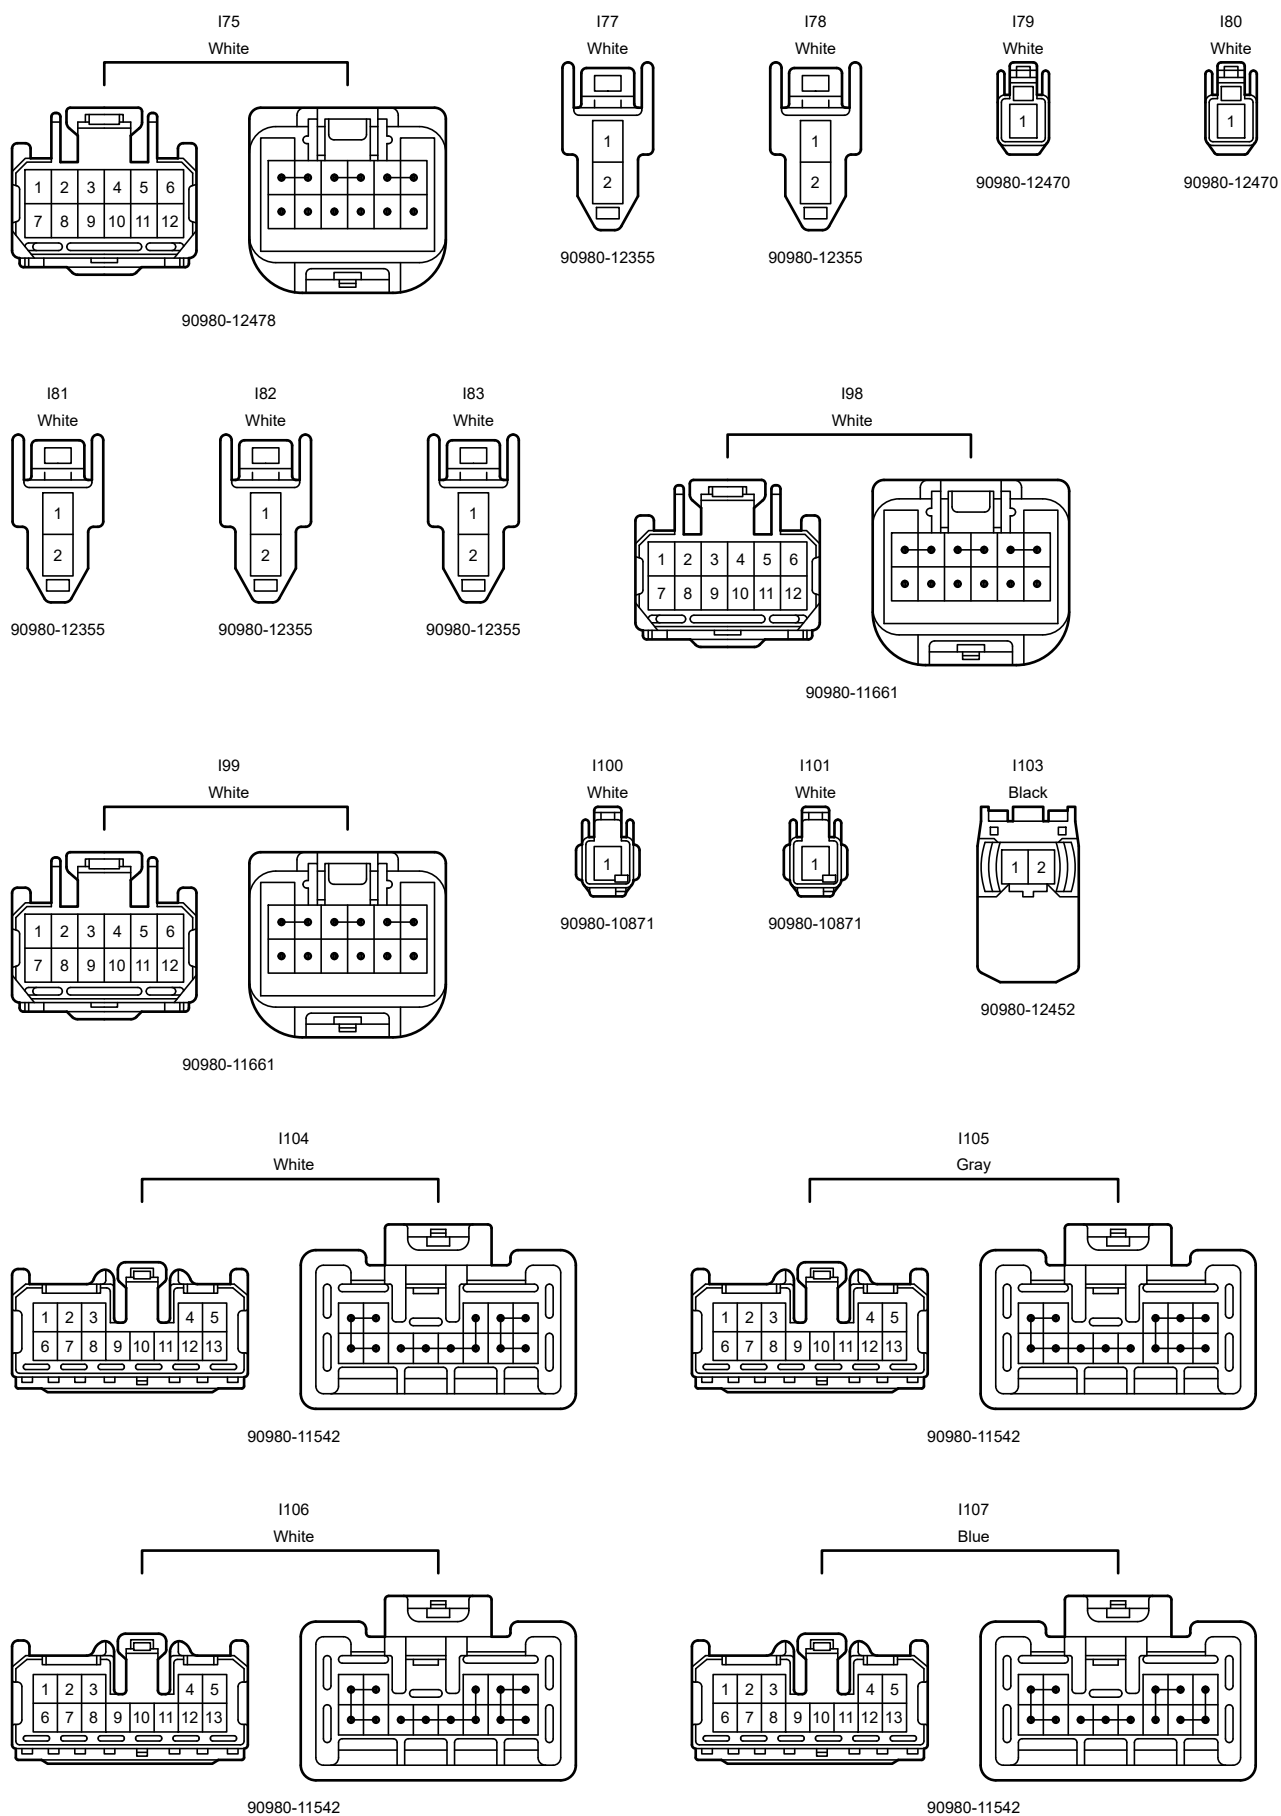

     Position of Parts in Instrument Panel (RHD)

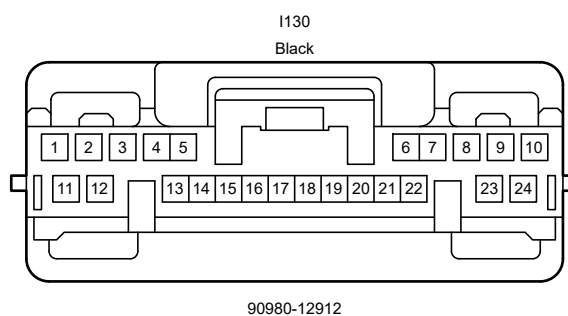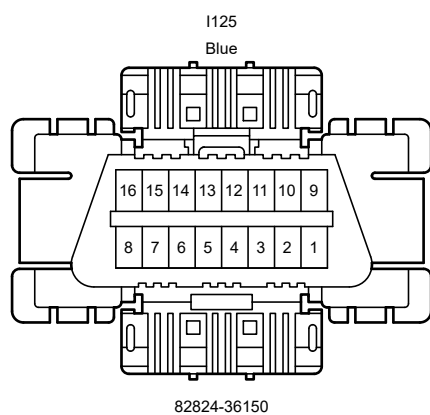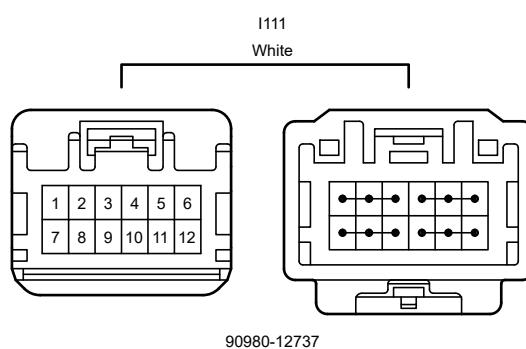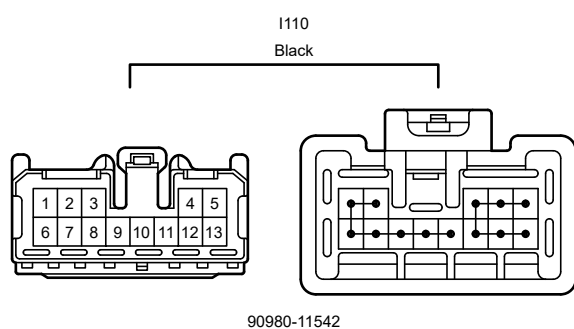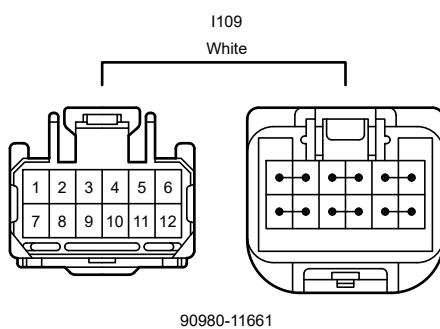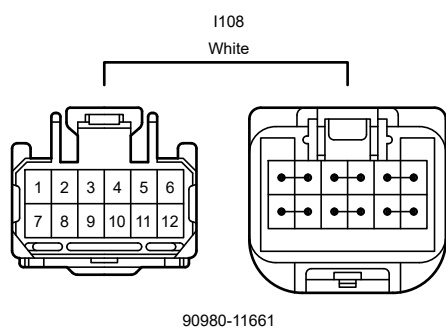

Position of Parts in Instrument Panel (RHD)

