


Position of Parts in Engine Compartment (RHD 1HZ)

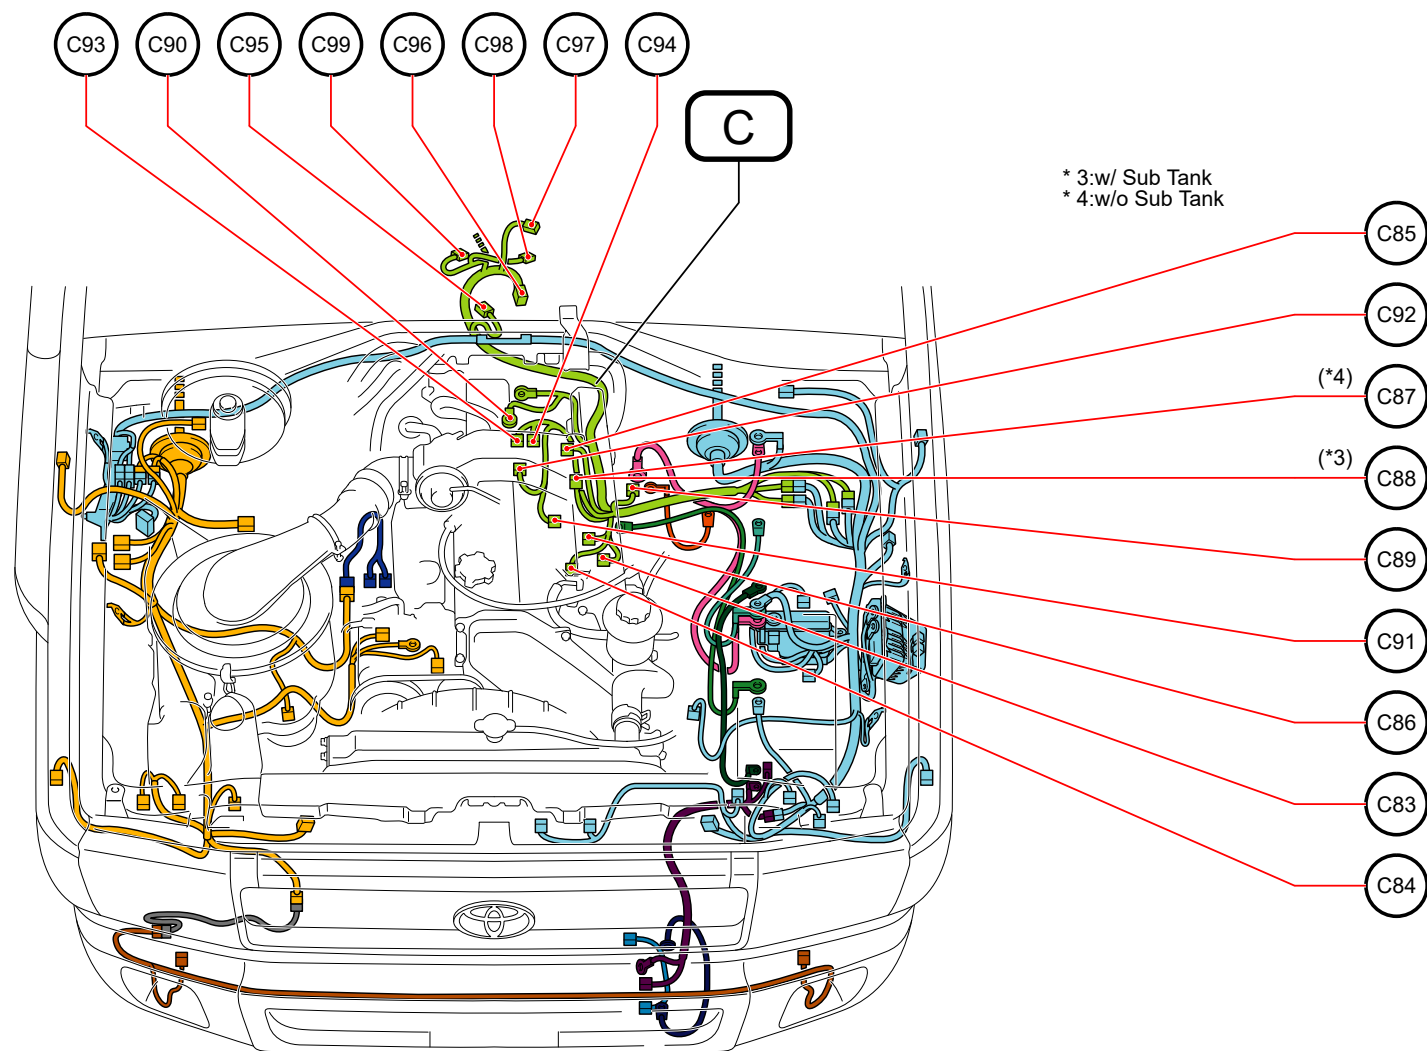


C83	Injection or Supply Pump Assembly
C84	Injection or Supply Pump Assembly
C85	Water Temperature Sender Gage Assembly
C86	Engine Coolant Temperature Sensor
C87	Oil Pressure Sender Gage Assembly
C88	Engine Oil Pressure Switch Assembly
C89	Starter Assembly
C90	Glow Plug Assembly
C91	Electric Vacuum Regulating Valve Assembly (EGR)
C92	Vacuum Switching Valve Assembly (EGR Cut)
C93	Vacuum Sensor
C94	Vacuum Switching Valve Assembly (BACS)
C95	Back-Up Light Switch Assembly
C96	Speedometer Sensor
C97	Fuel Sender Gage Assembly (Front)
C98	Center Differential Lock Indicator Switch (No. 1 Transfer Indicator Switch)
C99	Transfer L4 Position Switch (No. 1 Transfer Indicator Switch)

Position of Parts in Engine Compartment (RHD 1HZ)



90980-11157

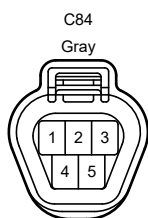

90980-11599



 
90980-11428



90980-10737
(w/ Emission Control)



90980-10737
(w/o Emission Control)





90980-10703




90980-10703




90980-11184

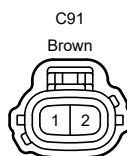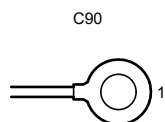


90980-11162
(1HZ)

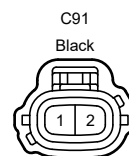


90980-11162
(1VD-FTV)

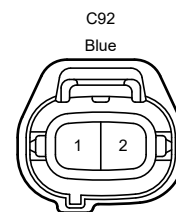


90980-12634

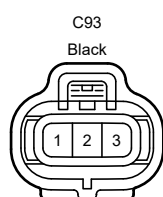


90980-12636

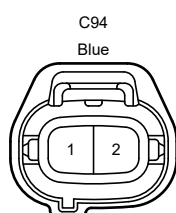


90980-12634

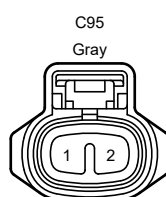


90980-11250

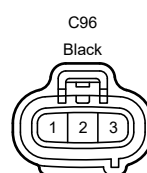


90980-11143

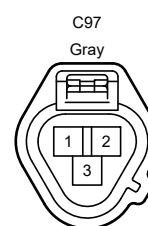

90980-11016

 

90980-10243

 

90980-10157