


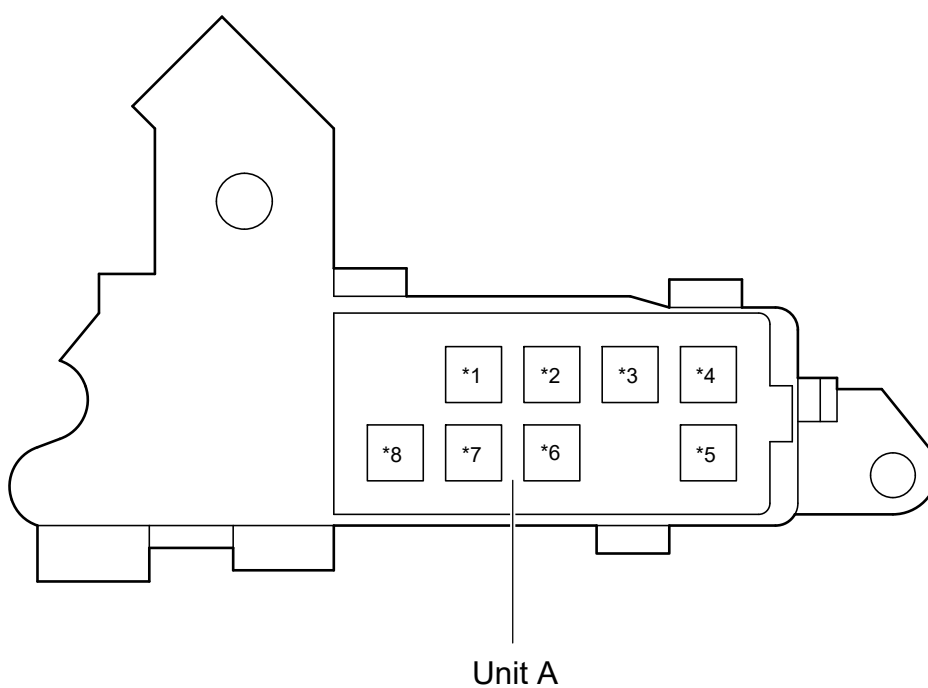

: Fusible Link Block Assembly

## Left Engine Compartment

- \* 1:80A GLOW2
- \* 2:80A GLOW1
- \* 3:140A ALT (1GR-FE, 1VD-FTV)  
100A ALT (1HZ)
- \* 4:50A HTR
- \* 5:50A AM1 NO.2
- \* 6:30A AM1
- \* 7:50A AM1 NO.3
- \* 8:50A ALT MAIN






: Fusible Link Block Assembly

## Left Engine Compartment

### Unit A

Back View

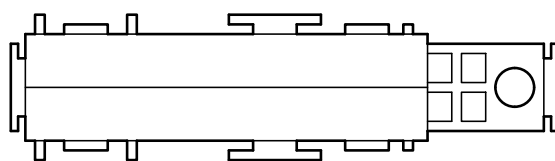


\* 1:from Engine Room Main Wire (1HZ), from Engine Wire (1VD-FTV), from No. 2 Engine Wire (1GR-FE)

Side View



Top View

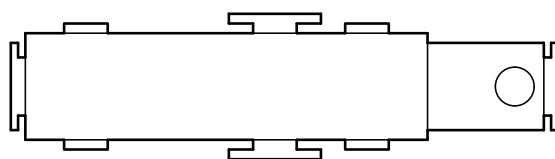

Side View

