


Position of Parts in Engine Compartment (RHD 1VD-FTV)

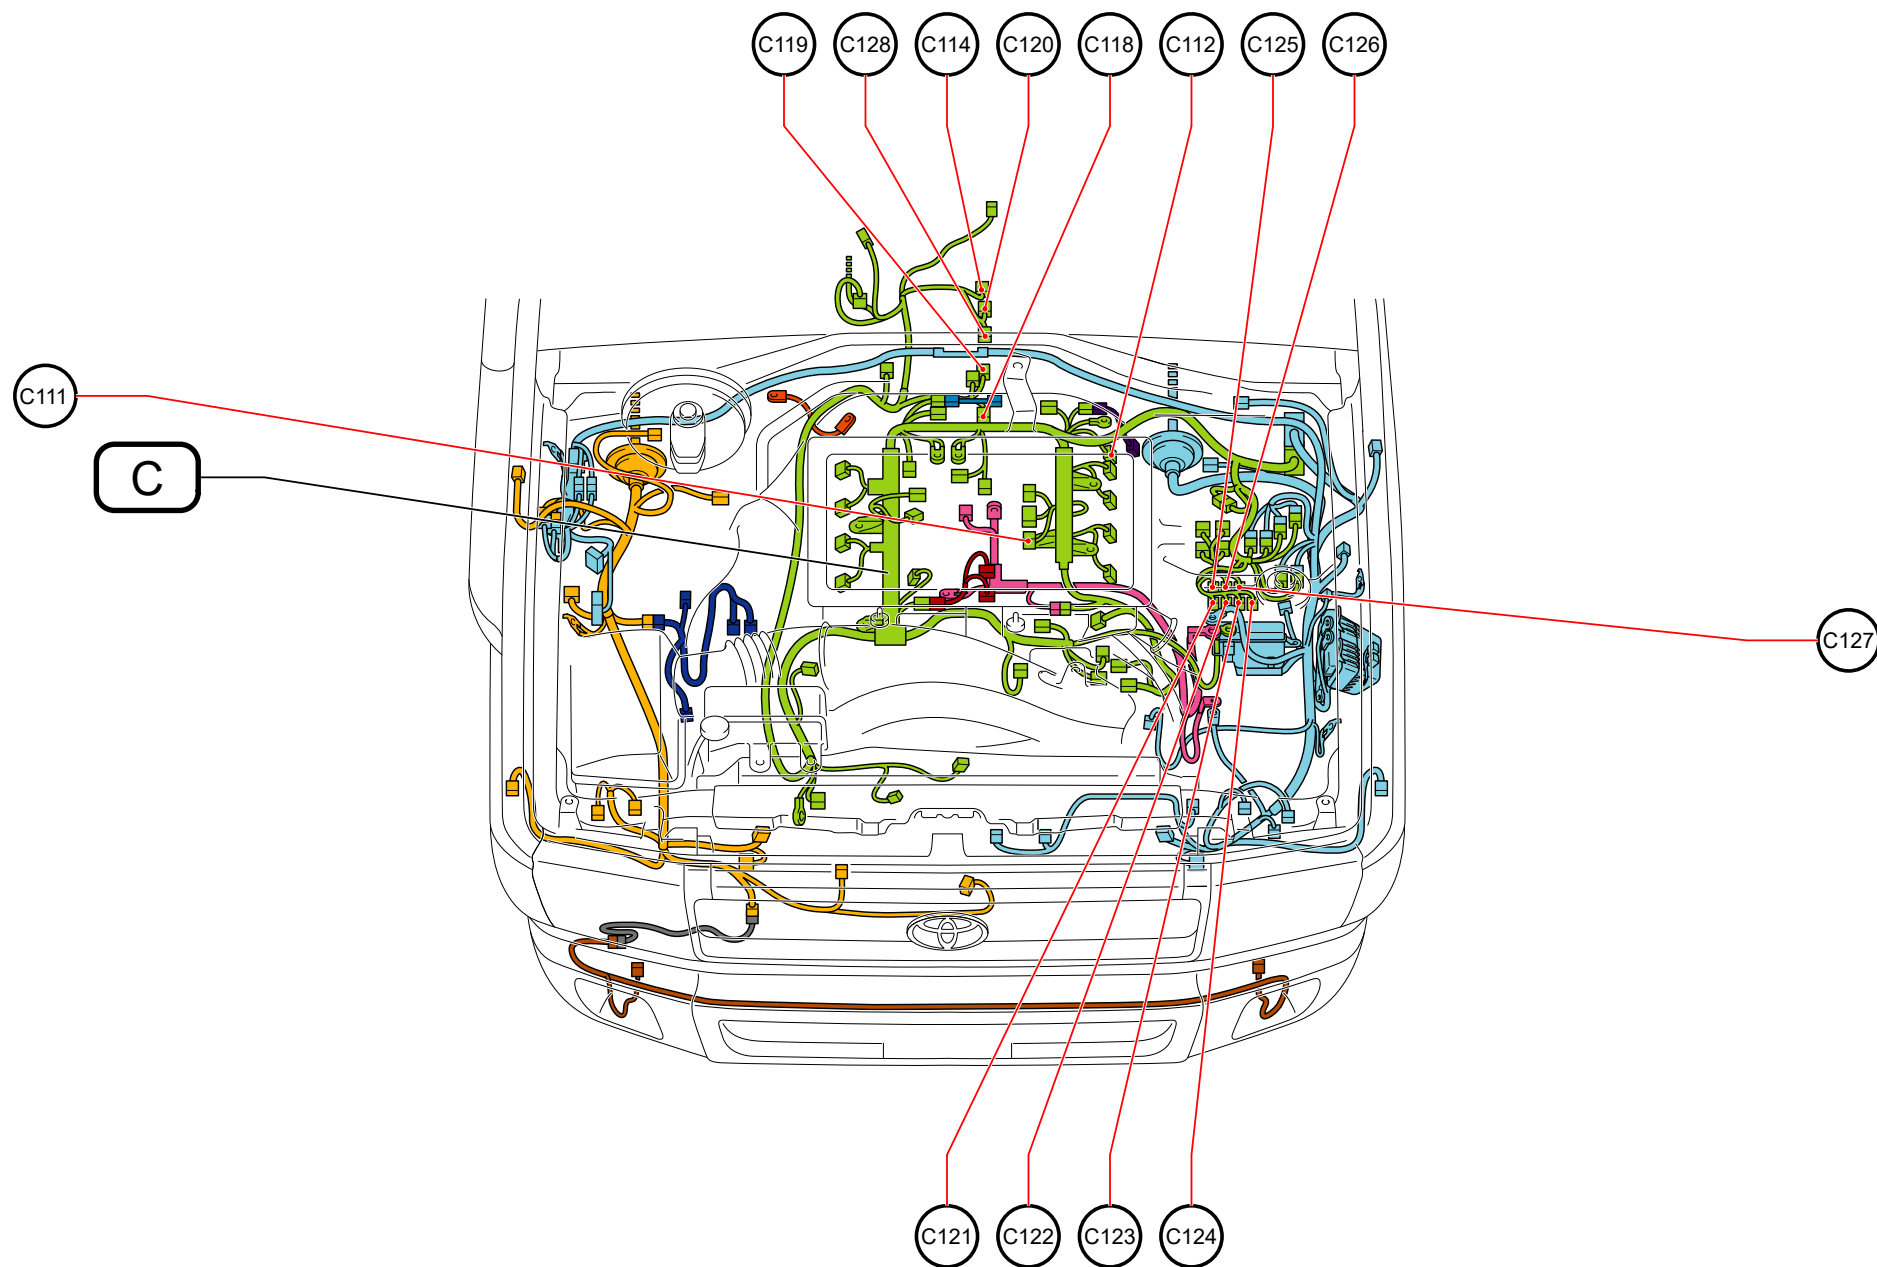

C111 No. 1 Vacuum Switching Valve Assembly (for EGR Cooler Bypass Valve)  
C112 Injector Assembly No. 8  
C114 Air Fuel Ratio Sensor (Bank 1 Sensor 1)  
C118 No. 1 Exhaust Gas Temperature Sensor  
C119 No. 2 Exhaust Gas Temperature Sensor  
C120 DPF Temperature Sensor (No. 3 Exhaust Gas Temperature Sensor)  
C121 Injector Driver (EDU) (No. 1)  
C122 Injector Driver (EDU) (No. 1)  
C123 Injector Driver (EDU) (No. 1)  
C124 Injector Driver (EDU) (No. 1)  
C125 Injector Driver (EDU) (No. 2)  
C126 Injector Driver (EDU) (No. 2)  
C127 Injector Driver (EDU) (No. 2)  
C128 Differential Pressure Sensor

Position of Parts in Engine Compartment (RHD 1VD-FTV)

