



Position of Parts in Engine Compartment (LHD 1HZ)

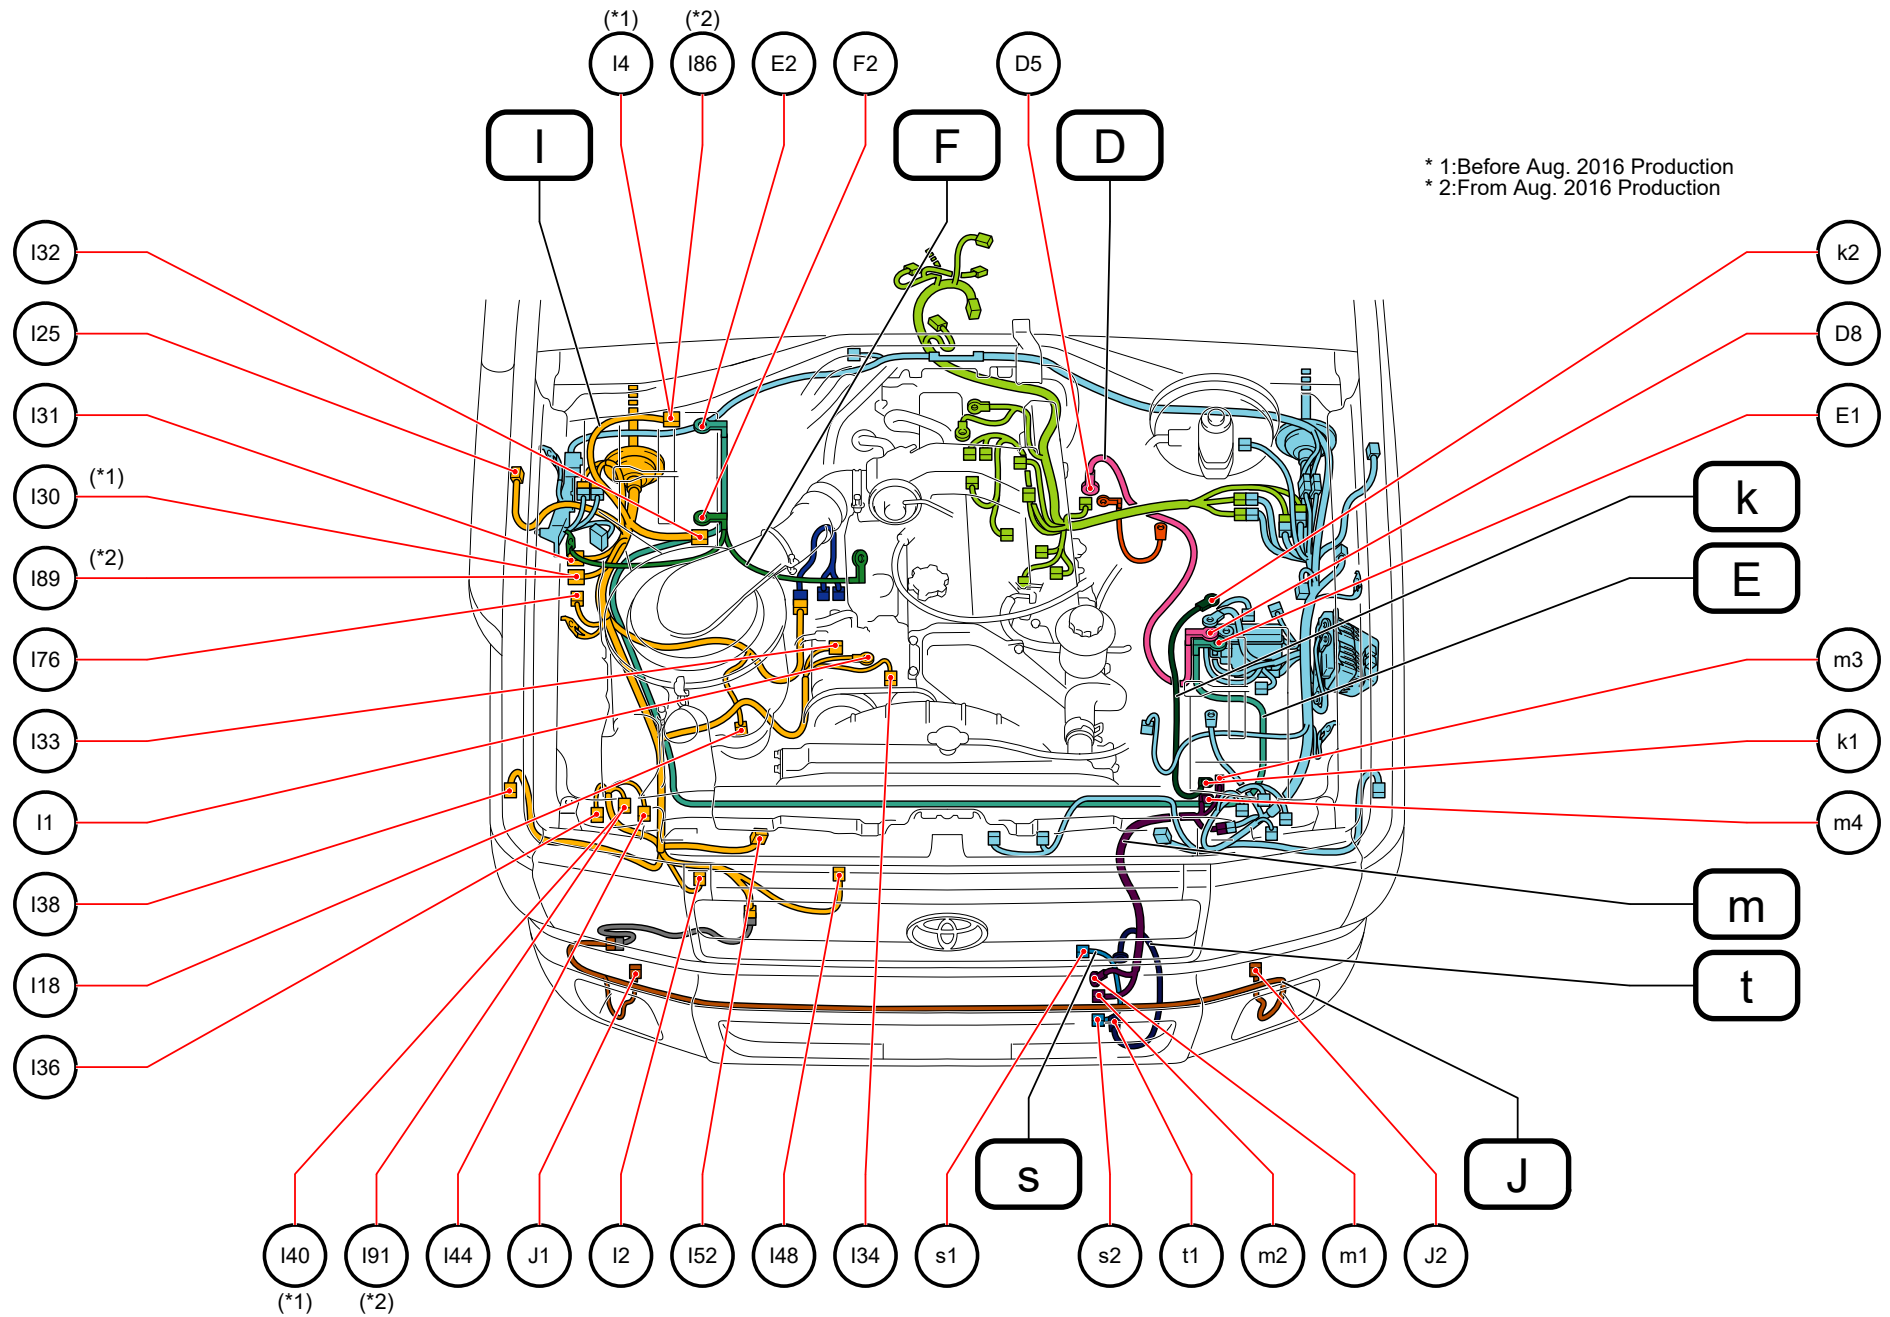


Position of Parts in Engine Compartment (LHD 1HZ)

D5	Starter Assembly
D8	Battery (Main)
E1	Battery (Main)
E2	Battery (Sub)
F2	Battery (Sub)
I1	Generator Assembly
I2	A/C Pressure Switch (Cooler Refrigerant Liquid Pipe B)
I4	Windshield Wiper Motor Assembly
I18	Front Speed Sensor RH (Skid Control Sensor Wire RH)
I25	Side Turn Signal Light Assembly RH
I30	Four Wheel Drive Control Solenoid Assembly
I31	Four Wheel Drive Control Solenoid Assembly
I32	Vacuum Warning Switch Assembly
I33	Magnet Clutch Assembly
I34	Generator Assembly
I36	Headlight Assembly RH
I38	Headlight Assembly RH
I40	Headlight Assembly RH
I44	Headlight Assembly RH
I48	Thermistor Assembly
I52	Front Airbag Sensor RH
I76	Fuse Block Assembly
I86	Windshield Wiper Motor Assembly
I89	Four Wheel Drive Control Solenoid Assembly
I91	Headlight Assembly RH
J1	Fog Light Assembly RH
J2	Fog Light Assembly LH
k1	No. 1 Magnet Switch Assembly
k2	Battery (Main)
m1	Winch Motor with Magnet Switch Assembly
m2	Winch Motor with Magnet Switch Assembly
m3	No. 1 Magnet Switch Assembly
m4	No. 1 Magnet Switch Assembly
s1	Winch Assembly
s2	Winch Motor with Magnet Switch Assembly
t1	Winch Motor with Magnet Switch Assembly


Position of Parts in Engine Compartment (LHD 1HZ)

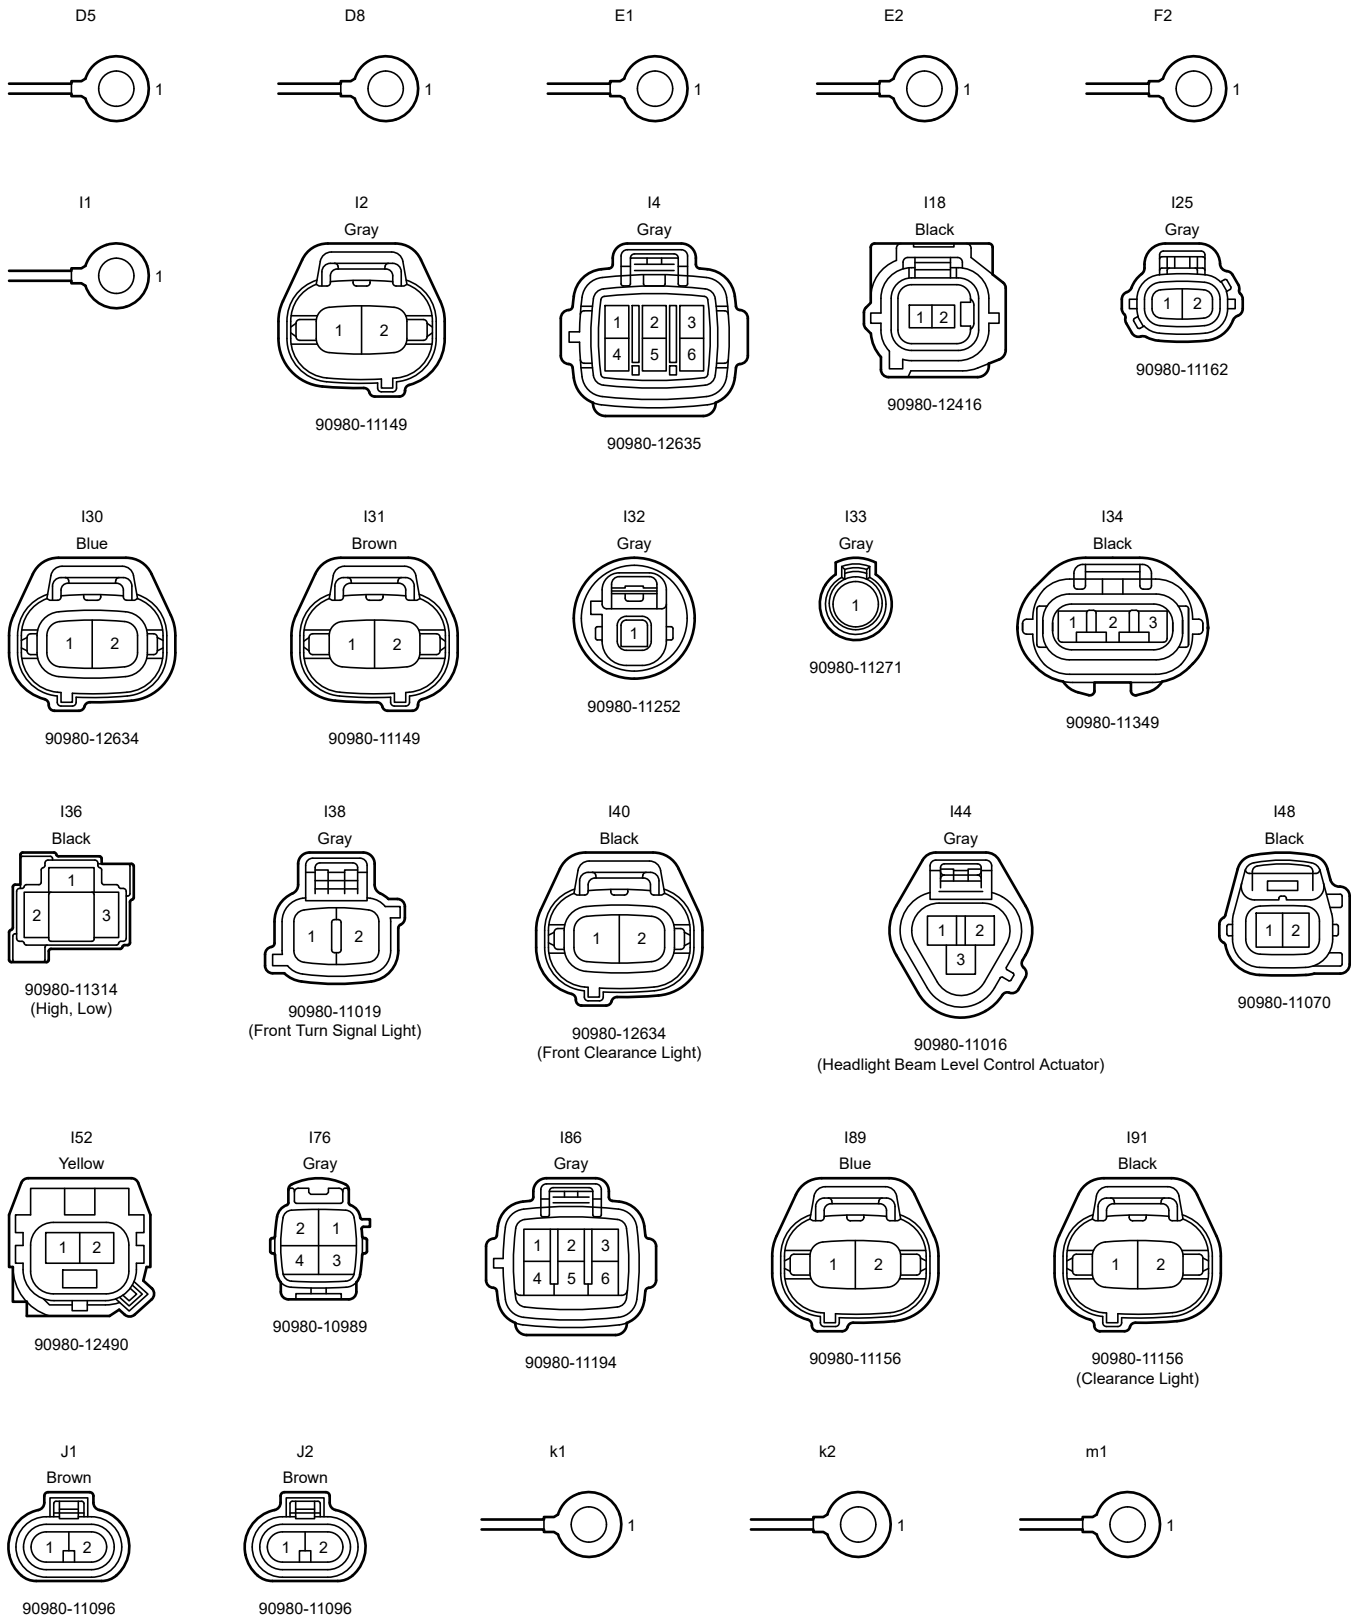


Position of Parts in Engine Compartment (LHD 1HZ)

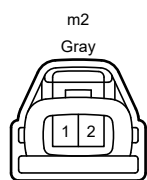

90980-10887

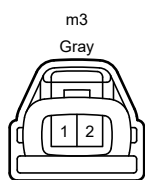

90980-10887

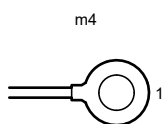

90980-10987



90980-10988

