 



MultiWii 1.7+ Stick Configuration

Mode 2


Motor Arm




Motor Arm on TRI

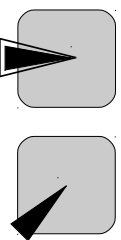


Motor Disarm

 


Motor Disarm on TRI

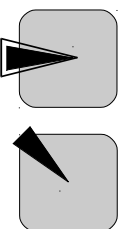


Calibration Acro Gyro

 

Calibration Stable ACC
(disarm Motor first)

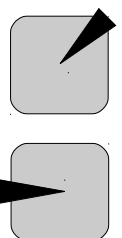


Trim ACC
(move right stick from center and
back for each click – LED blinks
once per click)

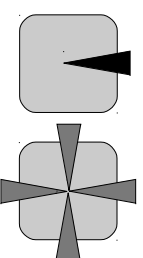


LCD – Configuration Mode

 
Enter
(disarm Motor first)




Select Param

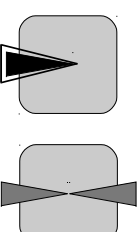


Change Value

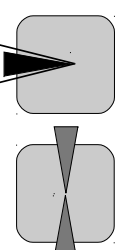

Save and Exit

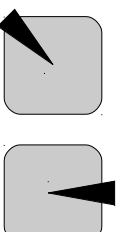

Exit without Save

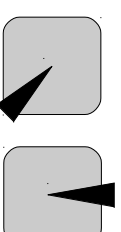

This work is licensed under the

Creative Commons Attribution-NonCommercial-ShareAlike 3.0
Unported License.

To view a copy of this license, visit
<http://creativecommons.org/licenses/by-nc-sa/3.0/> or send a letter to
Creative Commons, 171 Second Street, Suite 300,
San Francisco, California, 94105, USA.
Document 2011-04-20
Version 0.5772
(lookup Euler-Mascheroni constant)
A Product made by Hamburger

