



Wiring diagram showing connections for the sensor module:

- RAW_VCC is connected to X1-2 and X2-1.
- VCC_15V is connected to X2-1.
- GND is connected to X1-1 and X2-2.
- GND is connected to X2-2.

VCC_15V — X3-2 X4-1 — VCC_5V
GND — X3-1 X4-2 — GND

