

Bolster - Side - Seat - 2nd Row - LH (Remove and Replace)

FRT No: 13024002

Removal


1. Fully open the LH rear door.
2. Release the LH rear seat back rest lock and push the rear seat back rest flat for access.
3. Insert a wedge tool behind the bolster to provide outward pressure.




4. Use a long screwdriver or long pliers to disengage the upper grommet.
5. Release the seat side bolster from the grommet.



Caution: If the bolster cannot be removed easily, do not force it. This might bend the bolster structure, permanently damaging the bolster.

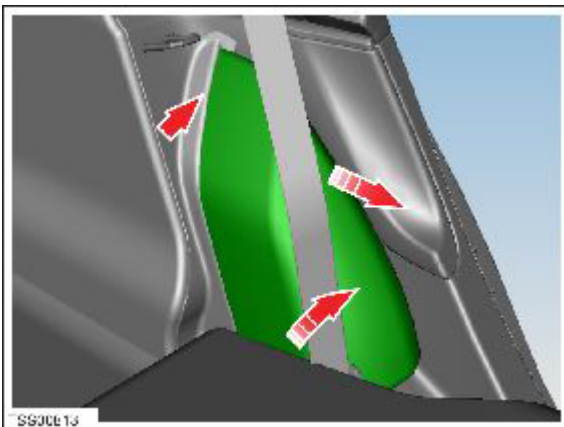

6. Repeat steps 4-5 on the lower grommet.
7. Remove the seat side bolster.

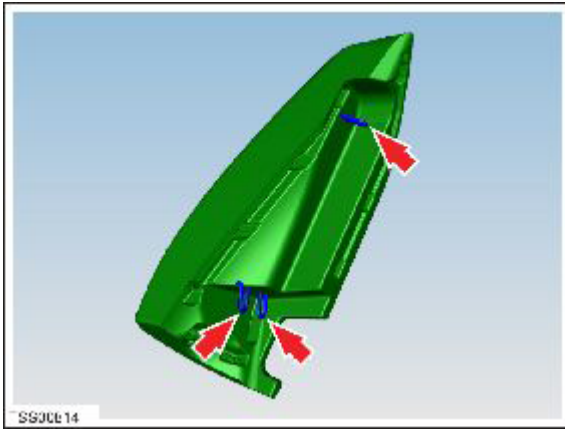

Installation

Installation procedure is the reverse of removal.