

Back Rest Assembly - Seat - 2nd Row - LH (Remove and Install)


FRT No: 13021201

Removal


1. Remove rear seat base cushion for access ([refer to procedure](#))
2. Remove the bolt that secures the seat belt to the 2nd row seat base frame (torque 40 Nm).




Caution: This bolt is a one time use component. Ensure that a new bolt is used during reinstallation.

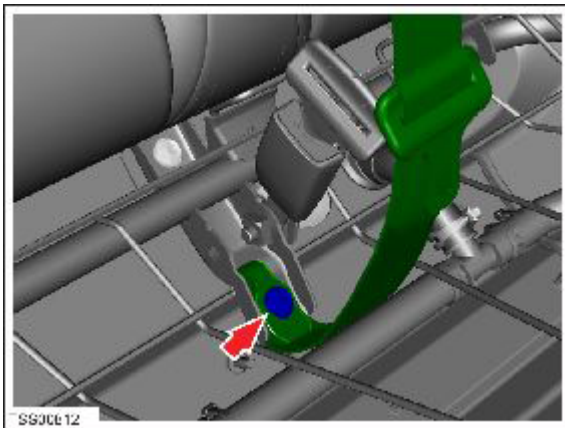

3. Remove LH rear seat bolster ([refer to procedure](#))
4. Release LH rear seat back rest pivot retaining clip.

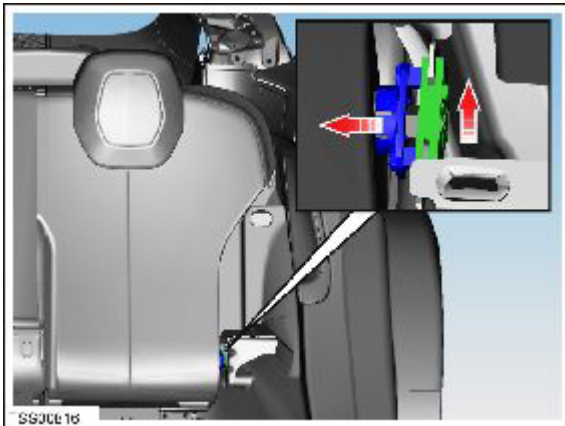

5. Reposition rear seat back rest upwards and release pivot from retaining bracket.
6. Reposition rear seat back rest and release back rest from inner pivot retaining bracket.

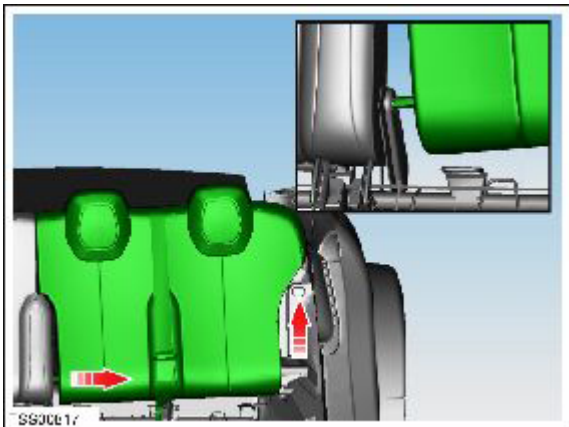

7. Remove rear seat back rest assembly.

Installation

Installation procedure is the reverse of removal.