



Autonomous Vehicle Simulation (AVS) Laboratory, University of Colorado

Basilisk Technical Memorandum

Document ID: Basilisk-sunSafePoint

SUN POINTING USING A BODY-RELATIVE SUN DIRECTION VECTOR AND RATE GYRO INFORMATION

Prepared by	H. Schaub
-------------	-----------

Status: Released
Scope/Contents
<p>This module provides the attitude guidance output for a sun pointing mode. This could be used for safe mode, or a power generation mode. The input is the sun direction vector which doesn't have to be normalized, as well as the body rate information. The output is the standard BSK attitude reference state message. The sun direction measurement is cross with the desired body axis that is to point at the sun to create a principle rotation vector. The dot product between these two vectors is used to extract the principal rotation angle. With these a tracking error MRP state is computer. The body rate tracking errors relative to the reference frame are set equal to the measured body rates to bring the vehicle to rest when pointing at the sun. Thus, the reference angular rate and acceleration vectors relative to the inertial frame are always set to zero.</p>

Rev	Change Description	By	Date
1.0	First Documentation of this module, even though the module was one of the first BSK modules drafted.	H. Schaub	2018-04-28

Contents

1	Model Description	1
1.1	Module Goal	1
1.2	Equations	2
1.2.1	Good Sun Direction Vector Case	2
1.2.2	No Sun Direction Vector Case	2
2	Module Functions	3
3	Module Assumptions and Limitations	3
4	Test Description and Success Criteria	3
4.1	Check 1	3
4.2	Check 2	3
5	Test Parameters	3
6	Test Results	3
7	User Guide	4

1 Model Description

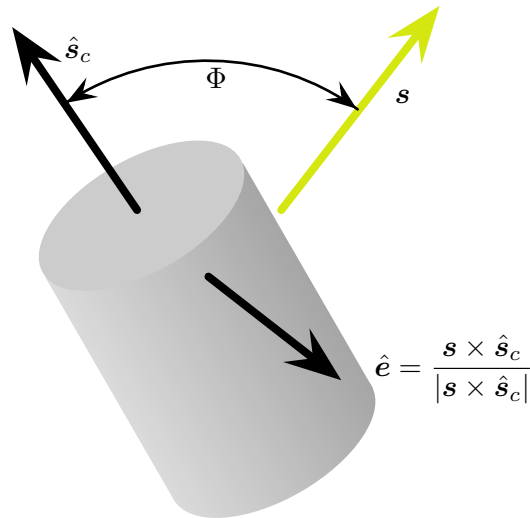


Fig. 1: Body Vector Illustrations.

1.1 Module Goal

This attitude guidance module has the goal of aligning a commanded body-fixed spacecraft vector \hat{s}_c with another input vector s . If \hat{s}_c is for example the solar panel normal vector, and s is the current sun heading vector, this module will compute the attitude tracking errors to align the solar panels towards

the sun, i.e. achieve sun pointing. Sun pointing is a mode for general recharging the spacecraft, but is also a common guidance scenario with Safe Mode.

Besides s , the second input vector is the inertial body angular velocity vector $\omega_{B/N}$. The sun pointing frame is assumed to be at rest, thus the attitude rate tracking error is set equal to the body rates.

As the desired sun pointing orientation is inertial, the inertial reference frame rate $\omega_{R/N}$ and acceleration $\dot{\omega}_{R/N}$ are set to zero.

Note that this module does not establish a unique sun-pointing reference frame. Rather, the pointing condition, align \hat{s}_c with s is an under-determined 2 degree of freedom condition. Thus, the rotation angle about s is left to be arbitrary in this sun pointing module. For the sun pointing applications this is a very practical result as the power generation does not depend on the orientation about s .

1.2 Equations

1.2.1 Good Sun Direction Vector Case

In the following mathematical developments all vectors are assumed to be taken with respect to a body-fixed frame \mathcal{B} . The attitude of the body \mathcal{B} relative to the reference frame \mathcal{R} is written as a principal rotation from \mathcal{R} to \mathcal{B} . Thus, the associated principal rotation vector \hat{e} is

$$\hat{e} = \frac{s \times \hat{s}_c}{|s \times \hat{s}_c|} \quad (1)$$

Note that the sun direction vector s does not have to be a normalized input vector.

The principal rotation angle between the two vectors is given through

$$\Phi = \arccos(s \cdot \hat{s}_c) \quad (2)$$

Next, this rotation from \mathcal{R} to \mathcal{B} is written as a set of MRPs through

$$\sigma_{B/R} = \tan\left(\frac{\Phi}{4}\right) \hat{e} \quad (3)$$

The set $\sigma_{B/R}$ is the attitude error of the output attitude guidance message.

The tracking error angular velocity vector is set equal to the measure body rates to bring the spacecraft to rest when pointing in the desired direction.

$$\omega_{B/R} = \omega_{B/N} \quad (4)$$

Finally, the attitude guidance message must specify the inertial reference frame rates and acceleration vectors. These are all set to zero.

$$\omega_{R/N} = 0 \quad (5)$$

$$\dot{\omega}_{R/N} = 0 \quad (6)$$

1.2.2 No Sun Direction Vector Case

If Φ is less than the module parameter `minUnitMag`, then it is assumed that no good sun heading vector is available and the attitude tracking error $\sigma_{B/R}$ is set to zero.

Further, if the sun is not visible, the module allows for a non-zero body rate to be prescribed. This allows the spacecraft to engage in a constant rate tumble specified through the module configuration vector `omega_RN_B`. In this case the tracking error rate is evaluate through

$$\omega_{B/R} = \omega_{B/N} - \omega_{R/N} \quad (7)$$

and the output message reference rate is set equal to the prescribed $\omega_{R/N}$

2 Module Functions

- **Compute the attitude tracking error:** Determines the shortest rotation to align s and \hat{s}_c , and computes the corresponding three-dimensional attitude difference
- **Bring spacecraft to rest:** The reference frame is assumed to be at rest and non-accelerating.
- **Robust to no sun heading information:** If the sun heading vector is not available, then the attitude feedback is turned off by zeroing $\sigma_{B/R}$. Instead of driving the body rates to zero, the body rates are driven to a prescribed $\omega_{R/N}$ vector. This allow the spacecraft to search for the sun and covers the case if some sun sensors are offline.

3 Module Assumptions and Limitations

The module input vector s can be a vector of any length except for a zero-length vector. The commanded body-relative unit direction vector s_c is assumed to be fixed relative to the body.

4 Test Description and Success Criteria

The mathematics in this module are straight forward and can be tested in a series of input and output evaluation tests.

4.1 Check 1

Here a check is performed where the sun vector measurement s has a non-zero length and is not aligned with \hat{s}_c .

4.2 Check 2

The sun direction vector s is given a norm value that is less than `minUnitMag`. In this case the attitude tracking $\sigma_{B/R}$ should be set to zero. Further, the body rate errors are now evaluated relative to a fixed $\omega_{R/N}$ vector.

5 Test Parameters

The unit test verify that the module output guidance message vectors match expected values.

Table 2: Error tolerance for each test.

Output Value Tested	Tolerated Error
$\sigma_{B/R}$	1e-12
$\omega_{B/R}$	1e-12
$\omega_{R/N}$	1e-12
$\dot{\omega}_{R/N}$	1e-12

The nominal module test input values are $\hat{s}_c = (0, 0, 1)$, $s = (1, 0, 0)$ and ${}^B\omega_{B/N} = (0.01, 0.50, -0.20)$ rad/sec. The nominal body-fixed search rate is set to ${}^B\omega_{R/N} = (0.0, 0.0, 0.1)$ rad/sec. This rate is only used if no sun direction vector is available.

6 Test Results

All of the tests passed:

Table 3: Test results

Check	Pass/Fail
1	PASSED
2	PASSED

7 User Guide

The module has 2 required input messages:

- `inputSunVecName` – This message, of type `NavAttIntMsg`, received the sun heading vector s
- `inputIMUDataName` – This message, of type `IMUSensorBodyFswMsg`, received the inertial angular body rates $\omega_{B/N}$

The module has the following parameter that can be configured:

- `sHatBdyCmd` – [REQUIRED] This 3x1 array contains the commanded body-relative vector \hat{s}_c that is to be aligned with the sun heading s
- `minUnitMag` – This double contains the minimum norm value of s such that a tracking error attitude solution $\sigma_{B/R}$ is still computed. If the norm is less than this, then $\sigma_{B/R}$ is set to zero. The default `minUnitMag` value is zero.