



Content

- 1- Chimney Installation Procedure
- 2- How to use
- 3- Warranty and Terms and condition

1 - Chimney Installation Procedure

Product Name: Adhunik DecoDive

Installation Type: Wall-mounted

Mounting Type: Ducted

Table of Contents

1. Safety Instructions
2. Tools Required
3. Package Contents
4. Pre-Installation Checklist
5. Installation Steps
6. Electrical Connection
7. First-Time Setup & Testing
8. Maintenance Tips
9. Troubleshooting

1. Safety Instructions

- Read this manual completely before installation.
- Disconnect electrical supply before installation.
- Wear gloves and safety goggles while drilling.
- Ensure chimney is installed at a safe height above the cooktop.
- Use a certified electrician for electrical connections.
- Do not block the air outlet or vent pipe.

2. Tools Required

- Drill machine
 - Screwdrivers (Flat and Phillips)
 - Measuring tape
 - Level tool
 - Pencil/Marker
 - Wall plugs & anchors
 - Ducting pipe & clamps
 - Insulation tape
-



3. Package Contents

Item	Quantity
Chimney unit	1
Wall mounting bracket	1
Screws and wall plugs set	1
Flexible duct pipe	1
Installation guide & User manual	1
Warranty card	1



4. Pre-Installation Checklist

- Verify wall structure is strong enough to hold the chimney.
- Ensure cooktop is correctly positioned (centered under chimney).
- Recommended installation height:
 - **Gas stove:** 24-30 inches
 - **Induction stove:** 18-24 inches
- Ensure a power socket is available within reach.
- For ducted models, identify route for duct pipe (preferably straight and short).



5. Installation Steps

◆ Step 1: Mark Mounting Points

- Use the bracket as a template to mark holes on the wall.
- Ensure the center of the chimney aligns with the cooktop.
- Use a level to keep the mounting bracket straight.

◆ Step 2: Drill & Fix Mounting Bracket

- Drill holes at the marked points.
- Insert wall plugs and fix the mounting bracket securely using screws.

◆ Step 3: Attach Chimney to Bracket

- Lift the chimney and hang it onto the bracket.
- Ensure it's securely fixed and aligned properly.

Step 4: Install Duct Pipe

- Connect one end of the duct pipe to the chimney's exhaust outlet.
- Secure it with a clamp.
- Route the duct to the outside exhaust outlet.
- Secure the other end with a clamp and seal any gaps using insulation tape.
- Avoid sharp bends or long ducting paths.

6. Electrical Connection

- Plug the chimney into a grounded socket.
- Voltage: AC 220–240V, 50Hz.
- Do not use extension cords or multiple plugs.
- If hardwiring is required, use certified electricians only.

7. First-Time Setup & Testing

- Switch on the chimney using the control panel or motion sensor.
- Test each speed setting and light.
- Check for vibration, noise, or loose fittings.
- For auto-clean models: Run a cleaning cycle to test functionality.

8. Maintenance Tips

- **Auto-clean** models: Run the cleaning function monthly.
- **Duct pipe:** Inspect every 6 months for grease or blockages.
- Do not use abrasive cleaners on the chimney body.

9. Troubleshooting

Issue	Cause	Solution
Chimney not turning on	Loose power connection	Check socket and plug
Weak suction	Dirty filters	Clean or replace filters
Excessive noise	Loose fitting or duct bend	Tighten mount, recheck duct path
Oil dripping	Clogged filter	Clean filter immediately

2. How to use


- **Ensure Proper Installation:** Chimney should be installed at a height of 24 to 30 inches above your stove.
- **Power Connection:** Make sure the chimney is properly connected to a power outlet.

Turning ON the Chimney

1. Using the Touch Panel:

- Tap the **power icon** on the touch panel to switch it on.
- Select **fan speed**
- Tap the **light icon** to turn the LED lights on/off.

2. Using Motion Sensor (Hand Gesture Control):

- **To Turn ON:** Wave your hand **from left to right** in front of the sensor (usually near the display panel).
- **To Increase Speed:** Continue waving your hand in the same left-to-right motion.
- **To Decrease Speed/Turn OFF:** Wave your hand **from right to left**.
-  *Note: Sensor response may vary by model, keep your hand about 3-6 inches from the panel.*

Modes of Operation

- **Auto-Clean Mode**
 - Press the **auto-clean icon** (usually looks like a droplet or spark symbol).
 - The chimney will heat up the oil residues and collect them in the oil collector tray.
 - Run auto-clean once every 10-15 days depending on usage.

Maintenance Tips

- **Empty the Oil Collector** tray regularly.
- **Use Auto-Clean** function if available, once in 2 weeks.
- **Wipe the Surface** with a soft damp cloth to keep the glass and touch panel clean.

Things to Avoid

- Don't spray water directly on the control panel.
- Don't use the chimney without switching on the fan while cooking.
- Avoid using harsh chemicals on the sensor or display panel.

3-Chimney Warranty & Terms and Conditions

Warranty Details

Warranty Period:

- The kitchen chimney is covered under a **2-year comprehensive warranty** from the date of purchase.
- The **motor** is covered under a **10-year warranty** from the date of purchase (if applicable based on the brand/model).

What is Covered:

- Manufacturing defects
- Faulty materials or workmanship
- Malfunctioning of motor (as per specific brand warranty)

What is Not Covered:

- Normal wear and tear (e.g., filters, bulbs, glass breakage)
- Damage due to improper installation, misuse, or negligence
- Any modifications or repairs done by unauthorized service personnel
- Rusting, corrosion, or discoloration due to hard water or chemicals
- Damage due to power fluctuations or physical damage

How to Claim:

- Present the original invoice and warranty card at the time of service request.
- Contact customer care or the authorized service center.
- Repairs will be done on-site or at the service center as required.

Terms and Conditions

- 1. Installation:**
 - Must be done by an authorized technician for warranty to be valid.
 - Improper installation voids the warranty.
- 2. Maintenance:**
 - Regular cleaning and maintenance are recommended to ensure proper functioning.
 - Filters should be cleaned as per the user manual to avoid damage.
- 3. Service Visits:**
 - Service under warranty is free of charge.
 - After the warranty period, visit and labor charges will apply.
- 4. Replacement Policy:**
 - Replacement of parts will be at the discretion of the manufacturer.
 - The warranty does not cover product replacement unless deemed irreparable.
- 5. Transferability:**
 - The warranty is non-transferable and is valid only for the first purchaser.
- 6. Limitation of Liability:**
 - The manufacturer is not liable for any indirect or consequential damage caused due to product failure.

