



NOTE : Connect VCC pin of all components to Vin pin of Arduino Nano, and connect GND pin of all components to GND pin of Arduino Nano