

Daft Punk / Tron Jacket Orientation Packet

Effect Modes

	Shooting Beam			
Bar Up & Down	↖	↑	↗	Starburst
Fade In & Out	←	Z + C	→	Gradient Bar
Equalizer Mode (Bass- Treble)	↙	↓	↘	Segmented Fade
	Equalizer Mode Folded (Treble – Bass - Treble)			

Note: If in Lights Off or Lights On mode, press Z + C + Direction and Swipe Gesture to enter an effect mode.
Once in an Effect Mode you do not need to swipe to change modes again.

Output Modes:

Arms EQ	Flipped			Arms EQ
Chest Flipped	↖	↑	↗	Chest Flipped
Clockwise	←	2x(Z+C)	→	Counter clockwise
Chest EQ	↙	↓	↘	Chest EQ
Arms Normal	Normal			Arms Normal

Note: Shoulder EQ Output Modes show opposing color wheel colors when in EQ modes.

Colors:

	Blue			
Green	↖	↑	↗	Yellow
Red	←	C	→	Cyan
White	↙	↓	↘	Purple
	Rainbow			

C + ↺ or ↻	Twist to Change Color
------------	-----------------------

Note: When a color is selected with the control stick, Secondary Color is removed, Output Mode is set to Normal, and Alternating Color Mode is turned off.

Settings:

Hold + Swipe Gesture to fade in Hold & Tap Z 2x (or more) to manually fade in to Lights On	Disable Auto Beat			Display Text Tap or Hold Z to Animate
	↖	↑	↗	
Chest <-> Arm & Arm <-> Chest Alternating Color Mode	←	Z	→	Chest <-> Chest & Arm <-> Arm Alternating Color Mode
Hold + Swipe Gesture to fade out Tap Z 2x (or more) to manually fade out to Lights Off	↙	↓	↘	Tap Z 1x to clear Text Tap Z 2x for announcement screen Tap Z 3x or 4x for diagnostics screen
	Enable Auto Beat Tap Z up to 5X for Speedup			

Z + ↺ or ↻	Twist to Change Second Color
↑	Preview Manual Beat in Helmet
↓	Preview Auto Beat in Helmet

Daft Punk / Tron Disc Orientation Packet

Opening:

- With the disc off, grip it by the edge and push away from you. The disc will light up like a pac-man mouth opening and enter idle mode.

Idle:

- Idle mode will display the current suit color. The primary color will float to the top, the secondary color the bottom.
- If the disc is left in Swipe, Spin, or Setup mode it will enter Idle mode after 10 seconds of inactivity.

Color Sensor / Camera:

- Double tap the disc while in any mode other than setup. The disc will fill with white, take a snapshot, and then fill with the new color.
- If you take a snapshot of darkness (Hold a black leather glove over the sensor) the disc will shut off.
- If you double tap the disc again before the camera is done, it will abort changing colors.

Swipe:

- With the disc in idle mode, grip it by the edge and push away from you. The disc will light up a crescent shape proportional to how hard you pushed, and lock it in place.
- Grip the disc with both hands and push away from you to enter idle mode again.

Spin:

- Perform a swipe, then make a circular motion with your hand. The crescent shape will unlock and start spinning.
- Grip the disc with both hands and push away from you to enter idle mode again.

Setup:

- Grip the disc with both hands and push away from you. The top and bottom light will go out.
- Rotate the disc clockwise or counterclockwise 90 degrees to change the color.
- Rotate the disc a full 180 degrees clockwise or counterclockwise to change the second color.
- Double tap the disc while in setup to switch the suit between On and EQ modes.
- Push the disc away from you again to exit setup.

