



# KEEP R9, R14 and R21 OPEN


## MCU

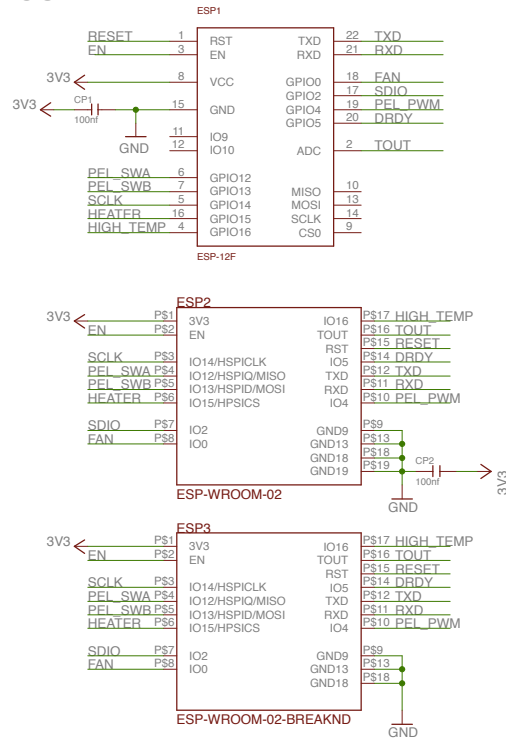


## TEMP\_SENSE

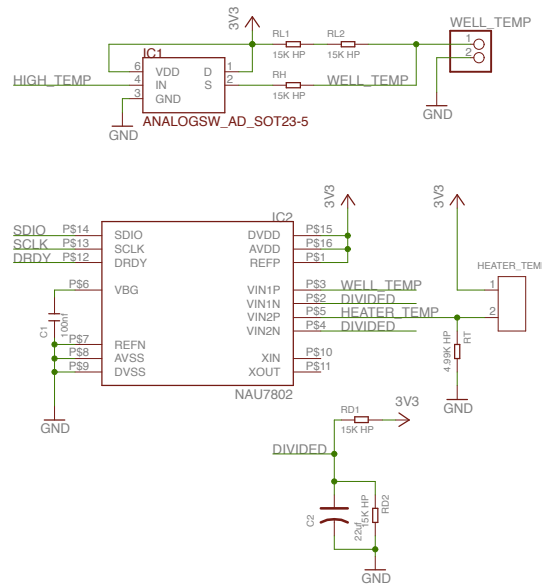


## PELTIER\_CTRL

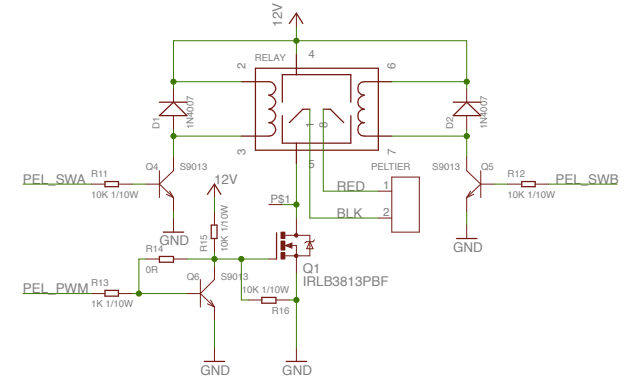



## HEATER\_AND\_FAN\_CONTROL

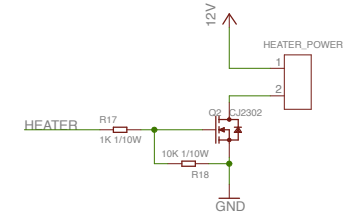

## CONFIG

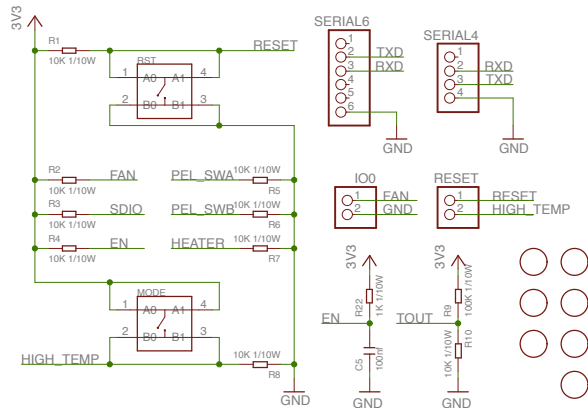

## POWER

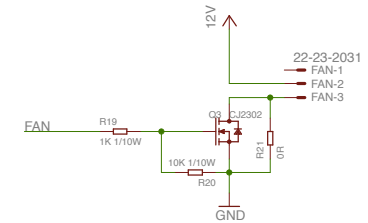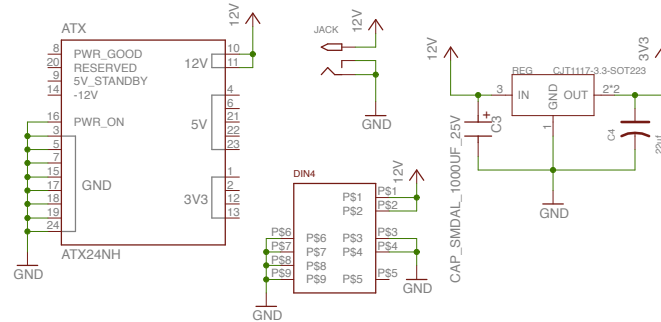

Diff from ver2.1:  
1. Serial doesn't power.  
2. Rename MODE to TOUT.  
3. Replace R14 from 1K to 0K.  
4. Stable EN

NinjaPCB\_ver2.2

2018/07/24 11:16

Sheet: 1/1