



NinjaPCB_ver2.2
2018/07/23 15:35
Sheet: 1/1

Diff from ver2.1:

1. Serial doesn't power
2. Rename MODE to TOUT
3. Replace R14 from 1K to 0K
4. Stable EN