

SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this appliance.

These instructions are also available on our website. Please visit [www.hot-europe.com](http://www.hot-europe.com)



**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

**WARNING:** When the hair dryer is used in a bathroom, unplug it after use since the proximity to water presents a hazard even when the hair dryer is switched OFF.

For additional protection the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

This appliance can be used by children aged from 8 years and above, and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**WARNING:** Do not leave the appliance unattended. Do not allow bare skin or the eyes to come into contact with any heated surface on the appliance when in use. Do not place the appliance on any heat-sensitive surfaces when hot or plugged into the mains. Always unplug the appliance when not in use.

**WARNING:** Do not block the air inlet or outlet during use. When using the appliance, care must be taken to prevent hair entering the air inlet opening. The air outlet opening of this appliance will become hot during use, avoid touching the outlet or any accessories attached to the outlet.

**NOTE:** Use on towel dried hair only.

**WARNING:** Should this product malfunction, do not attempt to repair it. This appliance has no user-serviceable parts or components.

This product carries the CE mark and is manufactured in conformity with the Electromagnetic Directive 2014/30/EU, the Low Voltage Directive 2014/35/EU, the ROHS Directive 2011/65/EU and the Energy and using Products Directive 2009/125/EC.

# HAIR – CARE

## It,s Your Time To Shine

### GUARANTEE AND SERVICE SECTION:

Your Revlon appliance is guaranteed against defects under normal use for two years from the original date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, within the warranty period, it will be replaced. Please retain your receipt or other proof of purchase for all claims within the warranty period. The guarantee becomes void if the proof of purchase is not presented. For all claims within the warranty period please contact our support team. This appliance complies with EU legislation 2012/19/EU on end of life recycling. Products showing the 'Crossed Through' wheeled bin symbol on either the rating label, gift box or instructions must be recycled separately from household waste at the end of their useful life. This guarantee does not cover defects which have occurred due to misuse, abuse, or are caused by failure to follow the instructions contained within this manual. This does not affect your consumer statutory rights. The manufacturing date is given by the date of purchase. The appliance is not a household product. The first local importer shall be responsible for returning the product to the manufacturer for recycling. The first local importer shall be responsible for returning the product to the manufacturer for recycling. For further help and advice on where to take your appliance for recycling. For product support, please visit us at:

[www.hot-europe.com/support](http://www.hot-europe.com/support)

Or contact us by phone:

**+44 (0) 115 965 7430**

For product information, visit us at:

[www.revlonbeautycare.com](http://www.revlonbeautycare.com)

120/220-240V ~ 50-60Hz 1200W

The REVLON® trademark is used under license from Revlon, by Helen of Troy Limited.

Made in China.

European Headquarters

Kaz Europe Sàrl, Place Chauderon 18, CH-1003 Lausanne, Switzerland.

HOT (UK) Ltd, 1-4 Jessops Riverside, 800 Brightside Lane, Sheffield, S9 2RX United Kingdom.

©2018 Revlon. All rights reserved. (AW011090)

AW ISSUE No#: 1 Date: 09.21.17

# DRY&GO

## TRAVEL HAIR DRYER SET

RVDR5305PKUK



# OPERATING INSTRUCTIONS

This appliance is intended for household use only.  
The appearance of this appliance may differ from the illustration.  
Only use this appliance for its intended purpose, as described in this manual.  
Do not use attachments not recommended by the manufacturer.

**OVERHEATING CUT-OFF** - This appliance is equipped with a thermostat that will cycle OFF (0) should the heat of the dryer exceed the optimum drying level, due to partially blocked air inlet or outlet openings. In the event that the appliance stops, turn the appliance OFF (0) and allow it to cool down. Once the appliance cools, the thermostat will automatically reset and usage may resume.

**HEAT AND SPEED CONTROL** - High temperatures and speed settings are ideal for fast drying or rough drying before styling; low temperatures and speed settings are ideal for styling.

**SMOOTHING CONCENTRATOR** - Channels airflow for smooth, manageable drying. Do not concentrate the airflow on anyone area for an extended period of time. If you desire to dry your hair quickly, remove the attachment and set the dryer to a high heat and speed setting. Before drying thick hair with this attachment, use the dryer on the high setting to remove excess moisture.

**VOLUMISING DIFFUSER** - Remove the smoothing concentrator before attaching to the dryer. Use to create volume, lift waves and enhance curls.  
CAUTION: The diffuser should only be used on the low heat/speed setting ( I ).

## STYLING

- Always towel-dry hair to remove excess water and smooth it with a comb or brush to untangle. Styling hair will be faster if it is slightly damp, not wet.
- Plug the appliance into an electrical outlet and adjust the switch to the selected setting. Use the HIGH (II) setting on thick or coarse hair and the LOW (I) setting on fine or thin hair. Circulate airflow through the hair. Do not concentrate airflow on any one area for long period of time.
- As soon as hair is almost completely dry, lower the heat/speed setting and use a styling brush to shape the hair.
- Turn the appliance off when styling is complete. Allow the unit to cool completely before storing.

**DUAL VOLTAGE SELECTOR** - Confirm the necessary voltage required for using this hair dryer. Most countries will require the hair dryer to be set at the 230-volt position. In the U.S.A., set the hair dryer to the 120-volt position. To change voltage, the hair dryer should not be connected to electrical outlet. The switch should be in the OFF (0) position. Use a small screwdriver or similar instrument to turn the voltage selector to the appropriate voltage. Use an appropriate plug adaptor of the proper configuration for the electrical outlet. **IMPORTANT:** When this dryer is used at the 120-volt position, please make sure the electrical outlet can withstand a load of 16 Ampere (A). Consult an electrician to ascertain this setting.

**HANGING RING** - This dryer features a ring allowing it to be conveniently hung on a hook for easy access.

**CLEANING** - Always unplug the appliance from the mains after use and allow it to cool before cleaning. Wipe the outer surface of the dryer with a slightly moist cloth, then wipe dry. This dryer is a precision-designed professional tool, it must breathe to operate at peak efficiency. Always check that the air inlet is free from lint, hair and other matter. Do not attempt this when the dryer is operating or connected to the electrical outlet.

**STORAGE** - Always unplug when not in use.

Allow the appliance to cool before storing. Always store in a dry location. Do not pull or twist the cord. Do not wrap the cord around the appliance, as this may cause the cord to wear prematurely and break. Regularly check the power cord for wear and damage (particularly where it enters the appliance and the plug).

# FEATURES

- A SMOOTHING CONCENTRATOR
- B AIR INLET - REMOVABLE CAP
- C 2 HEAT/SPEED SETTINGS
- D HANGING RING
- E DUAL VOLTAGE SELECTOR
- F VOLUMISING DIFFUSER
- G TRAVEL ADAPTOR
- H MINI BRUSH

