



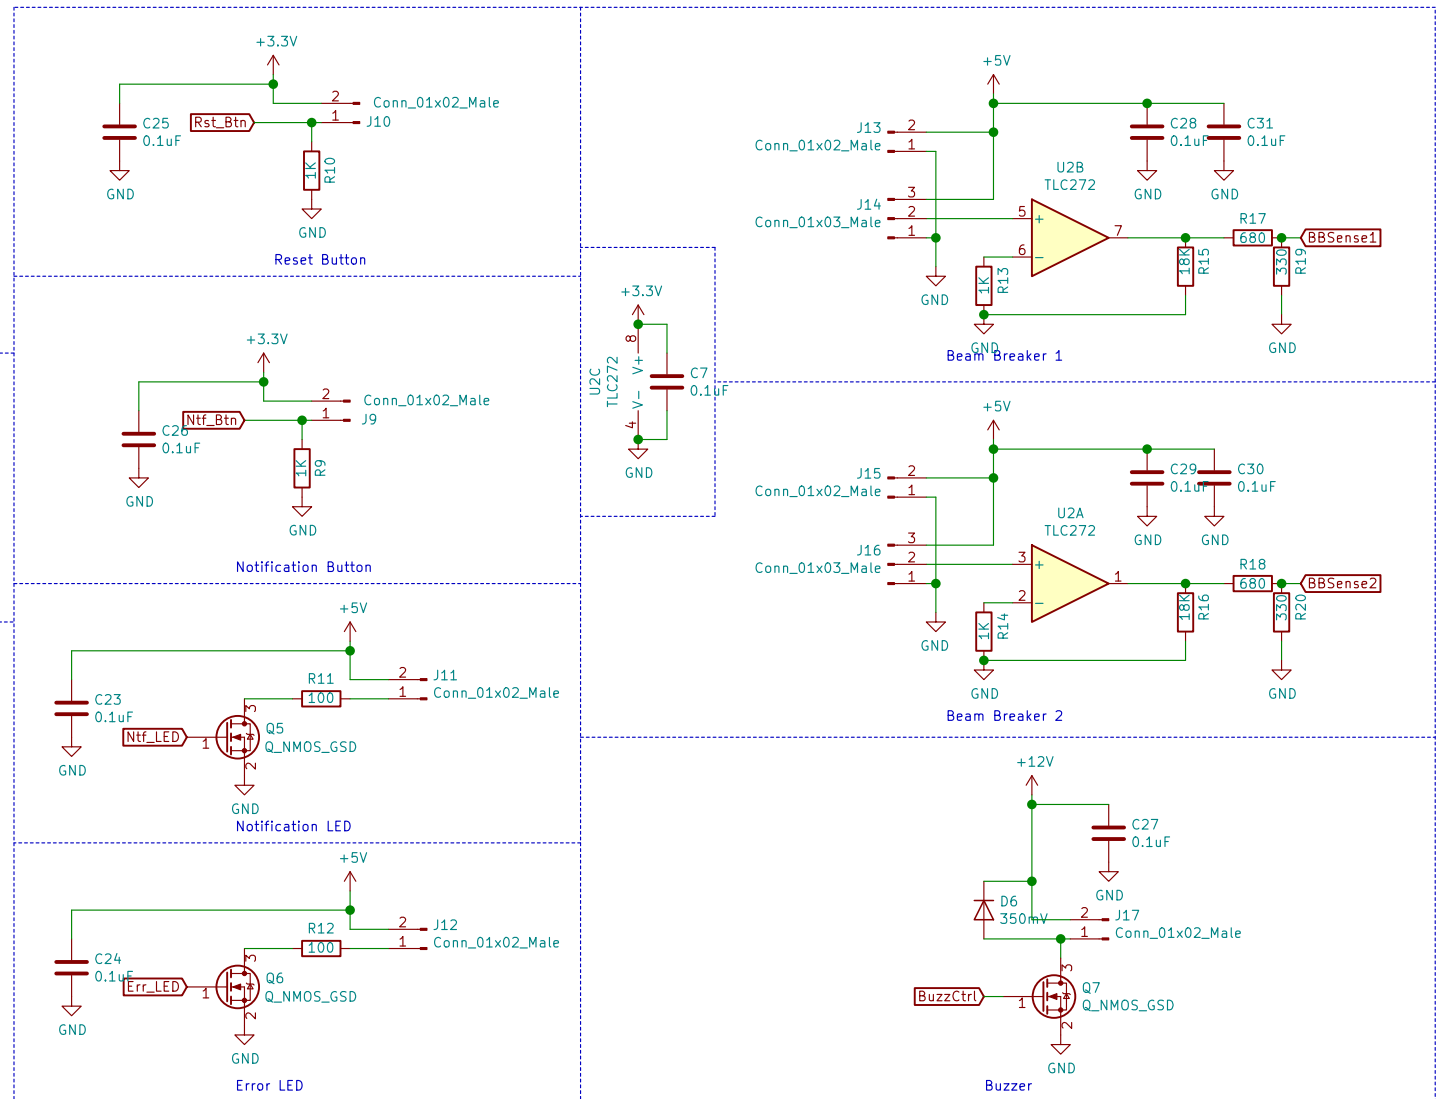


## Peripheral Connections

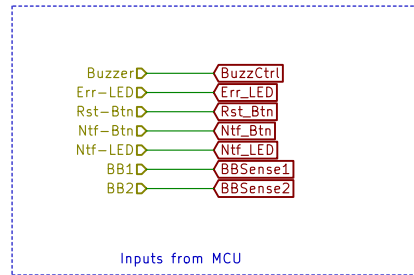

## Stepper Motor Drivers:

If using stepper motor driver configuration, connect the 0 ohm jumper resistors in the "Inputs from MCU" box.

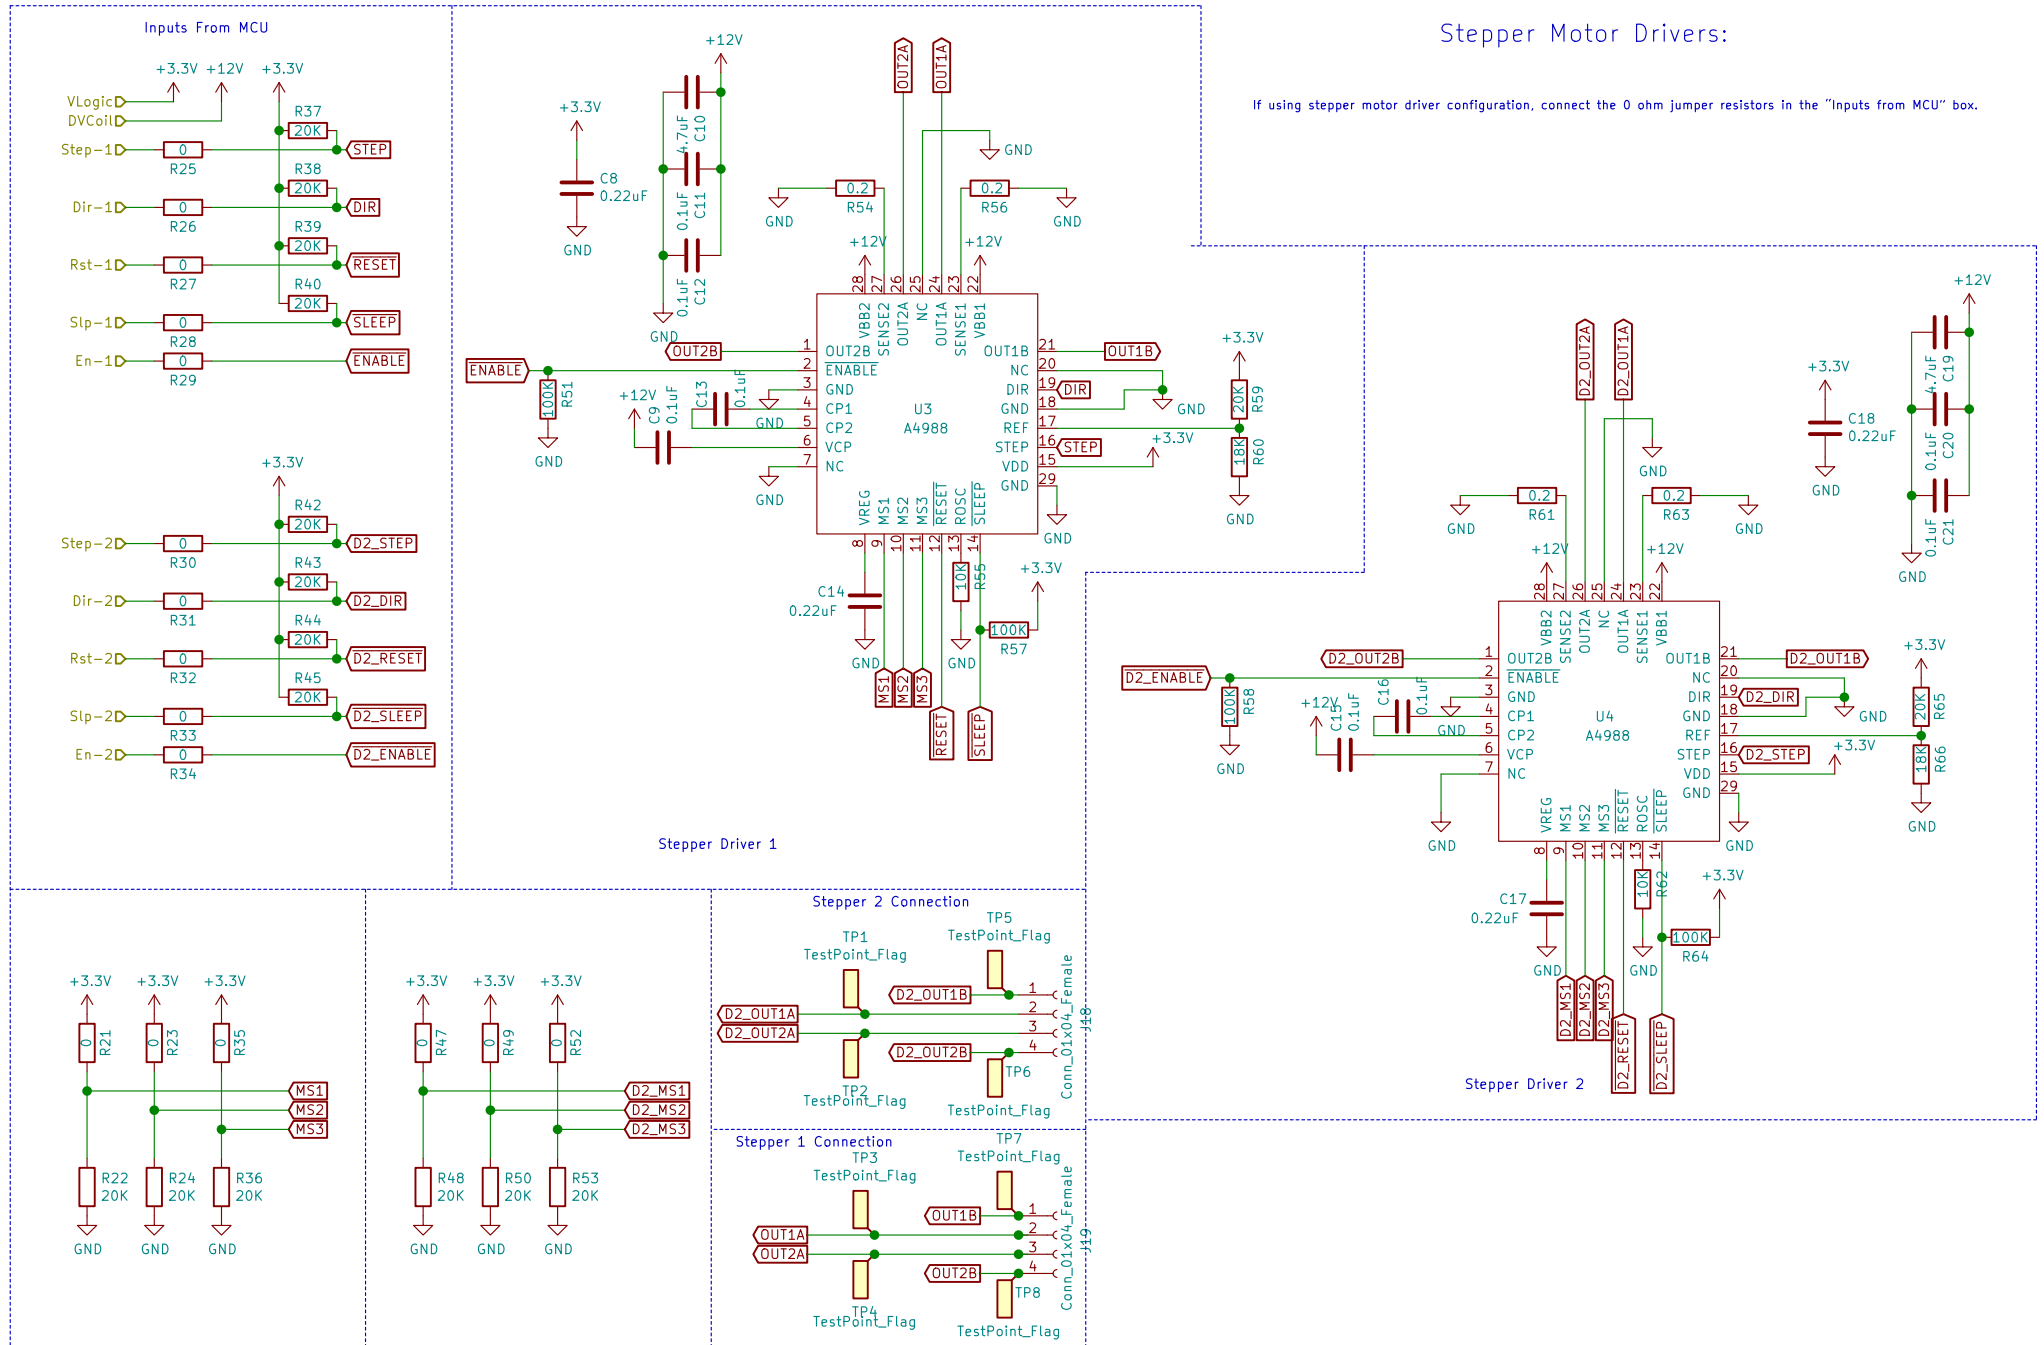

## H Bridge as Motor Drivers:

If using H Bridge motor configuration, connect the 0 ohm jumper resistors in the "Inputs from MCU" box.

