
 


LCD reset option:


1. populate R5 0ohm jumper to control reset with P2.0 (default)
- or
2. populate R1 and C2 to use RC reset

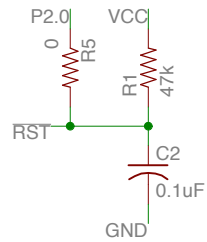


Bypass capacitor



Nokia 1202 LCD


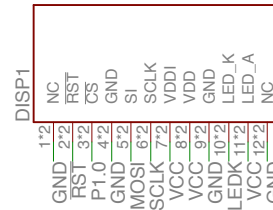


LaunchPad headers

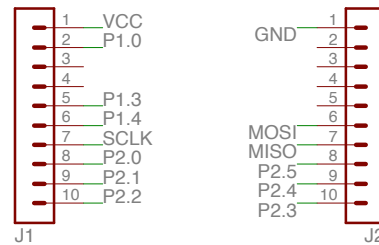


Backlight control option:

1. populate R2, R4, and Q1 to control backlight with P1.4 (default)
- or
2. populate R3 0ohm jumper for always on backlight

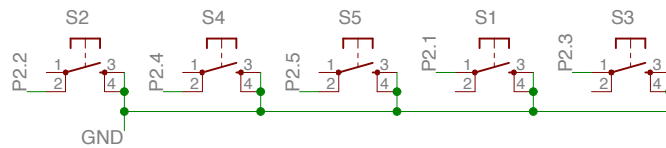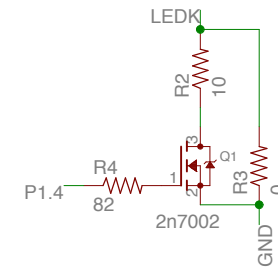

Hardware debounce RCs

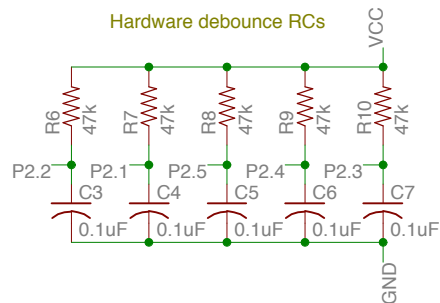

TITLE: Nokia 1202 BoosterPack v4

Document Number:

REV:

Date: 3/21/14 4:44 PM

Sheet: 1/1