


MODEL 117, 156, 169.0/3, 176, 242, 245.2, 246

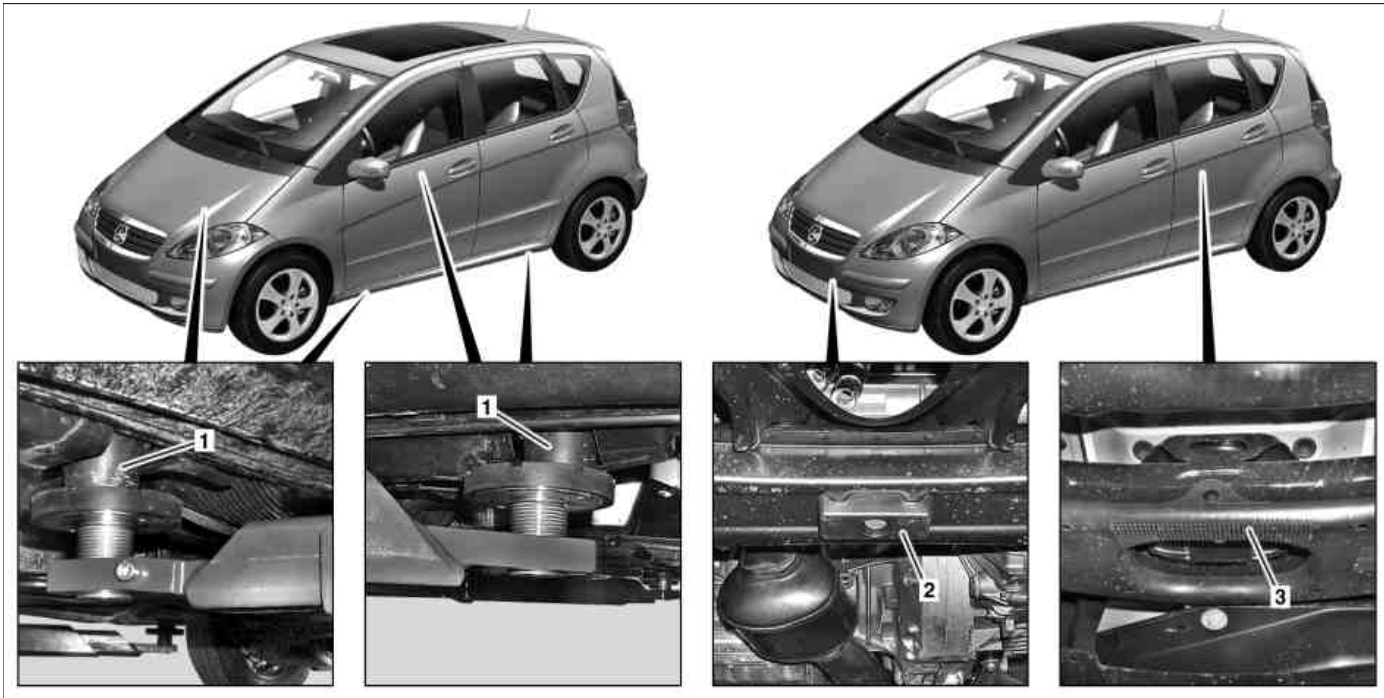

P00.60-2040-09

 
Shown on model 169.0

- 1 Bodylift support points

2 Front axle lift support point

3 Rearaxle lift support point

	Lift/lower vehicle		
⚠ Danger !	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between vehicle lift columns and position the four support plates at the vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
⚠ Danger !	Risk of accident caused by vehicle starting off on its own when jacked up. Risk of injury caused by rotating parts when working on running engine or drive train.	Ensure that jack stands are secure. An authorized person must occupy the driver seat. Wear closed and snug-fitting work clothes. Do not touch hot or rotating parts.	AS00.00-Z-0008-01A
1	Align vehicle between the vehicle lift columns and position the four support plates at the body lift support points (1)		
2	Adapt the support plates of the lifting platform support arms to match the height of the vehicle	i Turn support plates until they contact the body lift support points (1).	
3	Secure the vehicle against tilting and toppling	MODEL 169.0/3, 245.2 MODEL 117, 156, 176, 242, 246 i For example, when removing major assemblies (engine, front axle carrier, axles) or with work during which the vehicle can lose its hold on the support plates of the vehicle lift.	AR00.60-P-0100AK AR00.60-P-0100CW
4	Raise vehicle with vehicle lift	Two-column lift 2.5 - 3.5 t electrohydraulic gotis://H_00.1_01.1	
5	Lower vehicle in reverse order		
	Jack up/lower vehicle		
6	Lift vehicle with inspection pit lift or floor jack	⚠ Only position post of inspection pit lift or floor jack at front axle lift support point (2) or rear axle lift support point (3). Otherwise damage to axles, major assemblies or the body may occur. Trolley jack gotis://H_00.12_01.0	

		Pit jack, hydraulic-pneumatic - over 7.0 t - see 01.0 gotis://H_00.9_02.0	
7	Secure the vehicle against tilting and toppling	 Place jack stands under the respective body lift support points (1). Support stand gotis://H_00.12_13.0	
8	Lower vehicle in reverse order		