

## DE10-Lite Board (MAX10 10M50DAF484C7G) Pin Assignments

### Switches:

|     |         |
|-----|---------|
| SW0 | PIN_C10 |
| SW1 | PIN_C11 |
| SW2 | PIN_D12 |
| SW3 | PIN_C12 |
| SW4 | PIN_A12 |
| SW5 | PIN_B12 |
| SW6 | PIN_A13 |
| SW7 | PIN_A14 |
| SW8 | PIN_B14 |
| SW9 | PIN_F15 |

### LEDs:

|      |         |
|------|---------|
| LED0 | PIN_A8  |
| LED1 | PIN_A9  |
| LED2 | PIN_A10 |
| LED3 | PIN_B10 |
| LED4 | PIN_D13 |
| LED5 | PIN_C13 |
| LED6 | PIN_E14 |
| LED7 | PIN_D14 |
| LED8 | PIN_A11 |
| LED9 | PIN_B11 |

### 7-Segment Indicators:

|          |         |
|----------|---------|
| HEX0[0]  | PIN_C14 |
| HEX0[1]  | PIN_E15 |
| HEX0[2]  | PIN_C15 |
| HEX0[3]  | PIN_C16 |
| HEX0[4]  | PIN_E16 |
| HEX0[5]  | PIN_D17 |
| HEX0[6]  | PIN_C17 |
| HEX1[0]  | PIN_C18 |
| HEX1[1]  | PIN_D18 |
| HEX1[2]  | PIN_E18 |
| HEX1[3]  | PIN_B16 |
| HEX1[4]  | PIN_A17 |
| HEX1[5]  | PIN_A18 |
| HEX1[6]  | PIN_B17 |
| HEX2[0]  | PIN_B20 |
| HEX2[1]  | PIN_A20 |
| HEX2[2]  | PIN_B19 |
| HEX2[3]  | PIN_A21 |
| HEX2[4]  | PIN_B21 |
| HEX2[5]  | PIN_C22 |
| HEX2[6]  | PIN_B22 |
|          |         |
| HEX0[DP] | PIN_D15 |
| HEX1[DP] | PIN_A16 |
| HEX2[DP] | PIN_A19 |

### Push-buttons:

|      |        |
|------|--------|
| KEY0 | PIN_B8 |
| KEY1 | PIN_A7 |

### GPIO Header JP1:

|               |              |
|---------------|--------------|
| Pin 1         | PIN_V10      |
| Pin 2         | PIN_W10      |
| Pin 3         | PIN_V9       |
| Pin 4         | PIN_W9       |
| Pin 37        | PIN_AB3      |
| Pin 38        | PIN_Y3       |
| Pin 39        | PIN_AB2      |
| Pin 40        | PIN_AA2      |
| <b>Pin 29</b> | <b>3.3 V</b> |
| <b>Pin 30</b> | <b>GND</b>   |
| <b>Pin 12</b> | <b>GND</b>   |

### Clock:

|              |         |
|--------------|---------|
| Clock_50 MHz | PIN_P11 |
|--------------|---------|