

Main

Uniquement calibrations
& initialisations

Initialisation
Thread angle

Initialisation
Thread regulation

Initialisation
Thread proximité

Thread angle

Compute angle

Get angle

Get slope

Thread regulation

Mode selection

Regulation

Esquive

Thread proximité

Search for
proximity

Get_prox_alert



