

# Hello Una

This button has been programmed to **cheer you up!**

## You will need:

- This button
- Your laptop
- Your WiFi Network's SSID and password

## Configure your button:

1. Press button until indicator light shines blue.
2. Connect to the Wifi network named **Button ConfigureMe - AAC** with password **1255N1CP**.
3. Browse to the IP Address **http://192.168.0.1**.
4. Select your wireless network.
5. Enter your network's password.
6. Do not change any of the other settings.
7. Agreeing to Amazon's terms of service.
8. Click **Configure**.

## Use your button:

- Press once for a little **cheer-up**.
- Press twice for a bigger **cheer-up**.
- Hold for 1 second for both **cheer-ups**!