
 
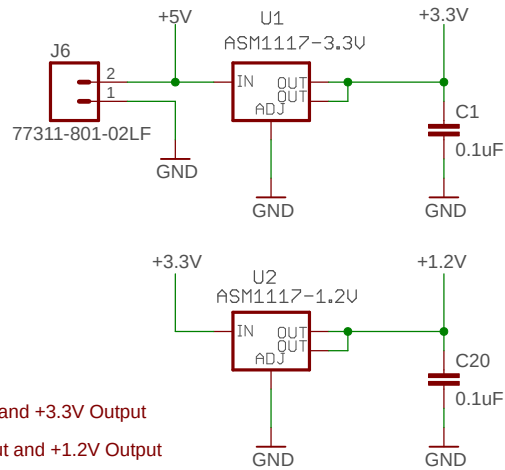




VOLTAGE REGULATORS

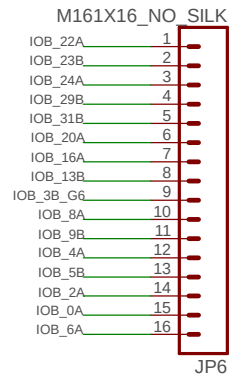

PMOD AND I/O PINS

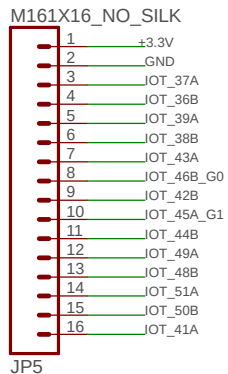


SPI Flash

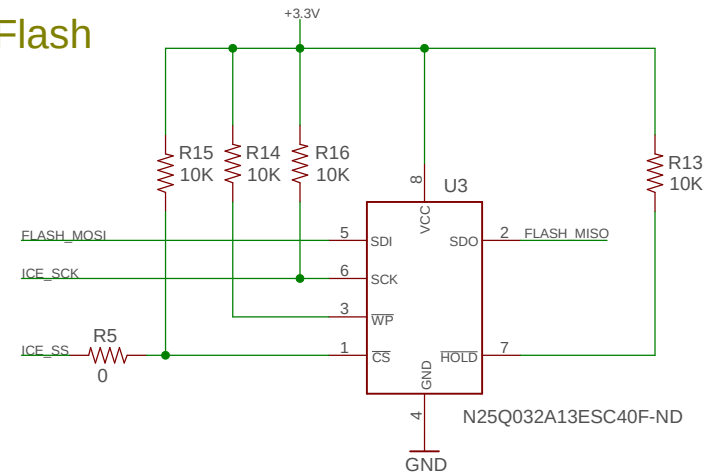

Remove shunt only for Programming iCE.

 Replace shunt for programming Flash and for normal operation.



For programming Flash - Shunt 1,3 and 2,4 (default)

For programming ICE - Shunt 3,4 and 1,2

Voltage Regulators,
SPI Flash and
I/O Pinouts

tinyVision.ai Inc.
upduino_v2.1_release
29-Aug-19 1:22 PM
Sheet: 2/3

