

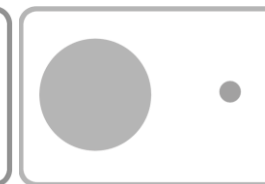
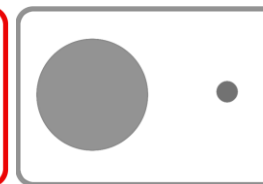


User Guide

Mini Web Radio
MWR

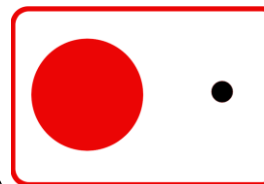

Turn to switch
on and adjust
volume

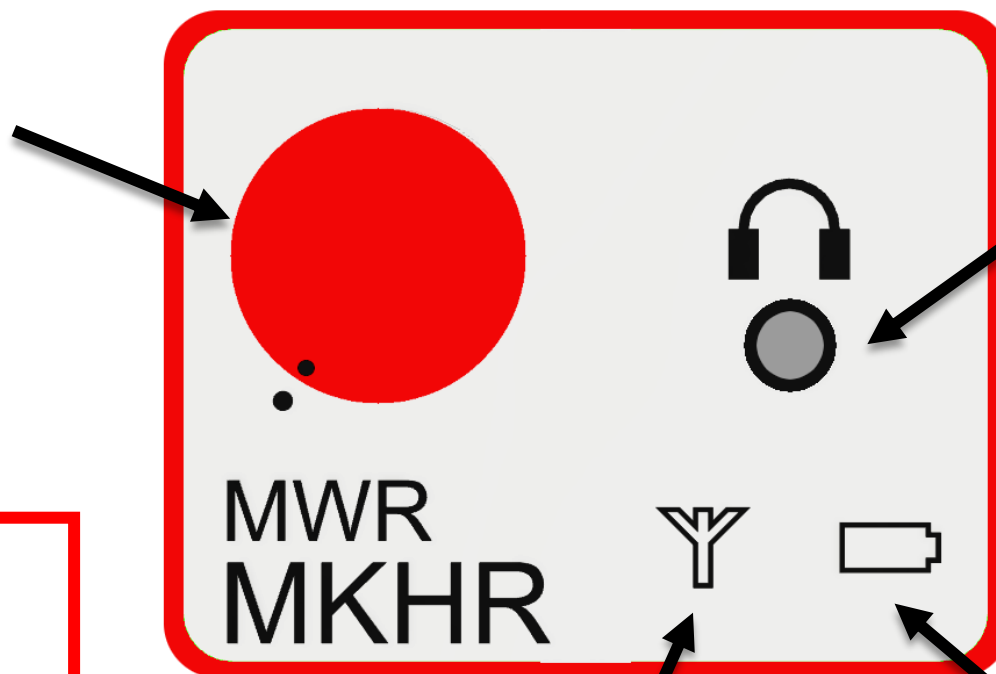


Insert
Headphones


Flashes when
Wireless network
Not Found

Flashes when
battery low

DO NOT

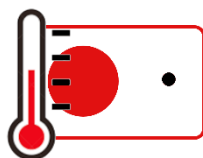

Expose to
Heat

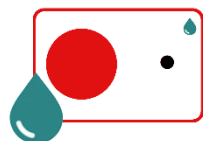

Submerge or
expose to water



Disassemble or
repair