Update the Harp Sound Card's firmware

Version 1.1

Install necessary software

To upload a new firmware, the Harp Sound Card dedicated the **Convert to CSV** is necessary. Below are the necessary links for the installation.

Note: It's recommended to use a computer without National Instruments software previously installed (NI-DAQs, for example).


Download the <u>runtime</u>, install it, and reboot the computer.

Download Convert to CSV and install it:

Update sound card firmware

You would need two .hex files to update the Harp Sound Card because the device has two microcontrollers. One file (with the prefix **SoundCard**) will be used for the interface controller and the other (with prefix **SoundCard.PIC32**) for the sound generator.

Open Convert to CSV, go to Options (1) tab and write the word bootloader (2) in the List:

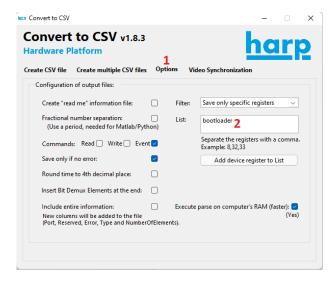

Select the Harp Sound Card's COM port in the **Resource name**: dropdown menu (3) and select the interface controller .hex file (the one with prefix SoundCard) (4).



Click **Update**.

You will be prompted to select the .hex file for the sound generator. Select the file with the prefix **SoundCard.PIC32**.

The firmware update of both microcontrollers will start after you select the second file.

Filipe Carvalho

Email: filipe@neurogears.org

Website: https://neurogears.org

Address: 31 Oval Road, London, NW1 7EA



NeuroGEARS Ltd is a limited company registered in England and Wales.

Company Registration No. 10773335