
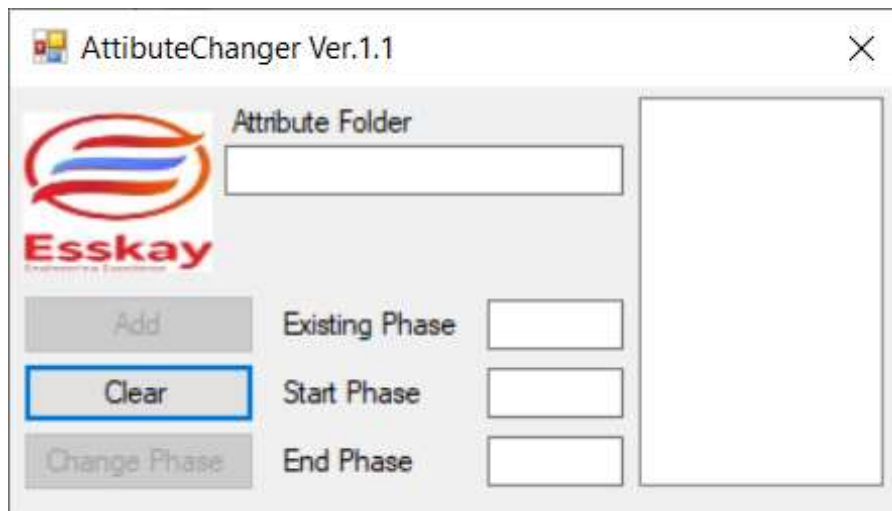


Attribute Changer [Version : 1.1]

Step1: In “%Attribute%” user need to enter the path attribute file location.


Disk (D:) > SK

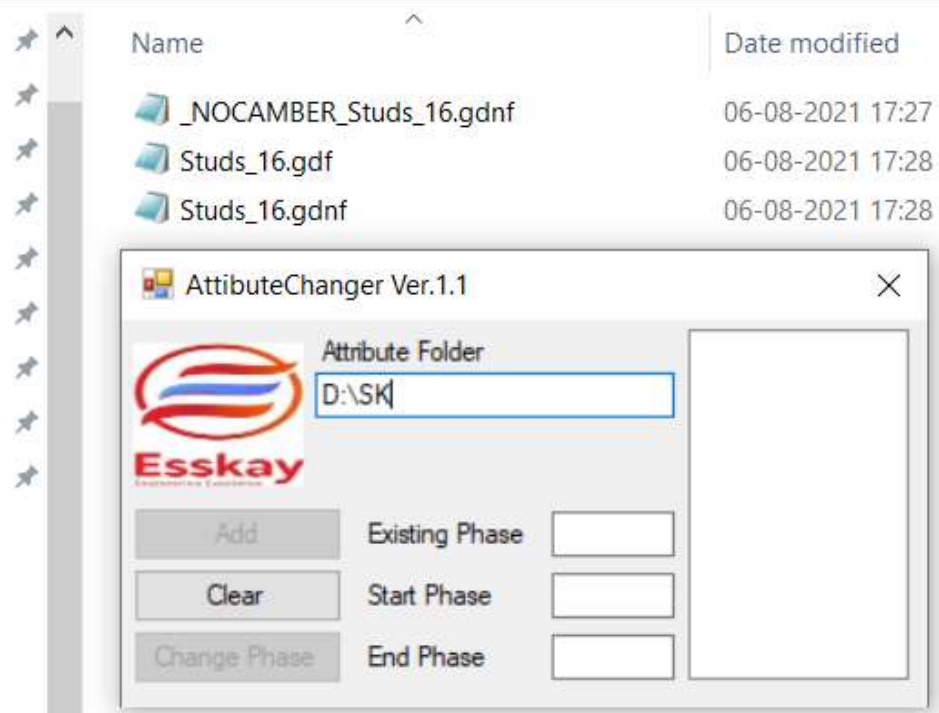


Step2: In “%Phase%” user to enter the existing phase number. User to ensure _%Phase% available in file name else this attribute file won't be processed.

Step3: In “%Start%” user to enter the start number of phase and in “%End%” user to enter the end number of phase


Disk (D:) > SK

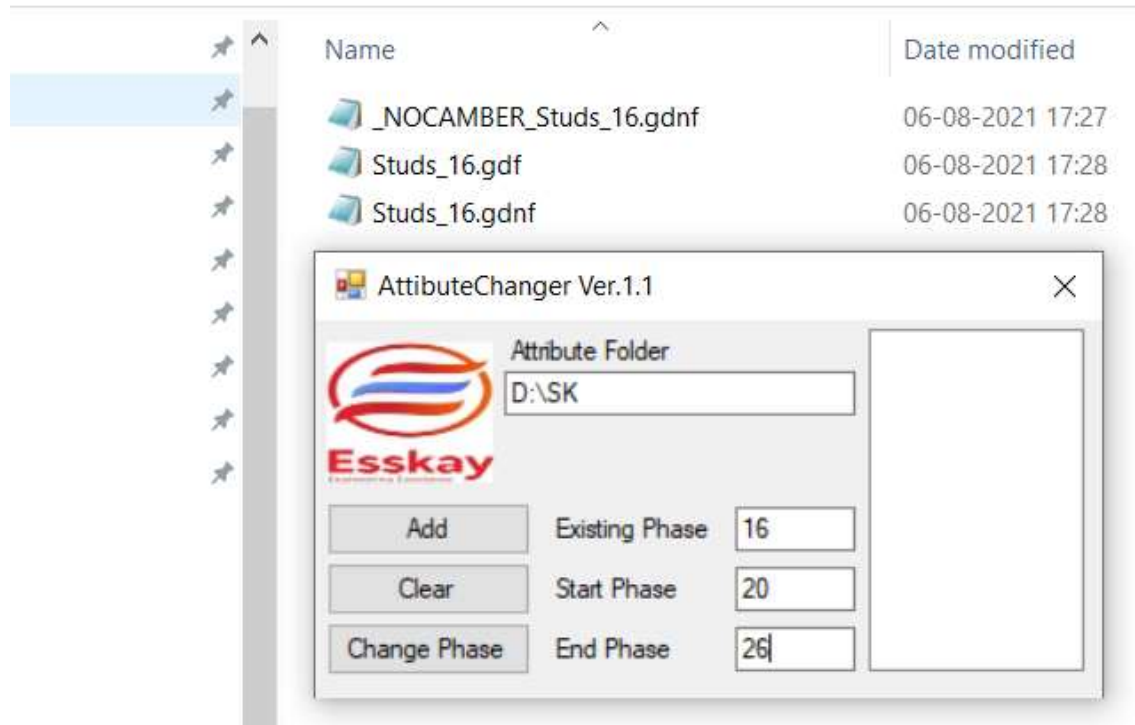

Step4: Click “Add” button which will inform the list of new attribute file to be created.

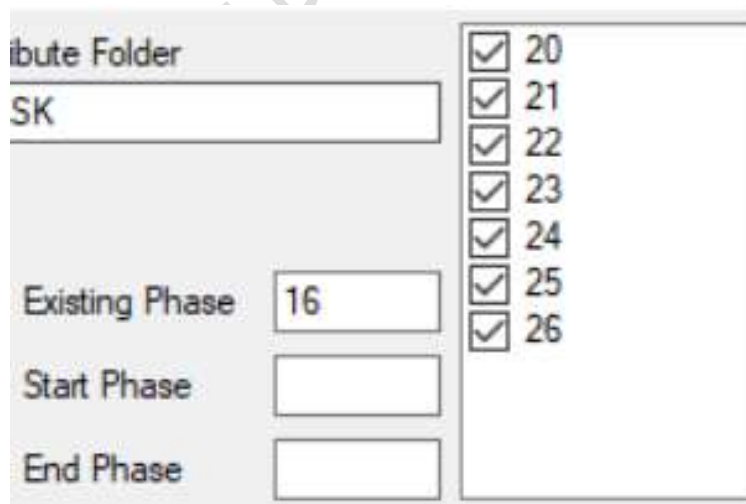

Step5: Click “Change Phase” to get the new attribute with phase number changed.

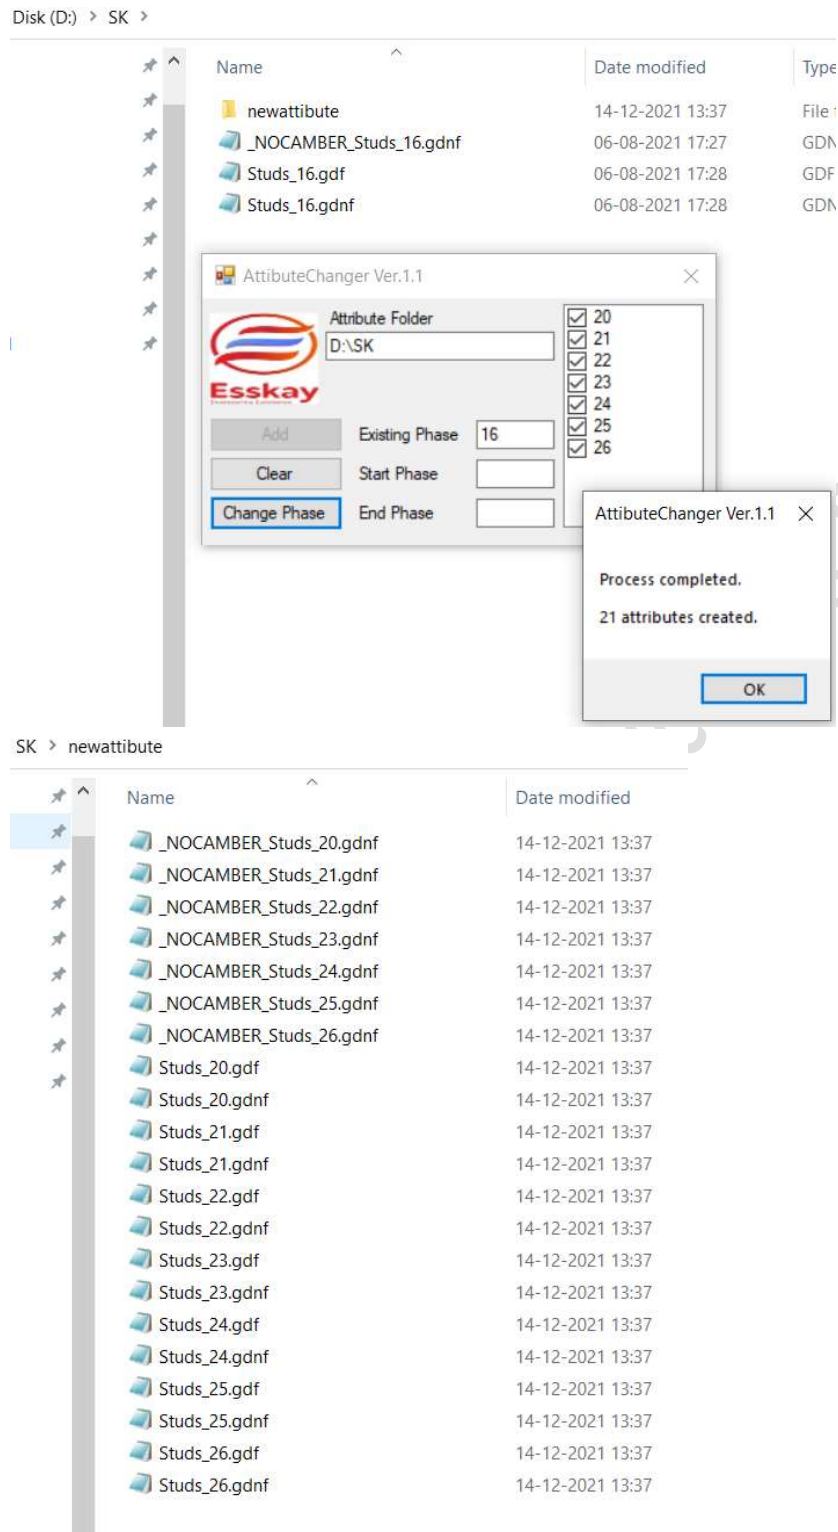

Credits: **Manimaran G.**